

Register NAME	MODBUS Register	Register VALUE	DATA TYPE	DO WRITE
<b>ASCII COMMANDS</b>				
HEART BEAT	ASCII READ COMMAND	#HB<CR> Result: #HB<CR>	ASCII	
	TX	#255,HB<CR>		
	RX	#255,HB<CR>		
Sends an Heartbeat to test the communication				
GET VERSION	ASCII READ COMMAND	#VERSION<CR> Result: #VERSION:<VersionHi>,<VersionMed>,<VersionLo><CR>	ASCII	
	TX	#255,VERSION<CR>		
	RX	#255,VERSION:1.1.0<CR>		
		Actual SW version:1.1.0		
Returns the version number of the module VersionHi: Version number high (1..255) VersionMed: Version number medium (1..255) VersionLo: Version number low (1..255)				
GET TYPE	ASCII READ COMMAND	#TYPE<CR> Result: #TYPE:<Type><CR>	ASCII	
	TX	#255,TYPE<CR>		
	RX	#255,TYPE:RESI-C4-A-64DI60DO16AIOX<CR>		
		Actual module type:RESI-C4-A-64DI60DO16AIOX		
Returns the actual module type				
GET FEATURES	ASCII READ COMMAND	#FTRS<CR> Result: #FTRS:<Type><CR>	ASCII	
	TX	#255,FTRS<CR>		
	RX	#255,FTRS:RESI-C4-A-64DI60DO16AIOX,RS485,DI:64,DO:60,AIOX:16,DOIC:MAX14915<CR>		
		Actual module type:N/A		
		Number of digital inputs:N/A		
		Type of digital inputs:N/A		
Returns the actual module features				
GET OWNER	ASCII READ COMMAND	#OWNER<CR> Result: #OWNER:<Owner><CR>	ASCII	
	TX	#255,OWNER<CR>		
	RX	#255,OWNER:RESI<CR>		
		Actual owner:RESI		
Returns the actual owner of the module				

GET CREATOR	ASCII READ COMMAND	#CREATOR<CR> Result: #CREATOR:<Creator><CR>	ASCII	
	TX	#255,CREATOR<CR>		
	RX	#255,CREATOR:DI HC SIGL,MSC<CR>		
		Actual creator:DI HC SIGL,MSC		
Returns the actual creator of the module				
GET COPYRIGHT	ASCII READ COMMAND	#COPYRIGHT<CR> Result: #COPYRIGHT:<Copyright><CR>	ASCII	
	TX	#255,COPYRIGHT<CR>		
	RX	#255,COPYRIGHT:2015-24 BY RESI AND DI HC SIGL,MSC WWW.RESI.CC<CR>		
		Actual copyright:2015-24 BY RESI AND DI HC SIGL,MSC WWW.RESI.CC		
Returns the actual copyright of the module				
GET SERIAL NUMBER	ASCII READ COMMAND	#SN<CR> Result: #SN:<Serial><CR>	ASCII	
	TX	#255,SN<CR>		
	RX	#255,SN:39002C000253554637303820<CR>		
		Actual serial number:39002C000253554637303820		
Returns the actual serial number of the module				
SET BOX NAME	ASCII WRITE COMMAND	#SETBOXNAME:<BOXNAME><CR> Result: #OK<CR>	ASCII	YES
	BOXNAME	MYBOX		
	TX	#255,SETBOXNAME:MYBOX<CR>		
	RX	#255,OK<CR>		
Sets a new box name for the controller				
GET BOX NAME	ASCII READ COMMAND	#BOXNAME<CR> Result: #BOXNAME:<BoxName><CR>	ASCII	
	TX	#255,BOXNAME<CR>		
	RX	#255,BOXNAME:MYBOX<CR>		
		Actual box name:MYBOX		
Returns the actual box name of the module. If no box name is defined, the value NONAME is returned				
GET INTERNAL STATUS	ASCII READ COMMAND	#INTSTAT<CR> Result: #INTSTAT:<Status><CR>	ASCII	
	TX	#255,INTSTAT<CR>		
	RX	#255,INTSTAT:I2C1:0,I2C2:0<CR>		
		Actual internal status:I2C1		
Returns the device specific internal status				

GET DIP SWITCH	ASCII READ COMMAND	#GDIP<CR> Result: #GDIP:<DIPSwitchDec>,<DIPSwitchHex><CR>	ASCII	
	TX	#255,GDIP<CR>		
	RX	#255,GDIP:0,0x0<CR>		
		Actual DIP SWITCH settings:00000000		
Returns the actual setting of the Dip switches as decimal number and as hexadecimal number. DIPSwitchDec DIPSwitchHex The current value of the DIP switches: Bit 0: DIP Switch 1 (=0:OFF, =1:ON) Bit 1: DIP Switch 2 (=0:OFF, =1:ON) Bit 2: DIP Switch 3 (=0:OFF, =1:ON) Bit 3: DIP Switch 4 (=0:OFF, =1:ON) Bit 4: DIP Switch 5 (=0:OFF, =1:ON) Bit 5: DIP Switch 6 (=0:OFF, =1:ON) Bit 6: DIP Switch 7(=0:OFF, =1:ON) Bit 7: DIP Switch 8 (=0:OFF, =1:ON)				
<b>SYSTEM COMMANDS</b>				
RESET	ASCII WRITE COMMAND	#RST<CR> Result: #OK<CR>	ASCII	NO
	TX	#255,RST<CR>		
	RX	N/A		
Executes a software reset (Reboot) of the module. Be aware that you will lose all serial interfaces in USB!!!				
FACTORY RESET	ASCII WRITE COMMAND	#FRST<CR> Result: #OK<CR>	ASCII	NO
	TX	#255,FRST<CR>		
	RX	N/A		
Executes a factory reset of the module				
WATCHDOG TIMER	ASCII WRITE COMMAND	#WD:<WDTIME><CR> Result: #OK<CR>	ASCII	YES
	WDTIME	0		
	TX	#255,WD:0<CR>		
	RX	#255,OK<CR>		
Enables or disables the WATCHDOG Timer for the Raspberry Pi module. WDTIME: 1..3600000: Time for Watchdog in Milliseconds (Maximum 60 Minutes) =0: No Watchdog is generated HINT: The Watchdog is internally handled every 10ms, so every value below 10 will reset immediately the Raspberry Pi computer.				
SET IO WATCHDOG TIMER	ASCII WRITE COMMAND	#SIOWATCHDOG:<IOWDTIME><CR> Result: #OK<CR>	ASCII	YES
	IOWDTIME	0		
	TX	#255,SIOWATCHDOG:0<CR>		

	RX	#255,OK<CR>		
Sets a new time for the internal IO WATCHDOG Timer. <IOWDTIME> is a time in 100ms. =0: No IO Watchdog is used HINT: The Watchdog is internally handled every 100ms, if the Timer reaches 0, all internal IOS will be set to a preconfigured state. Every ASCII command or MODBUS request will reset this timer.				
GET IO WATCHDOG TIMER	ASCII READ COMMAND	#GIOWATCHDOG<CR> Result: #GIOWATCHDOG::<IOWDTIME><CR>	ASCII	
	TX	#255,GIOWATCHDOG<CR>		
	RX	#255,GIOWATCHDOG:0,0x0<CR>		
Returns the actual time for the internal IO WATCHDOG Timer. <IOWDTIME> is a time in 100ms. =0: No IO Watchdog is used HINT: The Watchdog is internally handled every 100ms, if the Timer reaches 0, all internal IOS will be set to a preconfigured state. Every ASCII command or MODBUS request will reset this timer.				
<b>CPU PARAMETERS</b>				
GET CPU VOLTAGE	ASCII READ COMMAND	#GCPUTEMP<CR> Result: #GCPUTEMP:<CPUTemp><CR>	ASCII	
	TX	#255,GCPUTEMP<CR>		
	RX	#255,GCPUTEMP:41.4092<CR>		
		Actual internal temperature of CPU:41.4092°C		
Current internal temperature of CPU in ° Celsius.				
GET CPU VOLTAGE	ASCII READ COMMAND	#GCPUVOLT<CR> Result: #GCPUVOLT:<CPUVoltage><CR>	ASCII	
	TX	#255,GCPUVOLT<CR>		
	RX	#255,GCPUVOLT:3.3453<CR>		
		Actual supply voltage of CPU:3.3453V		
Current internal supply voltage of CPU in Volt.				
GET CPU BACKUP	ASCII READ COMMAND	#GCPUBACK<CR> Result: #GCPUBACK:<CPUBackupVoltage><CR>	ASCII	
	TX	#255,GCPUBACK<CR>		
	RX	#255,GCPUBACK:3.1871<CR>		
		Actual backup voltage of CPU for RTC:3.1871V		
Current internal backup voltage of CPU for the RTC in Volt.				

Register NAME	MODBUS Register	Register VALUE	DATA TYPE	DO WRITE
<b>ASCII COMMANDS:REAL TIME CLOCK</b>				
GET REAL TIME CLOCK	ASCII READ COMMAND	#GRTC<CR> Result: #GRTC:YMD,<YEAR>,<MONTH>,<DAY>,HMS,<HOUR>,<MINUTE>,<SECOND>,<WEEKDAY> ,DOK,<DATEOK>,TOK,<TIMEOK><CR>	ASCII	
	TX	#255,GRTC<CR>		
	RX	#255,GRTC:YMD,24,1,5,HMS,15,34,47,FRI,DOK,1,TOK,1<CR>		
		Actual date DD.MM.YYYY:5.1.2024		
		Actual time HH.MM.SS (24h):15:34:47		
		Actual Weekday:FRI		
		Battery buffered date is ok:YES		
		Battery buffered time is ok:YES		
Shows current RTC time of battery backup RTC on module				
<b>ASCII COMMANDS:REAL TIME CLOCK</b>				
SET REAL TIME CLOCK	ASCII WRITE COMMAND	#SRTC:YMD,<YEAR>,<MONTH>,<DAY>,HMS,<HOUR>,<MINUTE>,<SECOND>,<WEEKDAY><CR> Result: #OK<CR>	ASCII	YES
	YEAR	2024		
	MONTH	04		
	DAY	13		
	HOUR	18		
	MINUTE	34		
	SECOND	40		
	WEEKDAY	SAT		
	TX	#255,SRTC:YMD,24,04,13,HMS,18,34,40,SAT<CR>		
	RX	#255,OK<CR>		
Executes a software reset (Reboot) of the module.				

Register NAME	MODBUS Register	Register VALUE	DATA TYPE	DO WRITE
<b>ASCII COMMANDS:FRAM</b>				
GET FRAMSIZE	ASCII READ COMMAND	#GFRAMSIZE <CR> Result: #GFRAMSIZE:<FRAMType>,<FRAMSize>,<UsedSizeDEC>,<UsedSizeHEX> <CR>	ASCII	
	TX	#255,GFRAMSIZE <CR>		
	RX	#255,GFRAMSIZE:FM25L16B_G,2kB,210,0xD2 <CR>		
Reads the actual type and size of the used FRAM. The <UsedSize> describes the internal used space in bytes of the FRAM				
<b>ASCII COMMANDS:FRAM</b>				
GET FRAM16	ASCII READ COMMAND	#GFRAM16:<INDEX> <CR> Result: #GFRAM16:<INDEXDEC>,<VALUEDEC>,<INDEXHEX>,<VALUEHEX> <CR> or #GFRAM16:<INDEXDEC>,<ERR>,<INDEXHEX>,<ERR> <CR>	ASCII	
	INDEX	350		
	TX	#255,GFRAM16:350 <CR>		
	RX	#255,GFRAM16:350,0,0x15E,0x0 <CR>		
		FRAM Index in bytes:350		
		FRAM Value in decimal:0		
Reads the actual UINT16 value (2 bytes) of FRAM memory <INDEX>. <INDEX> is a BYTE index in the FRAM strogae starting with 0.				
GET FRAM32	ASCII READ COMMAND	#GFRAM32:<INDEX> <CR> Result: #GFRAM32:<INDEXDEC>,<VALUEDEC>,<INDEXHEX>,<VALUEHEX> <CR> or #GFRAM32:<INDEXDEC>,<ERR>,<INDEXHEX>,<ERR> <CR>	ASCII	
	INDEX	350		
	TX	#255,GFRAM32:350 <CR>		
	RX	#255,GFRAM32:350,0,0x15E,0x0 <CR>		
		FRAM Index in bytes:350		
		FRAM Value in decimal:0		
Reads the actual UINT32 value 4 bytes) of FRAM memory <INDEX>. <INDEX> is a BYTE index in the FRAM strogae starting with 0.				
GET FRAMDBL	ASCII READ COMMAND	#GFRAMDBL:<INDEX> <CR> Result: #GFRAMDBL:<INDEXDEC>,<VALUEDBL>,<INDEXHEX>,<VALUEDBL> <CR> or #GFRAMDBL:<INDEXDEC>,<ERR>,<INDEXHEX>,<ERR> <CR>	ASCII	
	INDEX	400		
	TX	#255,GFRAMDBL:400 <CR>		
	RX	#255,GFRAMDBL:400,0,0x190,0 <CR>		
		FRAM Index in bytes:400		
		FRAM Value in decimal:0		
Reads the actual DOUBLE value 8 bytes) of FRAM memory <INDEX>. <INDEX> is a BYTE index in the FRAM strogae starting with 0.				
<b>ASCII COMMANDS:FRAM</b>				

SET FRAM16	ASCII WRITE COMMAND	#SFRAM16:<INDEX>,<VALUE><CR> Result: #SFRAM16:OK<CR> or #SFRAM16:ERR<CR>	ASCII	YES
	INDEX	350		
	VALUE	1234		
	TX	#255,SFRAM16:350,1234<CR>		
	RX	#255,SFRAM16:OK<CR>		
Writes a new UINT16 value (2 byte) into FRAM memory <INDEX>. <INDEX> is a BYTE index in the FRAM strogae starting with 0.				
SET FRAM32	ASCII WRITE COMMAND	#SFRAM32:<INDEX>,<VALUE><CR> Result: #SFRAM32:OK<CR> or #SFRAM32:ERR<CR>	ASCII	YES
	INDEX	350		
	VALUE	123456		
	TX	#255,SFRAM32:350,123456<CR>		
	RX	#255,SFRAM32:OK<CR>		
Writes a new UINT32 value (4 byte) into FRAM memory <INDEX>. <INDEX> is a BYTE index in the FRAM strogae starting with 0.				
SET FRAMDBL	ASCII WRITE COMMAND	#SFRAMDBL:<INDEX>,<DOUBLEVALUE><CR> Result: #SFRAMDBL:OK<CR> or #SERAMDBL:ERR<CR>	ASCII	YES
	INDEX	400		
	DOUBLEVALUE	3,1415926		
	TX	#255,SFRAMDBL:400,3.1415926<CR>		
	RX	#255,SFRAMDBL:OK<CR>		
Writes a new DOUBLE value (8 byte) into FRAM memory <INDEX>. <INDEX> is a BYTE index in the FRAM strogae starting with 0.				

Register NAME	MODBUS Register	Register VALUE	DATA TYPE	DO WRITE
<b>LED STATUS:LED1:GREEN</b>				
GET LED1	ASCII READ COMMAND	#GLED1<CR> Result: #GLED1:<LEDMoDe>,<LEDStateDec>,<LEDStateHex><CR>	ASCII	
	TX	#255,GLED1<CR>		
	RX	#255,GLED1:OFF,0,0x0<CR>		
		Actual LED state:OFF LED ist currently 0		
Returns the actual state of the LED1:GREEN on the cover of module				
<b>LED COMMANDS:LED1:GREEN</b>				
SET LED1 OFF	ASCII WRITE COMMAND	#SL1OFF<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL1OFF<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED1:GREEN on the cover of module to OFF				
SET LED1 ON	ASCII WRITE COMMAND	#SL1ON<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL1ON<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED1:GREEN on the cover of module to ON				
SET LED1 INVERT	ASCII WRITE COMMAND	#SL1INV<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL1INV<CR>		
	RX	#255,OK<CR>		
Inverts the current state of the LED1:GREEN on the cover of module from ON to OFF or from OFF to ON				
SET LED1 PULSE	ASCII WRITE COMMAND	#SL1PULSE:<PULSETIME><CR> Result: #OK<CR>	ASCII	YES
	PULSETIME	1000		
	TX	#255,SL1PULSE:1000<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED1:GREEN on the cover of module to PULSE and defines the one time pulse duration in Milliseconds between 1 and 60000				
SET LED1 BLINK	ASCII WRITE COMMAND	#SL1BLINK:<BLINKTIME><CR> Result: #OK<CR>	ASCII	YES
	BLINKTIME	1000		
	TX	#255,SL1BLINK:1000<CR>		
	RX	#255,OK<CR>		



Sets the current state of the LED1:GREEN on the cover of module to PULSE and defines the one time pulse duration in Milliseconds between 1 and 60000

SET LED1 FLASH	ASCII WRITE COMMAND	#SL1FLASH:<ONTIME>,<OFFTIME><CR> Result: #OK<CR>	ASCII	YES
	ONTIME	200		
	OFFTIME	3000		
	TX	#255,SL1FLASH:200,3000<CR>		
	RX	#255,OK<CR>		

Sets the current state of the LED1:GREEN on the cover of module to FLASH and defines the on and off intervals in Milliseconds between 20 and 600000

Register NAME	MODBUS Register	Register VALUE	DATA TYPE	DO WRITE
<b>LED STATUS:LED2:WHITE</b>				
GET LED2	ASCII READ COMMAND	#GLED2<CR> Result: #GLED2:<LEDMode>,<LEDStateDec>,<LEDStateHex><CR>	ASCII	
	TX	#255,GLED2<CR>		
	RX	#255,GLED2:BLINK,0,0x0<CR>		
		Actual LED state:BLINK LED ist currently 0		
Returns the actual state of the LED2:WHITE on the cover of module				
<b>LED COMMANDS:LED2:WHITE</b>				
SET LED2 OFF	ASCII WRITE COMMAND	#SL2OFF<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL2OFF<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED2:WHITE on the cover of module to OFF				
SET LED2 ON	ASCII WRITE COMMAND	#SL2ON<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL2ON<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED2:WHITE on the cover of module to ON				
SET LED2 INVERT	ASCII WRITE COMMAND	#SL2INV<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL2INV<CR>		
	RX	#255,OK<CR>		
Inverts the current state of the LED2:WHITE on the cover of module from ON to OFF or from OFF to ON				
SET LED2 PULSE	ASCII WRITE COMMAND	#SL2PULSE:<PULSETIME><CR> Result: #OK<CR>	ASCII	YES
	PULSETIME	1000		
	TX	#255,SL2PULSE:1000<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED2:WHITE on the cover of module to PULSE and defines the one time pulse duration in Milliseconds between 1 and 60000				
SET LED2 BLINK	ASCII WRITE COMMAND	#SL2BLINK:<BLINKTIME><CR> Result: #OK<CR>	ASCII	YES
	BLINKTIME	1000		
	TX	#255,SL2BLINK:1000<CR>		
	RX	#255,OK<CR>		

Sets the current state of the LED2:WHITE on the cover of module to PULSE and defines the one time pulse duration in Milliseconds between 1 and 60000

SET LED2 FLASH	ASCII WRITE COMMAND	#SL2FLASH:<ONTIME>,<OFFTIME><CR> Result: #OK<CR>	ASCII	YES
	ONTIME	200		
	OFFTIME	3000		
	TX	#255,SL2FLASH:200,3000<CR>		
	RX	#255,OK<CR>		

Sets the current state of the LED2:WHITE on the cover of module to FLASH and defines the on and off intervals in Milliseconds between 20 and 600000

Register NAME	MODBUS Register	Register VALUE	DATA TYPE	DO WRITE
<b>LED STATUS:LED3:RED</b>				
GET LED3	ASCII READ COMMAND	#GLED3<CR> Result: #GLED3:<LEDMode>,<LEDStateDec>,<LEDStateHex><CR>	ASCII	
	TX	#255,GLED3<CR>		
	RX	#255,GLED3:ON,1,0x1<CR>		
		Actual LED state:ON LED ist currently 1		
Returns the actual state of the LED3:RED on the cover of module				
<b>LED COMMANDS:LED3:RED</b>				
SET LED3 OFF	ASCII WRITE COMMAND	#SL3OFF<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL3OFF<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED3:RED on the cover of module to OFF				
SET LED3 ON	ASCII WRITE COMMAND	#SL3ON<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL3ON<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED3:RED on the cover of module to ON				
SET LED3 INVERT	ASCII WRITE COMMAND	#SL3INV<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL3INV<CR>		
	RX	#255,OK<CR>		
Inverts the current state of the LED3:RED on the cover of module from ON to OFF or from OFF to ON				
SET LED3 PULSE	ASCII WRITE COMMAND	#SL3PULSE:<PULSETIME><CR> Result: #OK<CR>	ASCII	YES
	PULSETIME	1000		
	TX	#255,SL3PULSE:1000<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED3:RED on the cover of module to PULSE and defines the one time pulse duration in Milliseconds between 1 and 60000				
SET LED3 BLINK	ASCII WRITE COMMAND	#SL3BLINK:<BLINKTIME><CR> Result: #OK<CR>	ASCII	YES
	BLINKTIME	1000		
	TX	#255,SL3BLINK:1000<CR>		
	RX	#255,OK<CR>		

Sets the current state of the LED3:RED on the cover of module to PULSE and defines the one time pulse duration in Milliseconds between 1 and 60000

SET LED3 FLASH	ASCII WRITE COMMAND	#SL3FLASH:<ONTIME>,<OFFTIME><CR> Result: #OK<CR>	ASCII	YES
	ONTIME	200		
	OFFTIME	3000		
	TX	#255,SL3FLASH:200,3000<CR>		
	RX	#255,OK<CR>		

Sets the current state of the LED3:RED on the cover of module to FLASH and defines the on and off intervals in Milliseconds between 20 and 600000

Register NAME	MODBUS Register	Register VALUE	DATA TYPE	DO WRITE
<b>LED STATUS:LED4:YELLOW</b>				
GET LED4	ASCII READ COMMAND	#GLED4<CR> Result: #GLED4:<LEDMode>,<LEDStateDec>,<LEDStateHex><CR>	ASCII	
	TX	#255,GLED4<CR>		
	RX	#255,GLED4:OFF,0,0x0<CR>		
		Actual LED state:OFF LED ist currently 0		
Returns the actual state of the LED4:YELLOW on the cover of module				
<b>LED COMMANDS:LED4:YELLOW</b>				
SET LED4 OFF	ASCII WRITE COMMAND	#SL4OFF<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL4OFF<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED4:YELLOW on the cover of module to OFF				
SET LED4 ON	ASCII WRITE COMMAND	#SL4ON<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL4ON<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED4:YELLOW on the cover of module to ON				
SET LED4 INVERT	ASCII WRITE COMMAND	#SL4INV<CR> Result: #OK<CR>	ASCII	YES
	TX	#255,SL4INV<CR>		
	RX	#255,OK<CR>		
Inverts the current state of the LED4:YELLOW on the cover of module from ON to OFF or from OFF to ON				
SET LED4 PULSE	ASCII WRITE COMMAND	#SL4PULSE:<PULSETIME><CR> Result: #OK<CR>	ASCII	YES
	PULSETIME	1000		
	TX	#255,SL4PULSE:1000<CR>		
	RX	#255,OK<CR>		
Sets the current state of the LED4:YELLOW on the cover of module to PULSE and defines the one time pulse duration in Milliseconds between 1 and 60000				
SET LED4 BLINK	ASCII WRITE COMMAND	#SL4BLINK:<BLINKTIME><CR> Result: #OK<CR>	ASCII	YES
	BLINKTIME	1000		
	TX	#255,SL4BLINK:1000<CR>		
	RX	#255,OK<CR>		

Sets the current state of the LED4:YELLOW on the cover of module to PULSE and defines the one time pulse duration in Milliseconds between 1 and 60000

SET LED4 FLASH	ASCII WRITE COMMAND	#SL4FLASH:<ONTIME>,<OFFTIME><CR> Result: #OK<CR>	ASCII	YES
	ONTIME	200		
	OFFTIME	3000		
	TX	#255,SL4FLASH:200,3000<CR>		
	RX	#255,OK<CR>		

Sets the current state of the LED4:YELLOW on the cover of module to FLASH and defines the on and off intervals in Milliseconds between 20 and 600000

Register NAME	MODBUS Register	Register VALUE	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>PRODUCT INFO</b>						
HW_GROUP	3x65201 4x65201 I:65200	50176,0xC400 B:C4 00			UINT16 R/O	
This is the group of hardware of the current product						
HW_TYPE	3x65202 4x65202 I:65201	1,0x0001 B:00 01			UINT16 R/O	
This is the type of hardware of the current product						
SW_VERSION	3x65203 4x65203 I:65202	272,0x0110 B:01 10			UINT16 R/O	
SW VERSION:0.1.0						
This is the current software version of the firmware						
SW_AUTHOR	3x65204 4x65204 I:65203	21321,0x5349 B:53 49			UINT16 R/O	
This is the current software author of the firmware						
MANUFACTURER	3x65205 4x65205 I:65204	1380275017,0x52455349 B:52 45 53 49			UINT32 R/O	
This is the current software author of the firmware						
NUMBER OF DIGITAL INPUTS	3x65207 4x65207 I:65206	0,0x0000 B:00 00			UINT16 R/O	
Number of DIS:0						
This is the current software version of the firmware						
NUMBER OF DIGITAL OUTPUTS	3x65208 4x65208 I:65207	0,0x0000 B:00 00			UINT16 R/O	
Number of DOS:0						
This is the current software version of the firmware						
NUMBER OF ANALOG INPUTS	3x65209 4x65209 I:65208	0,0x0000 B:00 00			UINT16 R/O	
Number of AIS:0						
This is the current software version of the firmware						
NUMBER OF ANALOG OUTPUTS	3x65210 4x65210 I:65209	0,0x0000 B:00 00			UINT16 R/O	
Number of AOS:0						



This is the current software version of the firmware

NUMBER OF UNIVERSAL IN/OUTPUTS	3x65211 4x65211 I:65210	0,0x0000 B:00 00			UINT16 R/O	
		Number of AIOX:0				

This is the current software version of the firmware

NUMBER OF SPECIAL INPUTS	3x65212 4x65212 I:65211	0,0x0000 B:00 00			UINT16 R/O	
		Number of special inputs:0				

This is the current software version of the firmware

NUMBER OF SPECIAL OUTPUTS	3x65213 4x65213 I:65212	0,0x0000 B:00 00			UINT16 R/O	
		Number of special outputs:0				

This is the current software version of the firmware

FEATURE1	3x65214 4x65214 I:65213	2,0x0002 B:00 02			UINT16 R/O	
		Feature:RS485				

This is the feature list of the controller:

0:NONE, 1:RS232, 2:RS485, 3:KNX, 4:DALI, 5:MBUS, 6:LORA, 7:LTE, 8:2xETHERNET

FEATURE2	3x65215 4x65215 I:65214	0,0x0000 B:00 00			UINT16 R/O	
		Feature:NONE				
FEATURE3	3x65216 4x65216 I:65215	0,0x0000 B:00 00			UINT16 R/O	
		Feature:NONE				
FEATURE4	3x65217 4x65217 I:65216	0,0x0000 B:00 00			UINT16 R/O	
		Feature:NONE				
FEATURE5	3x65218 4x65218 I:65217	0,0x0000 B:00 00			UINT16 R/O	
		Feature:NONE				
FEATURE6	3x65219 4x65219 I:65218	0,0x0000 B:00 00			UINT16 R/O	
		Feature:NONE				
FEATURE7	3x65220 4x65220 I:65219	0,0x0000 B:00 00			UINT16 R/O	

		Feature:NONE				
FEATURE8	3x65221 4x65221 l:65220	0,0x0000 B:00 00			UINT16 R/O	
		Feature:NONE				
<b>MODBUS WATCHDOG</b>						
MODBUS WATCHDOG TIME	3x65222 4x65222 l:65221	0,0x0000 B:00 00		50	UINT16 R/W	NO
		Actual watchdog time in 1/100s:0 -> 0,0s				
Writing a value onto this register defines a new time for the internal communication watchdog timer. The value is a timespan in 1/100s. =0: The communication watchdog is disabled =1..65535: Communication watchdog will be trigegred after x 1/100s pause on communication line						
In case of an communication watchdog, the module sets all outputs to the states defined in the configuration output registers						
Reading this register will return the current stored time from the internal FRAM						
RASPBERRY PI WATCHDOG TIMER	3x65223 4x65223 l:65222	0,0x0000 B:00 00		50	UINT16 R/W	NO
		remaining watchdog time in 10ms:0 -> 0,000s				
Enables or disables the WATCHDOG Timer for the Raspberry Pi module. 1..65535: Time for Watchdog in x10 Milliseconds (Maximum 655,35 seconds) =0: No Watchdog is generated						
<b>FRAM</b>						
GET FRAM TYPE	3x65224 4x65224 l:65223	2,0x0002 B:00 02			UINT16 R/O	
		FRAM size & type:FM25L16 2kB				
Returns the current ytpc of the FRAM and its total size =2:FM25L16B_G, 2kB =64:FM25V05, 64kB =128:FM25V10, 128kB						
GET FRAM USED BYTES	3x65225 4x65225 l:65224	166,0x00A6 B:00 A6			UINT16 R/O	
		FRAM used bytes:166				
Returns the amount of used bytes from system in FRAM						
<b>RTC REAL TIME CLOCK</b>						
RTC YEAR	3x65231 4x65231 l:65230	24,0x0018 B:00 18		24	UINT16 R/W	NO
		Actual RTC year:24				
Returns the actual year of the internal real time clock in the range of 24 to 99. Writing to this register prepares the setting of a new time.						

RTC MONTH	3x65232 4x65232 l:65231	2,0x0002 B:00 02		1		UINT16 R/W	NO
		Actual RTC month:2					
Returns the actual month of the internal real time clock in the range of 1 to 12 Writing to this register prepares the setting of a new time.							
RTC DAY	3x65233 4x65233 l:65232	29,0x001D B:00 1D		1		UINT16 R/W	NO
		Actual RTC day:29					
Returns the actual day of the internal real time clock in the range of 1 to 31 Writing to this register prepares the setting of a new time.							
RTC HOUR	3x65234 4x65234 l:65233	18,0x0012 B:00 12		12		UINT16 R/W	NO
		Actual RTC month:18					
Returns the actual hour of the internal real time clock in the range of 0 to 23 Writing to this register prepares the setting of a new time.							
RTC MINUTE	3x65235 4x65235 l:65234	0,0x0000 B:00 00		45		UINT16 R/W	NO
		Actual RTC hour:0					
Returns the actual minute of the internal real time clock in the range of 0 to 59 Writing to this register prepares the setting of a new time.							
RTC SECOND	3x65236 4x65236 l:65235	23,0x0017 B:00 17		30		UINT16 R/W	NO
		Actual RTC second:23					
Returns the actual second of the internal real time clock in the range of 0 to 59 Writing to this register prepares the setting of a new time.							
RTC DAY OF WEEK	3x65237 4x65237 l:65236	4,0x0004 B:00 04		5:FRIDAY		UINT16 R/W	NO
		Actual RTC week day:THU		SELECT DAY OF WEEK			
Returns the actual day of week in the range 1 to 7 1:MON, 2:TUE, 3:WED, 4:THU, 5:FRI, 6:SAT, 7:SUN Writing to this register writes a new date and time and weekday to the RTC							
<b>DIP SWITCH STATUS</b>							
DIP SWITCH	3x65501 4x65501 l:65500	85,0x0055 B:00 55				UINT16 R/O	

Returns the actual setting of the Dip switches.

Bit 0: DIP Switch 1 (=0:OFF, =1:ON)

Bit 1: DIP Switch 2 (=0:OFF, =1:ON)

Bit 2: DIP Switch 3 (=0:OFF, =1:ON)

Bit 3: DIP Switch 4 (=0:OFF, =1:ON)

Bit 4: DIP Switch 5 (=0:OFF, =1:ON)

Bit 5: DIP Switch 6 (=0:OFF, =1:ON)

Bit 6: DIP Switch 7 (=0:OFF, =1:ON)

Bit 7: DIP Switch 8 (=0:OFF, =1:ON)

**CPU DATA**

SERIAL1	3x65521 4x65521 I:65520	34,0x0022 B:00 22		UINT16 R/O	
Serial number of module as 96 bit unsigned integer number					
SERIAL2	3x65522 4x65522 I:65521	24,0x0018 B:00 18		UINT16 R/O	
SERIAL3	3x65523 4x65523 I:65522	22291,0x5713 B:57 13		UINT16 R/O	
SERIAL4	3x65524 4x65524 I:65523	20547,0x5043 B:50 43		UINT16 R/O	
SERIAL5	3x65525 4x65525 I:65524	13361,0x3431 B:34 31		UINT16 R/O	
SERIAL6	3x65526 4x65526 I:65525	8246,0x2036 B:20 36		UINT16 R/O	
		SERIAL:220018001357435031343620			
Serial number of module as 96 bit unsigned integer number					
CPU TEMPERATURE	3x65527 4x65527 I:65526	5061,0x13C5 B:13 C5		UINT16 R/O	
		Actual internal temperature of CPU:50,61°C			
Current internal temperature of CPU in ° Celsius multiplied by 100.					
CPU VOLTAGE	3x65528 4x65528 I:65527	333,0x014D B:01 4D		UINT16 R/O	
		Actual supply voltage of CPU:3,33V			
Current internal supply voltage of CPU in Volt multiplied by 1000.					
CPU BACKUP	3x65529 4x65529 I:65528	311,0x0137 B:01 37		UINT16 R/O	
		Actual backup voltage of CPU for RTC:3,11V			
Current internal backup voltage of CPU for RTC in Volt multiplied by 1000.					

**RESETS**

RASPBERRY PI RESET	3x65534 4x65534 I:65533	0,0x00 B:00 00		1:PERFORM RASPBERRY PI RESET	BIT R/W	NO
Resets the Raspberry Pi						
RASPBERRY PI RESET	3x65534 4x65534 I:65533	0,0x0000 B:00 00		1:PERFORM RASPBERRY PI RESET	UINT16 R/W	NO
Resets the Raspberry Pi						
FACTORY RESET	1x65535 2x65535 I:65534	0,0x00 B:00		1:PERFORM FACTORY RESET	BIT R/W	NO
Performs a factory reset of all internal saved parameters						
FACTORY RESET	3x65535 4x65535 I:65534	0,0x0000 B:00 00		1:PERFORM FACTORY RESET	UINT16 R/W	NO
Performs a factory reset of all internal saved parameters						
RESET	1x65536 2x65536 I:65535	0,0x00 B:00		1:PERFORM ARM RESET	BIT R/W	NO
Performs a software reset, whenever 1 is written to this register. If the host writes to this register 1, the module executes a soft reset (reboot). Be aware that you will lose all serial interfaces in USB!!!						
RESET	3x65536 4x65535 I:65535	0,0x0000 B:00 00		1:PERFORM ARM RESET	UINT16 R/W	NO
Performs a software reset, whenever 1 is written to this register. If the host writes to this register 1, the module executes a soft reset (reboot). Be aware that you will lose all serial interfaces in USB!!!						

Register NAME	MODBUS Register	Register VALUE	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>DIP SWITCH STATUS</b>						
DIP SWITCH DIP1	1x65001 2x65001 I:65000	????			BIT R/O	
Returns the actual setting of the Dip switches. =0: DIP is OFF =1: DIP is ON						
DIP SWITCH DIP2	1x65002 2x65002 I:65001	????			BIT R/O	
DIP SWITCH DIP3	1x65003 2x65003 I:65002	????			BIT R/O	
DIP SWITCH DIP4	1x65004 2x65004 I:65003	????			BIT R/O	
DIP SWITCH DIP5	1x65005 2x65005 I:65004	????			BIT R/O	
DIP SWITCH DIP6	1x65006 2x65006 I:65005	????			BIT R/O	
DIP SWITCH DIP7	1x65007 2x65007 I:65006	????			BIT R/O	
DIP SWITCH DIP8	1x65008 2x65008 I:65007	????			BIT R/O	
<b>LED1:GREEN</b>						
LED1:GREEN SET TO OFF	1x65009 2x65009 I:65008	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil sets the LED to OFF						
LED1:GREEN SET TO ON	1x65010 2x65010 I:65009	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil sets the LED to ON						
LED1:GREEN INVERT LED STATE	1x65011 2x65011 I:65010	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil inverts the actual LED state						
LED1:GREEN BLINK	1x65012 2x65012 I:65011	????		N/A:DO NOTHING	BIT W/O	NO

Writing 1 to this coil start symmetrical blinking of LED with last defined time						
LED1:GREEN FLASH	1x65013 2x65013 I:65012	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with last defined times						
LED1:GREEN PULSE	1x65014 2x65014 I:65013	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with last defined time						
LED1:GREEN BLINK 5s	1x65015 2x65015 I:65014	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 5s ON-5s OFF cycle						
LED1:GREEN BLINK 1s	1x65016 2x65016 I:65015	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 1s ON-1s OFF cycle						
LED1:GREEN BLINK 250ms	1x65017 2x65017 I:65016	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 250ms ON-250ms OFF cycle						
LED1:GREEN BLINK 50ms	1x65018 2x65018 I:65017	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 50ms ON-50ms OFF cycle						
LED1:GREEN FLASH 5s-1s	1x65019 2x65019 I:65018	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 5s ON-1s OFF cycle						
LED1:GREEN FLASH 1s-250ms	1x65020 2x65020 I:65019	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 1s ON-250ms OFF cycle						
LED1:GREEN FLASH 500ms-100ms	1x65021 2x65021 I:65020	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 500ms ON-100ms OFF cycle						
LED1:GREEN FLASH 300ms-50ms	1x65022 2x65022 I:65021	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 300ms ON-50ms OFF cycle						
LED1:GREEN PULSE 1s	1x65023 2x65023 I:65022	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 1s ON						

LED1:GREEN PULSE 500ms	1x65024 2x65024 I:65023	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 500ms ON						
LED1:GREEN PULSE 250ms	1x65025 2x65025 I:65024	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 250ms ON						
LED1:GREEN PULSE 100ms	1x65026 2x65026 I:65025	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 100ms ON						
LED1:GREEN PULSE 20ms	1x65027 2x65027 I:65026	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 20ms ON						
<b>LED2:WHITE</b>						
LED2:WHITE SET TO OFF	1x65029 2x65029 I:65028	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil sets the LED to OFF						
LED2:WHITE SET TO ON	1x65030 2x65030 I:65029	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil sets the LED to ON						
LED2:WHITE INVERT LED STATE	1x65031 2x65031 I:65030	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil inverts the actual LED state						
LED2:WHITE BLINK	1x65032 2x65032 I:65031	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with last defined time						
LED2:WHITE FLASH	1x65033 2x65033 I:65032	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with last defined times						
LED2:WHITE PULSE	1x65034 2x65034 I:65033	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with last defined time						
LED2:WHITE BLINK 5s	1x65035 2x65035 I:65034	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 5s ON-5s OFF cycle						



LED2:WHITE BLINK 1s	1x65036 2x65036 I:65035	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 1s ON-1s OFF cycle						
LED2:WHITE BLINK 250ms	1x65037 2x65037 I:65036	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 250ms ON-250ms OFF cycle						
LED2:WHITE BLINK 50ms	1x65038 2x65038 I:65037	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 50ms ON-50ms OFF cycle						
LED2:WHITE FLASH 5s-1s	1x65039 2x65039 I:65038	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 5s ON-1s OFF cycle						
LED2:WHITE FLASH 1s-250ms	1x65040 2x65040 I:65039	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 1s ON-250ms OFF cycle						
LED2:WHITE FLASH 500ms-100ms	1x65041 2x65041 I:65040	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 500ms ON-100ms OFF cycle						
LED2:WHITE FLASH 300ms-50ms	1x65042 2x65042 I:65041	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 300ms ON-50ms OFF cycle						
LED2:WHITE PULSE 1s	1x65043 2x65043 I:65042	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 1s ON						
LED2:WHITE PULSE 500ms	1x65044 2x65044 I:65043	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 500ms ON						
LED2:WHITE PULSE 250ms	1x65045 2x65045 I:65044	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 250ms ON						
LED2:WHITE PULSE 100ms	1x65046 2x65046 I:65045	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 100ms ON						

LED2:WHITE PULSE 20ms	1x65047 2x65047 I:65046	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 20ms ON						
<b>LED3:RED</b>						
LED3:RED SET TO OFF	1x65049 2x65049 I:65048	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil sets the LED to OFF						
LED3:RED SET TO ON	1x65050 2x65050 I:65049	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil sets the LED to ON						
LED3:RED INVERT LED STATE	1x65051 2x65051 I:65050	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil inverts the actual LED state						
LED3:RED BLINK	1x65052 2x65052 I:65051	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with last defined time						
LED3:RED FLASH	1x65053 2x65053 I:65052	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with last defined times						
LED3:RED PULSE	1x65054 2x65054 I:65053	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with last defined time						
LED3:RED BLINK 5s	1x65055 2x65055 I:65054	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 5s ON-5s OFF cycle						
LED3:RED BLINK 1s	1x65056 2x65056 I:65055	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 1s ON-1s OFF cycle						
LED3:RED BLINK 250ms	1x65057 2x65057 I:65056	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 250ms ON-250ms OFF cycle						
LED3:RED BLINK 50ms	1x65058 2x65058 I:65057	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 50ms ON-50ms OFF cycle						

LED3:RED FLASH 5s-1s	1x65059 2x65059 I:65058	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 5s ON-1s OFF cycle						
LED3:RED FLASH 1s-250ms	1x65060 2x65060 I:65059	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 1s ON-250ms OFF cycle						
LED3:RED FLASH 500ms-100ms	1x65061 2x65061 I:65060	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 500ms ON-100ms OFF cycle						
LED3:RED FLASH 300ms-50ms	1x65062 2x65062 I:65061	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 300ms ON-50ms OFF cycle						
LED3:RED PULSE 1s	1x65063 2x65063 I:65062	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 1s ON						
LED3:RED PULSE 500ms	1x65064 2x65064 I:65063	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 500ms ON						
LED3:RED PULSE 250ms	1x65065 2x65065 I:65064	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 250ms ON						
LED3:RED PULSE 100ms	1x65066 2x65066 I:65065	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 100ms ON						
LED3:RED PULSE 20ms	1x65067 2x65067 I:65066	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 20ms ON						
<b>LED4:YELLOW</b>						
LED4:YELLOW SET TO OFF	1x65069 2x65069 I:65068	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil sets the LED to OFF						
LED4:YELLOW SET TO ON	1x65070 2x65070 I:65069	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil sets the LED to ON						

LED4:YELLOW INVERT LED STATE	1x65071 2x65071 I:65070	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil inverts the actual LED state						
LED4:YELLOW BLINK	1x65072 2x65072 I:65071	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with last defined time						
LED4:YELLOW FLASH	1x65073 2x65073 I:65072	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with last defined times						
LED4:YELLOW PULSE	1x65074 2x65074 I:65073	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with last defined time						
LED4:YELLOW BLINK 5s	1x65075 2x65075 I:65074	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 5s ON-5s OFF cycle						
LED4:YELLOW BLINK 1s	1x65076 2x65076 I:65075	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 1s ON-1s OFF cycle						
LED4:YELLOW BLINK 250ms	1x65077 2x65077 I:65076	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 250ms ON-250ms OFF cycle						
LED4:YELLOW BLINK 50ms	1x65078 2x65078 I:65077	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start symmetrical blinking of LED with 50ms ON-50ms OFF cycle						
LED4:YELLOW FLASH 5s-1s	1x65079 2x65079 I:65078	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 5s ON-1s OFF cycle						
LED4:YELLOW FLASH 1s-250ms	1x65080 2x65080 I:65079	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 1s ON-250ms OFF cycle						
LED4:YELLOW FLASH 500ms-100ms	1x65081 2x65081 I:65080	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 500ms ON-100ms OFF cycle						

LED4:YELLOW FLASH 300ms-50ms	1x65082 2x65082 I:65081	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start asymmetrical flashing of LED with 300ms ON-50ms OFF cycle						
LED4:YELLOW PULSE 1s	1x65083 2x65083 I:65082	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 1s ON						
LED4:YELLOW PULSE 500ms	1x65084 2x65084 I:65083	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 500ms ON						
LED4:YELLOW PULSE 250ms	1x65085 2x65085 I:65084	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 250ms ON						
LED4:YELLOW PULSE 100ms	1x65086 2x65086 I:65085	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 100ms ON						
LED4:YELLOW PULSE 20ms	1x65087 2x65087 I:65086	????		N/A:DO NOTHING	BIT W/O	NO
Writing 1 to this coil start one time pulse of LED with 20ms ON						
<b>DIP SWITCH STATUS</b>						
DIP SWITCH	3x65501 4x65501 I:65500	????			UINT16 R/O	
Returns the actual setting of the Dip switches. Bit 0: DIP Switch 1 (=0:OFF, =1:ON) Bit 1: DIP Switch 2 (=0:OFF, =1:ON) Bit 2: DIP Switch 3 (=0:OFF, =1:ON) Bit 3: DIP Switch 4 (=0:OFF, =1:ON) Bit 4: DIP Switch 5 (=0:OFF, =1:ON) Bit 5: DIP Switch 6 (=0:OFF, =1:ON) Bit 6: DIP Switch 7 (=0:OFF, =1:ON) Bit 7: DIP Switch 8 (=0:OFF, =1:ON)						
<b>LED1:GREEN</b>						
LED1:GREEN STATE	3x65502 4x65502 I:65501	????		1:SET TO ON	UINT16 R/W	NO
		State of LED:????				

Returns the actual state of the LED

Writing to this register will set a new state for the LED

0: Switch LED permanent OFF

1: Switch LED permanent ON

2: Invert last state of LED

3: Start symmetrical blinking of LED with TIME1 ON and TIME1 OFF

4: Start asymmetrical flashing of LED with TIME1 ON and TIME2 OFF

5: Start one time pulse of LED with TIME1 ON and infinite OFF

LED1:GREEN TIME1	3x65503 4x65503 1:65502	????		1000	UINT16 R/W	YES
		Actual time 1 in ms:0				

Returns the actual time1 for blink,flash and pulse ON time in Milliseconds

Writing to this register sets a new time in the range 20-65534ms

LED1:GREEN TIME2	3x65504 4x65504 1:65503	????		2000	UINT16 R/W	YES
		Actual time 2 in ms:0				

Returns the actual time2 for blink and flash OFF time in Milliseconds

Writing to this register sets a new time in the range 20-65534ms

**LED2:WHITE**

LED2:WHITE STATE	3x65505 4x65505 1:65504	????		1:SET TO ON	UINT16 R/W	NO
		State of LED:????				

Returns the actual state of the LED

Writing to this register will set a new state for the LED

0: Switch LED permanent OFF

1: Switch LED permanent ON

2: Invert last state of LED

3: Start symmetrical blinking of LED with TIME1 ON and TIME1 OFF

4: Start asymmetrical flashing of LED with TIME1 ON and TIME2 OFF

5: Start one time pulse of LED with TIME1 ON and infinite OFF

LED2:WHITE TIME1	3x65506 4x65506 1:65505	????		1000	UINT16 R/W	YES
		Actual time 1 in ms:0				

Returns the actual time1 for blink,flash and pulse ON time in Milliseconds

Writing to this register sets a new time in the range 20-65534ms

LED2:WHITE TIME2	3x65507 4x65507 1:65506	????		2000	UINT16 R/W	YES
		Actual time 2 in ms:0				

Returns the actual time2 for blink and flash OFF time in Milliseconds

Writing to this register sets a new time in the range 20-65534ms

**LED3:RED**

LED3:RED STATE	3x65508 4x65508 1:65507	????		1:SET TO ON	UINT16 R/W	NO
-------------------	-------------------------------	------	--	-------------	---------------	----

		State of LED:????				
Returns the actual state of the LED Writing to this register will set a new state for the LED 0: Switch LED permanent OFF 1: Switch LED permanent ON 2: Invert last state of LED 3: Start symmetrical blinking of LED with TIME1 ON and TIME1 OFF 4: Start asymmetrical flashing of LED with TIME1 ON and TIME2 OFF 5: Start one time pulse of LED with TIME1 ON and infinite OFF						
LED3:RED TIME1	3x65509 4x65509 1:65508	????		1000	UINT16 R/W	YES
		Actual time 1 in ms:0				
Returns the actual time1 for blink,flash and pulse ON time in Milliseconds Writing to this register sets a new time in the range 20-65534ms						
LED3:RED TIME2	3x65510 4x65510 1:65509	????		2000	UINT16 R/W	YES
		Actual time 2 in ms:0				
Returns the actual time2 for blink and flash OFF time in Milliseconds Writing to this register sets a new time in the range 20-65534ms						
<b>LED4:YELLOW</b>						
LED4:YELLOW STATE	3x65511 4x65511 1:65510	????		1:SET TO ON	UINT16 R/W	NO
		State of LED:????				
Returns the actual state of the LED Writing to this register will set a new state for the LED 0: Switch LED permanent OFF 1: Switch LED permanent ON 2: Invert last state of LED 3: Start symmetrical blinking of LED with TIME1 ON and TIME1 OFF 4: Start asymmetrical flashing of LED with TIME1 ON and TIME2 OFF 5: Start one time pulse of LED with TIME1 ON and infinite OFF						
LED4:YELLOW TIME1	3x65512 4x65512 1:65511	????		1000	UINT16 R/W	YES
		Actual time 1 in ms:0				
Returns the actual time1 for blink,flash and pulse ON time in Milliseconds Writing to this register sets a new time in the range 20-65534ms						
LED4:YELLOW TIME2	3x65513 4x65513 1:65512	????		2000	UINT16 R/W	YES
		Actual time 2 in ms:0				
Returns the actual time2 for blink and flash OFF time in Milliseconds Writing to this register sets a new time in the range 20-65534ms						

Register NAME Command NAME	MODBUS Register ASCII Command	Register VALUE ASCII Command	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
-------------------------------	--	---------------------------------	-------------------	--------------	-----------	-------------

## ASCII COMMANDS

## AIOX CONFIGURATION

SET IO TYPES	ASCII WRITE COMMAND	#SIOTYPS:<IOTyp1>,<IOTyp2>,<IOTyp3>,<IOTyp4>,<IOTyp5>,<IOTyp6>,<IOTyp7>,<IOTyp8><CR> Result: #OK<CR>			ASCII	YES
	IOTyp1	VO[0-10V]				
	IOTyp2	VO[0-10V]				
	IOTyp3	VO[0-10V]				
	IOTyp4	VO[0-10V]				
	IOTyp5	VO[0-10V]				
	IOTyp6	VO[0-10V]				
	IOTyp7	VO[0-10V]				
	IOTyp8	VO[0-10V]				
	TX	#1,SIOTYPS:VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V]<CR>				
	RX	#1,OK<CR>				

This command defines for all 8 universal IOs a new type of IO:

IOTypx stands for the new type:

UU: Unused – high impedance

VI[0-10V]: VOLTAGE INPUT for 0 to 10V Signals

VI[2-10V]: VOLTAGE INPUT for 2 to 10V Signals

VO[0-10V]: VOLTAGE OUTPUT for 0 to 10V Signals

VO[2-10V]: VOLTAGE OUTPUT for 2 to 10V Signals

CI[0-20mA;LP]: CURRENT INPUT for 0 to 20mA Signals – loop powered

CI[4-20mA;LP]: CURRENT INPUT for 4 to 20mA Signals – loop powered

CI[0-20mA;EP]: CURRENT INPUT for 0 to 20mA Signals – external powered

CI[4-20mA;EP]: CURRENT INPUT for 4 to 20mA Signals – external powered

CO[0-20mA]: CURRENT OUTPUT for 0 to 20mA Signals

CO[4-20mA]: CURRENT OUTPUT for 4 to 20mA Signals

RTDI[OHM]: RTD SENSOR INPUT for Ohm measurement between 0 and 1MOhm

DI[24V;L]: DIGITAL INPUT for 24Vdc – logic, threshold 12V

DI[24V;LP]: DIGITAL INPUT for 24Vdc – loop powered

HINT: The last IO type is automatically stored in FRAM and will be used after a system restart.

SET IO TYPx	ASCII WRITE COMMAND	#SIOTYP<IONR>:<IOTypx><CR> Result: #OK<CR>			ASCII	YES
	IONR	1				
	IOTypx	VO[0-10V]				
	TX	#1,SIOTYP1:VO[0-10V]<CR>				
	RX	#1,OK<CR>				



This command defines for the universal IO IONR a new type of IO:

IOTypx stands for the new type:

UU: Unused – high impedance

VI[0-10V]: VOLTAGE INPUT for 0 to 10V Signals

VI[2-10V]: VOLTAGE INPUT for 2 to 10V Signals

VO[0-10V]: VOLTAGE OUTPUT for 0 to 10V Signals

VO[2-10V]: VOLTAGE OUTPUT for 2 to 10V Signals

CI[0-20mA;LP]: CURRENT INPUT for 0 to 20mA Signals – loop powered

CI[4-20mA;LP]: CURRENT INPUT for 4 to 20mA Signals – loop powered

CI[0-20mA;EP]: CURRENT INPUT for 0 to 20mA Signals – external powered

CI[4-20mA;EP]: CURRENT INPUT for 4 to 20mA Signals – external powered

CO[0-20mA]: CURRENT OUTPUT for 0 to 20mA Signals

CO[4-20mA]: CURRENT OUTPUT for 4 to 20mA Signals

RTDI[OHM]: RTD SENSOR INPUT for Ohm measurement between 0 and 1MOhm

DI[24V;L]: DIGITAL INPUT for 24Vdc – logic, threshold 12V

DI[24V;LP]: DIGITAL INPUT for 24Vdc – loop powered

HINT: The last IO type is automatically stored in FRAM and will be used after a system restart.

GET IO TYPES	ASCII READ COMMAND	#GIOTYPS<CR> Result: #GIOTYPS:<IOTyp1Txt>,<IOTyp2Txt>,...,<IOTyp8Txt> <CR>	ASCII	
	TX	#1,GIOTYPS<CR>		
	RX	#1,GIOTYPS:VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V],VO[0-10V]<CR>		
		Actual type of IO1:VO[0-10V]		
		Actual type of IO2:VO[0-10V]		
		Actual type of IO3:VO[0-10V]		
		Actual type of IO4:VO[0-10V]		
		Actual type of IO5:VO[0-10V]		
		Actual type of IO6:VO[0-10V]		
		Actual type of IO7:VO[0-10V]		
		Actual type of IO8:VO[0-10V]		

This command shows for all 8 universal IOs the current selected type of IO:

IOTypx stands for the types:

UU: Unused – high impedance

VI[0-10V]: VOLTAGE INPUT for 0 to 10V Signals

VI[2-10V]: VOLTAGE INPUT for 2 to 10V Signals

VO[0-10V]: VOLTAGE OUTPUT for 0 to 10V Signals

VO[2-10V]: VOLTAGE OUTPUT for 2 to 10V Signals

CI[0-20mA;LP]: CURRENT INPUT for 0 to 20mA Signals – loop powered

CI[4-20mA;LP]: CURRENT INPUT for 4 to 20mA Signals – loop powered

CI[0-20mA;EP]: CURRENT INPUT for 0 to 20mA Signals – external powered

CI[4-20mA;EP]: CURRENT INPUT for 4 to 20mA Signals – external powered

CO[0-20mA]: CURRENT OUTPUT for 0 to 20mA Signals

CO[4-20mA]: CURRENT OUTPUT for 4 to 20mA Signals

RTDI[OHM]: RTD SENSOR INPUT for Ohm measurement between 0 and 1MOhm

DI[24V;L]: DIGITAL INPUT for 24Vdc – logic, threshold 12V

DI[24V;LP]: DIGITAL INPUT for 24Vdc – loop powered

GET IO TYPx	ASCII READ COMMAND	#GIOTYP<IONR> <CR> Result: #GIOTYP<IONR>:<IOTypTxt> <CR>	ASCII	
-------------	--------------------------	--	-------	--

	IONR	1		
	TX	#1,GIOTYP1<CR>		
	RX	#1,GIOTYP1:VO[0-10V]<CR>		
		Actual type of IO1:VO[0-10V]		

This command shows for the universal IO IONR the current selected type:

IOTypx stands for the types:

UU: Unused – high impedance

VI[0-10V]: VOLTAGE INPUT for 0 to 10V Signals

VI[2-10V]: VOLTAGE INPUT for 2 to 10V Signals

VO[0-10V]: VOLTAGE OUTPUT for 0 to 10V Signals

VO[2-10V]: VOLTAGE OUTPUT for 2 to 10V Signals

CI[0-20mA;LP]: CURRENT INPUT for 0 to 20mA Signals – loop powered

CI[4-20mA;LP]: CURRENT INPUT for 4 to 20mA Signals – loop powered

CI[0-20mA;EP]: CURRENT INPUT for 0 to 20mA Signals – external powered

CI[4-20mA;EP]: CURRENT INPUT for 4 to 20mA Signals – external powered

CO[0-20mA]: CURRENT OUTPUT for 0 to 20mA Signals

CO[4-20mA]: CURRENT OUTPUT for 4 to 20mA Signals

RTDI[OHM]: RTD SENSOR INPUT for Ohm measurement between 0 and 1MOhm

DI[24V;L]: DIGITAL INPUT for 24Vdc – logic, threshold 12V

DI[24V;LP]: DIGITAL INPUT for 24Vdc – loop powered

#### VOLTAGE INPUTS

GET VOLTAGE INPUTS IN VOLT	ASCII READ COMMAND	#GVISV<CR> Result: #GVISV:<IOVolt1DbI>,<IOVolt2DbI>.....<IOVolt8DbI><CR>	ASCII	
	TX	#1,GVISV<CR>		
	RX	#1,GVISV:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99<CR>		
		Actual voltage on IO1:999.99V		
		Actual voltage on IO2:999.99V		
		Actual voltage on IO3:999.99V		
		Actual voltage on IO4:999.99V		
		Actual voltage on IO5:999.99V		
		Actual voltage on IO6:999.99V		
		Actual voltage on IO7:999.99V		
		Actual voltage on IO8:999.99V		

This command shows for all VOLTAGE INPUT IOs the current measurement in Volt.

The measurement range is 0.0 to 10.00V.

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

GET VOLTAGE INPUT IN VOLT	ASCII READ COMMAND	#GVIV<IONR><CR> Result: #GVIV<IONR>:<IOxVoltDbI><CR>	ASCII	
	IONR	1		
	TX	#1,GVIV1<CR>		
	RX	#1,GVIV1:999.99<CR>		
		Actual voltage on IO1:999.99V		

This command shows for the VOLTAGE INPUT IO <IONR> the current measurement in Volt.

The measurement range is 0.0 to 10.00V.

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

GET VOLTAGE INPUTS IN PERCENT	ASCII READ COMMAND	#GVISP<CR> Result: #GVISP:<IOPercent1DbI>,<IOPercent2DbI>,...,<IOPercent8DbI><CR>	ASCII	
	TX	#1,GVISP<CR>		
	RX	#1,GVISP:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99<CR>		
		Actual percentage on IO1:999.99%		
		Actual percentage on IO2:999.99%		
		Actual percentage on IO3:999.99%		
		Actual percentage on IO4:999.99%		
		Actual percentage on IO5:999.99%		
		Actual percentage on IO6:999.99%		
		Actual percentage on IO7:999.99%		
		Actual percentage on IO8:999.99%		

This command shows for all VOLTAGE INPUT IOs the current measurement in Percent.

The measurement range is 0.0V -> 0.0% to 10.00V -> 100.0%.

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

GET VOLTAGE INPUT IN PERCENT	ASCII READ COMMAND	#GVIP<IONR><CR> Result: #GVIP<IONR>:<IOxPercentDbI><CR>	ASCII	
	IONR	1		
	TX	#1,GVIP1<CR>		
	RX	#1,GVIP1:999.99<CR>		
		Actual percentage on IO1:999.99%		

This command shows for VOLTAGE INPUT IO <IONR> the current measurement in Percent.

The measurement range is 0.0V -> 0.0% to 10.00V -> 100.0%.

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

### VOLTAGE DIGITAL INPUTS

GET VOLTAGE DIGITAL INPUTS	ASCII READ COMMAND	#GVDIS<CR> Result: #GVDIS:<IODI1Dec>,<IODI2Dec>,...,<IODI8Dec><CR>	ASCII	
	TX	#1,GVDIS<CR>		
	RX	#1,GVDIS:X,X,X,X,X,X,X,X<CR>		
		Actual voltage digital input state on IO1:X		
		Actual voltage digital input state on IO2:X		
		Actual voltage digital input state on IO3:X		
		Actual voltage digital input state on IO4:X		
		Actual voltage digital input state on IO5:X		
		Actual voltage digital input state on IO6:X		
		Actual voltage digital input state on IO7:X		
		Actual voltage digital input state on IO8:X		

This command shows for all VOLTAGE DIGITAL INPUT IOs the current state.

The digital input can have the values 0 and 1.

All IOs with a different usage type will return X to indicate, that no measurement is done.

GET VOLTAGE DIGITAL INPUT	ASCII READ COMMAND	#GVDI<IONR><CR> Result: #GVDI<IONR>:<IOxDIDec><CR>	ASCII	
	IONR	1		

	TX	#1,GVDI1<CR>		
	RX	#1,GVDI3:X<CR>		
		Actual voltage digital input state on IO1:X		
This command shows for VOLTAGE DIGITAL INPUT IO <IONR> the current state. The digital input can have the values 0 and 1. All IOs with a different usage type will return X to indicate, that no measurement is done.				
GET VOLTAGE DIGITAL INPUTS CURRENT	ASCII READ COMMAND	#GVDISC<CR> Result: #GVDISC:<IOmA1DbI>,<IOmA2DbI>,...,<IOmA8DbI><CR>	ASCII	
	TX	#1,GVDISC<CR>		
	RX	#1,GVDISC:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99<CR>		
		Actual input current on IO1:999.99mA		
		Actual input current on IO2:999.99mA		
		Actual input current on IO3:999.99mA		
		Actual input current on IO4:999.99mA		
		Actual input current on IO5:999.99mA		
		Actual input current on IO6:999.99mA		
		Actual input current on IO7:999.99mA		
		Actual input current on IO8:999.99mA		
This command shows for all VOLTAGE DIGITAL INPUT IOs the actual current in mA. The measurement range is 0.0mA to 35mA. All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET VOLTAGE DIGITAL INPUT CURRENT	ASCII READ COMMAND	#GVDIC<IONR><CR> Result: #GVDIC<IONR>:<IOxmADbl><CR>	ASCII	
	IONR	1		
	TX	#1,GVDIC1<CR>		
	RX	#1,GVDIC1:999.99<CR>		
		Actual input current on IO1:999.99mA		
This command shows for VOLTAGE DIGITAL INPUT IO <IONR> the actual current in mA. The measurement range is 0.0mA to 35mA. All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
<b>VOLTAGE OUTPUTS</b>				
SET VOLTAGE OUTPUTS IN VOLT	ASCII WRITE COMMAND	#SVOSV:<IO1VoltDbI>,<IO2VoltDbI>,<IO3VoltDbI>,<IO4VoltDbI>,<IO5VoltDbI>,<IO6VoltDbI>,<IO7 VoltDbI>,<IO8VoltDbI><CR> Result: #OK<CR>	ASCII	YES
	IO1Volt	10,000		
	IO2Volt	7,500		
	IO3Volt	5,500		
	IO4Volt	2,500		
	IO5Volt	10,000		
	IO6Volt	7,500		
	IO7Volt	5,500		
	IO8Volt	2,500		
	TX	#1,SVOSV:10,7.5,5.5,2.5,10,7.5,5.5,2.5<CR>		
	RX	#1,OK<CR>		

This command sets for all VOLTAGE OUTPUT IOs the current output voltage in Volt. The range is 0.0 to 11.00V.				
SET VOLTAGE OUTPUTx IN VOLT	ASCII WRITE COMMAND	#SVOV<IONR>:<IOxVoltDbl> <CR> Result: #OK<CR>	ASCII	NO
	IONR	1		
	IOxVolt	2,000		
	TX	#1,SVOV1:2<CR>		
	RX	N/A		
This command sets for VOLTAGE OUTPUT IO <IONR> the current output voltage in Volt. The range is 0.0 to 11.00V.				
SET VOLTAGE OUTPUTS IN PERCENT	ASCII WRITE COMMAND	#SVOSP:<IO1PercentDbl>,<IO2PercentDbl>,<IO3PercentDbl>,<IO4PercentDbl>,<IO5PercentDbl>,<IO6PercentDbl>,<IO7PercentDbl>,<IO8PercentDbl> <CR> Result: #OK<CR>	ASCII	NO
	IO1Percent	110,000		
	IO2Percent	100,000		
	IO3Percent	75,000		
	IO4Percent	50,000		
	IO5Percent	110,000		
	IO6Percent	100,000		
	IO7Percent	75,000		
	IO8Percent	50,000		
	TX	#1,SVOSP:110,100,75,50,110,100,75,50<CR>		
	RX	N/A		
This command sets for all VOLTAGE OUTPUT IOs the current output voltage in Percent. The range is 0.0V -> 0.00% to 11.00V -> 110.00%.				
SET VOLTAGE OUTPUTx IN PERCENT	ASCII WRITE COMMAND	#SVOP<IONR>:<IOxPercentDbl> <CR> Result: #OK<CR>	ASCII	NO
	IONR	1		
	IOxPercent	2,000		
	TX	#1,SVOP1:2<CR>		
	RX	N/A		
This command sets for VOLTAGE OUTPUT IO <IONR> the current output voltage in Percent. The range is 0.0V -> 0.00% to 11.00V -> 110.00%.				
GET VOLTAGE OUTPUTS IN VOLT	ASCII READ COMMAND	#GVOSV<CR> Result: #GVOSV:<IO1VoltDbl>,<IO2VoltDbl>,...,<IO8VoltDbl> <CR>	ASCII	
	TX	#1,GVOSV<CR>		
	RX	#1,GVOSV:0.00,0.00,0.00,0.00,0.00,0.00,0.00,0.00<CR>		
		Actual voltage output on IO1:0.00V		
		Actual voltage output on IO2:0.00V		
		Actual voltage output on IO3:0.00V		
		Actual voltage output on IO4:0.00V		
		Actual voltage output on IO5:0.00V		
		Actual voltage output on IO6:0.00V		

		Actual voltage output on IO7:0.00V		
		Actual voltage output on IO8:0.00V		
This command shows for all VOLTAGE OUTPUT IOs the current output voltage in Volt. The range is 0.0V to 11.00V. All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET VOLTAGE OUTPUT IN VOLT	ASCII READ COMMAND	#GVOV<IONR> <CR> Result: #GVOV<IONR>:<IOxVoltDbI> <CR>	ASCII	
	IONR	1		
	TX	#1,GVOV1<CR>		
	RX	#1,GVOV3:5.50<CR>		
		Actual voltage output on IO1:5.50V		
This command shows for VOLTAGE OUTPUT IO <IONR> the current output voltage in Volt. The range is 0.0V to 11.00V. All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET VOLTAGE OUTPUTS IN PERCENT	ASCII READ COMMAND	#GVOSP<CR> Result: #GVOSP:<IO1PercentDbI>,<IO2PercentDbI>,<IO3PercentDbI>,<IO4PercentDbI>,<IO5PercentDbI>,<IO6PercentDbI>,<IO7PercentDbI>,<IO8PercentDbI> <CR>	ASCII	
	TX	#1,GVOSP<CR>		
	RX	#1,GVOSP:100.00,75.00,55.00,25.00,100.00,75.00,55.00,25.00 <CR>		
		Actual percentage voltage output on IO1:100.00%		
		Actual percentage voltage output on IO2:75.00%		
		Actual percentage voltage output on IO3:55.00%		
		Actual percentage voltage output on IO4:25.00%		
		Actual percentage voltage output on IO5:100.00%		
		Actual percentage voltage output on IO6:75.00%		
		Actual percentage voltage output on IO7:55.00%		
		Actual percentage voltage output on IO8:25.00%		
This command shows for all VOLTAGE OUTPUT IOs the current output voltage in Percent. The range is 0.0V -> 0.00% to 11.00V -> 110.00% (10.00V -> 100.00%). All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET VOLTAGE OUTPUT IN PERCENT	ASCII READ COMMAND	#GVOP<IONR> <CR> Result: #GVOP<IONR>:<IOxPercentDbI> <CR>	ASCII	
	IONR	1		
	TX	#1,GVOP1<CR>		
	RX	#1,GVOP3:55.00<CR>		
		Actual percentage voltage output on IO1:55.00%		
This command shows for VOLTAGE OUTPUT IO <IONR> the current output voltage in Percent. The range is 0.0V -> 0.00% to 11.00V -> 110.00% (10.00V -> 100.00%). All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET VOLTAGE OUTPUTS CURRENT	ASCII READ COMMAND	#GVOSC <CR> Result: #GVOSC:<IOmA1DbI>,<IOmA2DbI>,<IOmA3DbI>,<IOmA4DbI>,<IOmA5DbI>,<IOmA6DbI>,<IOmA7DbI>,<IOmA8DbI> <CR>	ASCII	
	TX	#1,GVOSC<CR>		
	RX	#1,GVOSC:0.00,0.00,0.00,-0.00,-0.00,0.00,0.00,0.00<CR>		
		Actual output current on IO1:0.00mA		

		Actual output current on IO2:0.00mA		
		Actual output current on IO3:0.00mA		
		Actual output current on IO4:-0.00mA		
		Actual output current on IO5:-0.00mA		
		Actual output current on IO6:0.00mA		
		Actual output current on IO7:0.00mA		
		Actual output current on IO8:0.00mA		

This command shows for all VOLTAGE OUTPUT IOs the actual current in mA.

The measurement range is 0.0mA to 35mA.

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

GET VOLTAGE OUTPUT CURRENT	ASCII READ COMMAND	#GVOC<IONR><CR> Result: #GVOC<IONR>:<IOxmADbl><CR>	ASCII	
	IONR	1		
	TX	#1,GVOC1<CR>		
	RX	#1,GVOC1:0.00<CR>		
		Actual output current on IO1:0.00mA		

This command shows for VOLTAGE OUTPUT IO <IONR> the actual current in mA.

The measurement range is 0.0mA to 35mA.

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

#### CURRENT INPUTS

GET CURRENT INPUTS IN mA	ASCII READ COMMAND	#GCISMA<CR> Result: #GCISMA:<IO1mADbl>,<IO2mADbl>,...,<IO8mADbl><CR>	ASCII	
	TX	#1,GCISMA<CR>		
	RX	#1,GCISMA:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99<CR>		
		Actual current input on IO1:999.99mA		
		Actual current input on IO2:999.99mA		
		Actual current input on IO3:999.99mA		
		Actual current input on IO4:999.99mA		
		Actual current input on IO5:999.99mA		
		Actual current input on IO6:999.99mA		
		Actual current input on IO7:999.99mA		
		Actual current input on IO8:999.99mA		

This command shows for all CURRENT INPUT IOs the current measured input current in mA.

The range is 0.00 to 25.00mA

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

GET CURRENT INPUT IN mA	ASCII READ COMMAND	#GCIMA<IONR><CR> Result: #GCIMA<IONR>:<IOxmADbl><CR>	ASCII	
	IONR	1		
	TX	#1,GCIMA1<CR>		
	RX	#1,GCIMA3:999.99<CR>		
		Actual current input on IO1:999.99mA		

This command shows for CURRENT INPUT IO <IONR> the current measured input current in mA.

The range is 0.00 to 25.00mA

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

GET CURRENT INPUTS IN PERCENT	ASCII READ COMMAND	#GCISP<CR> Result: #GCISP:<IO1PercentDbl>,<IO2PercentDbl>,...,<IO8PercentDbl><CR>	ASCII	
	TX	#1,GCISP<CR>		
	RX	#1,GCISP:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99<CR>		
		Actual percentage for current input on IO1:999.99%		
		Actual percentage for current input on IO2:999.99%		
		Actual percentage for current input on IO3:999.99%		
		Actual percentage for current input on IO4:999.99%		
		Actual percentage for current input on IO5:999.99%		
		Actual percentage for current input on IO6:999.99%		
		Actual percentage for current input on IO7:999.99%		
		Actual percentage for current input on IO8:999.99%		

This command shows for all CURRENT INPUT IOs the current measured input current in Percent.

The range is 0.00mA -> 0.00% to 25.00mA -> 125.00% (20mA=100%)

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

GET CURRENT INPUT IN PERCENT	ASCII READ COMMAND	#GCIP<IONR><CR> Result: #GCIP<IONR>:<IOxPercentDbl><CR>	ASCII	
	IONR	1		
	TX	#1,GCIP1<CR>		
	RX	#1,GCIP3:999.99<CR>		
		Actual percentage for current input on IO1:999.99%		

This command shows for CURRENT INPUT IO <IONR> the current measured input current in Percent.

The range is 0.00mA -> 0.00% to 25.00mA -> 125.00% (20mA=100%)

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

### CURRENT OUTPUTS

SET CURRENT OUTPUTS IN mA	ASCII WRITE COMMAND	#SCOSMA:<IO1mADbl>,<IO2mADbl>,<IO3mADbl>,<IO4mADbl>,<IO5mADbl>,<IO6mADbl>,<IO7mADbl>,<IO8mADbl><CR> Result: #OK<CR>	ASCII	NO
	IO1mA	2,000		
	IO2mA	4,000		
	IO3mA	6,000		
	IO4mA	25,000		
	IO5mA	,000		
	IO6mA	,000		
	IO7mA	,000		
	IO8mA	,000		
	TX	#1,SCOSMA:2,4,6,25,0,0,0,0<CR>		
	RX	N/A		

This command sets for all CURRENT OUTPUT IOs the actual output current in mA.

The range is 0.00mA to 25.00mA



SET CURRENT OUTPUTx IN mA	ASCII WRITE COMMAND	#SCOMA<IONR>:<IOxMADbl> <CR> Result: #OK<CR>	ASCII	NO
	IONR	1		
	IOxVolt	2,000		
	TX	#1,SCOMA1:<IOxMADbl> <CR>		
	RX	N/A		
This command sets for CURRENT OUTPUT <IONR> IOs the actual output current in mA. The range is 0.00mA to 25.00mA				
SET CURRENT OUTPUTS IN PERCENT	ASCII WRITE COMMAND	#SCOSP:<IO1PercentDbl>,<IO2PercentDbl>,<IO3PercentDbl>,<IO4PercentDbl>,<IO5PercentDbl>,<IO6PercentDbl>,<IO7PercentDbl>,<IO8PercentDbl> <CR> Result: #OK<CR>	ASCII	NO
	IO1Percent	125,000		
	IO2Percent	100,000		
	IO3Percent	75,000		
	IO4Percent	50,000		
	IO5Percent	,000		
	IO6Percent	,000		
	IO7Percent	,000		
	IO8Percent	,000		
	TX	#1,SCOSP:125,100,75,50,0,0,0,0 <CR>		
	RX	N/A		
This command sets for all CURRENT OUTPUT IOs the new output current in Percent. The range is 0.00mA -> 0.00% to 25.00mA -> 125.00% (20mA -> 100.00%)				
SET CURRENT OUTPUTx IN PERCENT	ASCII WRITE COMMAND	#SCOP<IONR>:<IOxPercentDbl> <CR> Result: #OK<CR>	ASCII	NO
	IONR	1		
	IOxPercent	,000		
	TX	#1,SCOP1:0 <CR>		
	RX	N/A		
This command sets for CURRENT OUTPUT IO <IONR> the new output current in Percent. The range is 0.00mA -> 0.00% to 25.00mA -> 125.00% (20mA -> 100.00%)				
GET CURRENT OUTPUTS IN mA	ASCII READ COMMAND	#GCOSMA<CR> Result: #GCOSMA:<IO1mADbl>,<IO2mADbl>,...,<IO8mADbl> <CR>	ASCII	
	TX	#1,GCOSMA<CR>		
	RX	#1,GCOSMA:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99 <CR>		
		Actual value of current output on IO1:999.99mA		
		Actual value of current output on IO2:999.99mA		
		Actual value of current output on IO3:999.99mA		
		Actual value of current output on IO4:999.99mA		
		Actual value of current output on IO5:999.99mA		
		Actual value of current output on IO6:999.99mA		
		Actual value of current output on IO7:999.99mA		

		Actual value of current output on IO8:999.99mA		
This command shows for all CURRENT OUTPUT IOs the actual output current in mA. The range is 0.00mA to 25.00mA All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET CURRENT OUTPUT IN mA	ASCII READ COMMAND	#GCOMA<IONR><CR> Result: #GCOMA<IONR>:<IOxmADbl><CR>	ASCII	
	IONR	1		
	TX	#1,GCOMA1<CR>		
	RX	#1,GCOMA3:999.99<CR>		
		Actual value of current output on IO1:999.99mA		
This command shows for CURRENT OUTPUT IO <IONR> the actual output current in mA. The range is 0.00mA to 25.00mA All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET CURRENT OUTPUTS IN PERCENT	ASCII READ COMMAND	#GCOSP<CR> Result: #GCOSP:<IO1PercentDbl>,<IO2PercentDbl>,...,<IO8PercentDbl><CR>	ASCII	
	TX	#1,GCOSP<CR>		
	RX	#1,GCOSP:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99<CR>		
		Actual percentage of current output on IO1:999.99%		
		Actual percentage of current output on IO2:999.99%		
		Actual percentage of current output on IO3:999.99%		
		Actual percentage of current output on IO4:999.99%		
		Actual percentage of current output on IO5:999.99%		
		Actual percentage of current output on IO6:999.99%		
		Actual percentage of current output on IO7:999.99%		
		Actual percentage of current output on IO8:999.99%		
This command shows for all CURRENT OUTPUT IOs the actual output current in Percent. The range is 0.00mA -> 0.00% to 25.00mA -> 125.00% (20mA -> 100.00%) All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET CURRENT OUTPUT IN PERCENT	ASCII READ COMMAND	#GCOP<IONR><CR> Result: #GCOP<IONR>:<IOxPercentDbl><CR>	ASCII	
	IONR	1		
	TX	#1,GCOP1<CR>		
	RX	#1,GCOP3:999.99<CR>		
		Actual percentage of current output on IO1:999.99%		
This command shows for CURRENT OUTPUT IO <IONR> the actual output current in Percent. The range is 0.00mA -> 0.00% to 25.00mA -> 125.00% (20mA -> 100.00%) All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.				
GET CURRENT OUTPUTS VOLTAGE	ASCII READ COMMAND	#GCOSV<CR> Result: #GCOSV:<IO1VoltsDbl>,<IO2VoltsDbl>,...,<IO8VoltsDbl><CR>	ASCII	
	TX	#1,GCOSV<CR>		
	RX	#1,GCOSV:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99<CR>		
		Measured voltage of current output on IO1:999.99V		

		Measured voltage of current output on IO2:999.99V		
		Measured voltage of current output on IO3:999.99V		
		Measured voltage of current output on IO4:999.99V		
		Measured voltage of current output on IO5:999.99V		
		Measured voltage of current output on IO6:999.99V		
		Measured voltage of current output on IO7:999.99V		
		Measured voltage of current output on IO8:999.99V		

This command shows for all CURRENT OUTPUT IOs the actual output voltage in Volt.

The range is 0-10V

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

GET CURRENT OUTPUT VOLTAGE	ASCII READ COMMAND	#GCOV<IONR><CR> Result: #GCOV<IONR>:<IOxVoltDbI><CR>	ASCII	
	IONR	1		
	TX	#1,GCOV1<CR>		
	RX	#1,GCOV3:999.99<CR>		
		Measured voltage of current output on IO1:999.99V		

This command shows for CURRENT OUTPUT IO <IONR> the actual output voltage in Volt.

The range is 0-10V

All IOs with a different usage type will return 999.99 to indicate, that no measurement is done.

#### RTD INPUTS OHM

GET RTD INPUTS IN OHM	ASCII READ COMMAND	#GRTDISOHM<CR> Result: #GRTDISOHM:<IO1OhmDbI>,<IO2OhmDbI>,...,<IO8OhmDbI><CR>	ASCII	
	TX	#1,GRTDISOHM<CR>		
	RX	#1,GRTDISOHM:99999999.999,99999999.999,99999999.999,99999999.999,99999999.999,99999999.999,99999999.999<CR>		
		Actual measured RTD input on IO1:99999999.999Ohm		
		Actual measured RTD input on IO2:99999999.999Ohm		
		Actual measured RTD input on IO3:99999999.999Ohm		
		Actual measured RTD input on IO4:99999999.999Ohm		
		Actual measured RTD input on IO5:99999999.999Ohm		
		Actual measured RTD input on IO6:99999999.999Ohm		
		Actual measured RTD input on IO7:99999999.999Ohm		
		Actual measured RTD input on IO8:99999999.999Ohm		

This command shows for RTD INPUT IOs the actual measured RTD value in Ohm.

The range is 0.000Ohm to 1000000.00Ohm

All IOs with a different usage type will return 99999999.999 to indicate, that no measurement is done.

GET RTD INPUT IN OHM	ASCII READ COMMAND	#GRTDIOHM<IONR><CR> Result: #GRTDIOHM<IONR>:<IOxOhmDbI><CR>	ASCII	
	IONR	1		
	TX	#1,GRTDIOHM1<CR>		
	RX	#1,GRTDIOHM3:99999999.999<CR>		
		Actual measured RTD input on IO1:99999999.999Ohm		

This command shows for RTD INPUT IO <IONR> the actual measured RTD value in Ohm.

The range is 0.000Ohm to 1000000.00Ohm

All IOs with a different usage type will return 99999999.999 to indicate, that no measurement is done.

GET AVERAGE RTD INPUTS IN OHM	ASCII READ COMMAND	#GAVGRTDISOHM<CR> Result: #GAVGRTDISOHM:<IO1OhmDbl>,<IO2OhmDbl>,...,<IO8OhmDbl><CR>	ASCII	
	TX	#1,GAVGRTDISOHM<CR>		
	RX	#1,GAVGRTDISOHM:99999999.999,99999999.999,99999999.999,99999999.999,99999999.999,99999999.999,99999999.999,99999999.999<CR>		
		Average measured RTD input on IO1:99999999.999Ohm		
		Average measured RTD input on IO2:99999999.999Ohm		
		Average measured RTD input on IO3:99999999.999Ohm		
		Average measured RTD input on IO4:99999999.999Ohm		
		Average measured RTD input on IO5:99999999.999Ohm		
		Average measured RTD input on IO6:99999999.999Ohm		
		Average measured RTD input on IO7:99999999.999Ohm		
		Average measured RTD input on IO8:99999999.999Ohm		

This command shows for RTD INPUT IOs the average measured RTD value in Ohm.

The range is 0.000Ohm to 1000000.00Ohm

All IOs with a different usage type will return 99999999.999 to indicate, that no measurement is done.

GET AVG RTD INPUT IN OHM	ASCII READ COMMAND	#GAVGRTDIOHM<IONR><CR> Result: #GAVGRTDIOHM<IONR>:<IOxOhmDbl><CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDIOHM1<CR>		
	RX	#1,GAVGRTDIOHM3:99999999.999<CR>		
		Average measured RTD input on IO1:99999999.999Ohm		

This command shows for RTD INPUT IO <IONR> the average measured RTD value in Ohm.

The range is 0.000Ohm to 1000000.00Ohm

All IOs with a different usage type will return 99999999.999 to indicate, that no measurement is done.

#### RTD INPUTS PT100 CELSIUS

GET RTD INPUTS AS PT100 CELSIUS	ASCII READ COMMAND	#GRTDISPT100C<CR> Result: #GRTDISPT100C:<RTD1Dbl>,<RTD2Dbl>,...,<RTD8Dbl><CR>	ASCII	
	TX	#1,GRTDISPT100C<CR>		
	RX	#1,GRTDISPT100C:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as PT100 on IO1:9999.990°C		
		Actual measured RTD input as PT100 on IO2:9999.990°C		
		Actual measured RTD input as PT100 on IO3:9999.990°C		
		Actual measured RTD input as PT100 on IO4:9999.990°C		
		Actual measured RTD input as PT100 on IO5:9999.990°C		
		Actual measured RTD input as PT100 on IO6:9999.990°C		
		Actual measured RTD input as PT100 on IO7:9999.990°C		
		Actual measured RTD input as PT100 on IO8:9999.990°C		

This command shows for RTD INPUT IOs the actual measured RTD value linearized as PT100 sensor in °Celsius.

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET RTD INPUT AS PT100 CELSIUS	ASCII READ COMMAND	#GRTDIPT100C <IONR> <CR> Result: #GRTDIPT100C <IONR> : <IOxDbl> <CR>	ASCII	
	IONR	1		
	TX	#1,GRTDIPT100C1<CR>		
	RX	#1,GRTDIPT100C3:9999.990<CR>		
		Actual measured RTD input as PT100 on IO1:9999.990°C		

This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as PT100 sensor in °Celsius

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVERAGE RTD INPUTS AS PT100 CELSIUS	ASCII READ COMMAND	#GAVGRTDISPT100C <CR> Result: #GAVGRTDISPT100C:<RTD1Dbl>,<RTD2Dbl>,...,<RTD8Dbl> <CR>	ASCII	
	TX	#1,GAVGRTDISPT100C <CR>		
	RX	#1,GAVGRTDISPT100C:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990 <CR>		
		Average measured RTD input as PT100 on IO1:9999.990°C		
		Average measured RTD input as PT100 on IO2:9999.990°C		
		Average measured RTD input as PT100 on IO3:9999.990°C		
		Average measured RTD input as PT100 on IO4:9999.990°C		
		Average measured RTD input as PT100 on IO5:9999.990°C		
		Average measured RTD input as PT100 on IO6:9999.990°C		
		Average measured RTD input as PT100 on IO7:9999.990°C		
		Average measured RTD input as PT100 on IO8:9999.990°C		

This command shows for RTD INPUT IOs the average measured RTD value linearized as PT100 sensor in °Celsius.

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVG RTD INPUT AS PT100 CELSIUS	ASCII READ COMMAND	#GAVGRTDIPT100C <IONR> <CR> Result: #GAVGRTDIPT100C <IONR> : <IOxDbl> <CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDIPT100C1<CR>		
	RX	#1,GAVGRTDIPT100C1:9999.990<CR>		
		Average measured RTD input as PT100 on IO1:9999.990°C		

This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as PT100 sensor in °Celsius

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

### RTD INPUTS PT1000 CELSIUS

GET RTD INPUTS AS PT1000 CELSIUS	ASCII READ COMMAND	#GRTDISPT1000C <CR> Result: #GRTDISPT1000C:<RTD1Dbl>,<RTD2Dbl>,...,<RTD8Dbl> <CR>	ASCII	
-------------------------------------	--------------------------	---	-------	--

	TX	#1,GRTDISPT1000C<CR>		
	RX	#1,GRTDISPT1000C:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as PT1000 on IO1:9999.990°C		
		Actual measured RTD input as PT1000 on IO2:9999.990°C		
		Actual measured RTD input as PT1000 on IO3:9999.990°C		
		Actual measured RTD input as PT1000 on IO4:9999.990°C		
		Actual measured RTD input as PT1000 on IO5:9999.990°C		
		Actual measured RTD input as PT1000 on IO6:9999.990°C		
		Actual measured RTD input as PT1000 on IO7:9999.990°C		
		Actual measured RTD input as PT1000 on IO8:9999.990°C		

This command shows for RTD INPUT IOs the actual measured RTD value linearized as PT1000 sensor in °Celsius.

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET RTD INPUT AS PT1000 CELSIUS	ASCII READ COMMAND	#GRTDIPT1000C<IONR><CR> Result: #GRTDIPT1000C<IONR>:<IOxDbl><CR>	ASCII	
	IONR	1		
	TX	#1,GRTDIPT1000C1<CR>		
	RX	#1,GRTDIPT1000C3:9999.990<CR>		
		Actual measured RTD input as PT1000 on IO1:9999.990°C		

This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as PT1000 sensor in °Celsius

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVERAGE RTD INPUTS AS PT1000 CELSIUS	ASCII READ COMMAND	#GAVGRTDISPT1000C<CR> Result: #GAVGRTDISPT1000C:<RTD1Dbl>,<RTD2Dbl>,...,<RTD8Dbl><CR>	ASCII	
	TX	#1,GAVGRTDISPT1000C<CR>		
	RX	#1,GAVGRTDISPT1000C:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Average measured RTD input as PT1000 on IO1:9999.990°C		
		Average measured RTD input as PT1000 on IO2:9999.990°C		
		Average measured RTD input as PT1000 on IO3:9999.990°C		
		Average measured RTD input as PT1000 on IO4:9999.990°C		
		Average measured RTD input as PT1000 on IO5:9999.990°C		
		Average measured RTD input as PT1000 on IO6:9999.990°C		
		Average measured RTD input as PT1000 on IO7:9999.990°C		
		Average measured RTD input as PT1000 on IO8:9999.990°C		

This command shows for RTD INPUT IOs the average measured RTD value linearized as PT1000 sensor in °Celsius.

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVG RTD INPUT AS PT1000 CELSIUS	ASCII READ COMMAND	#GAVGRTDIPT1000C<IONR><CR> Result: #GAVGRTDIPT1000C<IONR>:<IOxDbl><CR>	ASCII	
	IONR	1		

	TX	#1,GAVGRDIP1000C1<CR>		
	RX	#1,GAVGRDIP1000C1:9999.990<CR>		
		Average measured RTD input as PT1000 on IO1:9999.990°C		
This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as PT1000 sensor in °Celsius -999.990: Temperature is lower than 50°C +999.990: Temperature is higher than 130°C All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
<b>RTD INPUTS NI1000-DIN43760 CELSIUS</b>				
GET RTD INPUTS AS NI1000 DIN43760 CELSIUS	ASCII READ COMMAND	#GRTDISNI1000DIN43760C<CR> Result: #GRTDISNI1000DIN43760C:<RTD1DbI>,<RTD2DbI>,...,<RTD8DbI> <CR>	ASCII	
	TX	#1,GRTDISNI1000DIN43760C<CR>		
	RX	#1,GRTDISNI1000DIN43760C:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as NI1000-DIN43760 on IO1:9999.990°C		
		Actual measured RTD input as NI1000-DIN43760 on IO2:9999.990°C		
		Actual measured RTD input as NI1000-DIN43760 on IO3:9999.990°C		
		Actual measured RTD input as NI1000-DIN43760 on IO4:9999.990°C		
		Actual measured RTD input as NI1000-DIN43760 on IO5:9999.990°C		
		Actual measured RTD input as NI1000-DIN43760 on IO6:9999.990°C		
		Actual measured RTD input as NI1000-DIN43760 on IO7:9999.990°C		
		Actual measured RTD input as NI1000-DIN43760 on IO8:9999.990°C		
This command shows for RTD INPUT IOs the actual measured RTD value linearized as NI1000 DIN43760 sensor in °Celsius. -999.990: Temperature is lower than 50°C +999.990: Temperature is higher than 130°C All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET RTD INPUT AS NI1000 DIN43760 CELSIUS	ASCII READ COMMAND	#GRTDINI1000DIN43760C<IONR> <CR> Result: #GRTDINI1000DIN43760C<IONR>:<IOxDbI> <CR>	ASCII	
	IONR	1		
	TX	#1,GRTDINI1000DIN43760C1<CR>		
	RX	#1,GRTDINI1000DIN43760C3:9999.990<CR>		
		Actual measured RTD input as NI1000-DIN43760 on IO1:9999.990°C		
This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as NI1000 DIN43760 sensor in °Celsius. -999.990: Temperature is lower than 50°C +999.990: Temperature is higher than 130°C All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET AVERAGE RTD INPUTS AS NI1000 DIN43760 CELSIUS	ASCII READ COMMAND	#GAVGRDISNI1000DIN43760C<CR> Result: #GAVGRDISNI1000DIN43760C:<RTD1DbI>,<RTD2DbI>,...,<RTD8DbI> <CR>	ASCII	
	TX	#1,GAVGRDISNI1000DIN43760C<CR>		
	RX	#1,GAVGRDISNI1000DIN43760C:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Average measured RTD input as NI1000-DIN43760 on IO1:9999.990°C		
		Average measured RTD input as NI1000-DIN43760 on IO2:9999.990°C		
		Average measured RTD input as NI1000-DIN43760 on IO3:9999.990°C		
		Average measured RTD input as NI1000-DIN43760 on IO4:9999.990°C		

		Average measured RTD input as NI1000-DIN43760 on IO5:9999.990°C		
		Average measured RTD input as NI1000-DIN43760 on IO6:9999.990°C		
		Average measured RTD input as NI1000-DIN43760 on IO7:9999.990°C		
		Average measured RTD input as NI1000-DIN43760 on IO8:9999.990°C		

This command shows for RTD INPUT IOs the average measured RTD value linearized as NI1000 DIN43760 sensor in °Celsius.

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVG RTD INPUT AS NI1000 DIN43760 CELSIUS	ASCII READ COMMAND	#GAVGRTDINI1000DIN43760C<IONR> <CR> Result: #GAVGRTDINI1000DIN43760C<IONR>:<IOxDbl> <CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDINI1000DIN43760C1<CR>		
	RX	#1,GAVGRTDINI1000DIN43760C1:9999.990<CR>		
		Average measured RTD input as NI1000-DIN43760 on IO1:9999.990°C		

This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as NI1000 DIN43760 sensor in °Celsius

-999.990: Temperature is lower than 50°C

+999.990: Temperature is higher than 130°C

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

#### RTD INPUTS PT100 KELVIN

GET RTD INPUTS AS PT100 KELVIN	ASCII READ COMMAND	#GRTDISPT100K<CR> Result: #GRTDISPT100K:<RTD1Dbl>,<RTD2Dbl>,...,<RTD8Dbl> <CR>	ASCII	
	TX	#1,GRTDISPT100K<CR>		
	RX	#1,GRTDISPT100K:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as PT100 on IO1:9999.990°K		
		Actual measured RTD input as PT100 on IO2:9999.990°K		
		Actual measured RTD input as PT100 on IO3:9999.990°K		
		Actual measured RTD input as PT100 on IO4:9999.990°K		
		Actual measured RTD input as PT100 on IO5:9999.990°K		
		Actual measured RTD input as PT100 on IO6:9999.990°K		
		Actual measured RTD input as PT100 on IO7:9999.990°K		
		Actual measured RTD input as PT100 on IO8:9999.990°K		

This command shows for RTD INPUT IOs the actual measured RTD value linearized as PT100 sensor in °Kelvin

-999.990: Temperature is lower than 223.15°K

+999.990: Temperature is higher than 403.15°K

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET RTD INPUT AS PT100 KELVIN	ASCII READ COMMAND	#GRTDIPT100K<IONR> <CR> Result: #GRTDIPT100K<IONR>:<IOxDbl> <CR>	ASCII	
	IONR	1		
	TX	#1,GRTDIPT100K1<CR>		
	RX	#1,GRTDIPT100K3:9999.990<CR>		
		Actual measured RTD input as PT100 on IO1:9999.990°K		



This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as PT100 sensor in °Kelvin

-999.990: Temperature is lower than 223.15°K

+999.990: Temperature is higher than 403.15°K

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVERAGE RTD INPUTS AS PT100 KELVIN	ASCII READ COMMAND	#GAVGRTDISPT100K<CR> Result: #GAVGRTDISPT100K:<RTD1DbI>,<RTD2DbI>,,,,,<RTD8DbI> <CR>	ASCII	
	TX	#1,GAVGRTDISPT100K<CR>		
	RX	#1,GAVGRTDISPT100K:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Average measured RTD input as PT100 on IO1:9999.990°K		
		Average measured RTD input as PT100 on IO2:9999.990°K		
		Average measured RTD input as PT100 on IO3:9999.990°K		
		Average measured RTD input as PT100 on IO4:9999.990°K		
		Average measured RTD input as PT100 on IO5:9999.990°K		
		Average measured RTD input as PT100 on IO6:9999.990°K		
		Average measured RTD input as PT100 on IO7:9999.990°K		
		Average measured RTD input as PT100 on IO8:9999.990°K		

This command shows for RTD INPUT IOs the average measured RTD value linearized as PT100 sensor in °Kelvin

-999.990: Temperature is lower than 223.15°K

+999.990: Temperature is higher than 403.15°K

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVG RTD INPUT AS PT100 KELVIN	ASCII READ COMMAND	#GAVGRTDIPT100K<IONR> <CR> Result: #GAVGRTDIPT100K<IONR>:<IOxDbI> <CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDIPT100K1<CR>		
	RX	#1,GAVGRTDIPT100K1:9999.990<CR>		
		Average measured RTD input as PT100 on IO1:9999.990°K		

This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as PT100 sensor in °Kelvin

-999.990: Temperature is lower than 223.15°K

+999.990: Temperature is higher than 403.15°K

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

#### RTD INPUTS PT1000 KELVIN

GET RTD INPUTS AS PT1000 KELVIN	ASCII READ COMMAND	#GRTDISPT1000K<CR> Result: #GRTDISPT1000K:<RTD1DbI>,<RTD2DbI>,,,,,<RTD8DbI> <CR>	ASCII	
	TX	#1,GRTDISPT1000K<CR>		
	RX	#1,GRTDISPT1000K:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as PT1000 on IO1:9999.990°K		
		Actual measured RTD input as PT1000 on IO2:9999.990°K		
		Actual measured RTD input as PT1000 on IO3:9999.990°K		
		Actual measured RTD input as PT1000 on IO4:9999.990°K		
		Actual measured RTD input as PT1000 on IO5:9999.990°K		
		Actual measured RTD input as PT1000 on IO6:9999.990°K		
		Actual measured RTD input as PT1000 on IO7:9999.990°K		

		Actual measured RTD input as PT1000 on IO8:9999.990°K		
This command shows for RTD INPUT IOs the actual measured RTD value linearized as PT1000 sensor in °Kelvin -999.990: Temperature is lower than 223.15°K +999.990: Temperature is higher than 403.15°K All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET RTD INPUT AS PT1000 KELVIN	ASCII READ COMMAND	#GRTDIPT1000K<IONR> <CR> Result: #GRTDIPT1000K<IONR>:<IOxDbl> <CR>	ASCII	
	IONR	1		
	TX	#1,GRTDIPT1000K1<CR>		
	RX	#1,GRTDIPT1000K3:9999.990<CR>		
		Actual measured RTD input as PT1000 on IO1:9999.990°K		
This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as PT1000 sensor in °Kelvin -999.990: Temperature is lower than 223.15°K +999.990: Temperature is higher than 403.15°K All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET AVERAGE RTD INPUTS AS PT1000 KELVIN	ASCII READ COMMAND	#GAVGRTDISPT1000K<CR> Result: #GAVGRTDISPT1000K:<RTD1Dbl>,<RTD2Dbl>,...,<RTD8Dbl> <CR>	ASCII	
	TX	#1,GAVGRTDISPT1000K<CR>		
	RX	#1,GAVGRTDISPT1000K:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Average measured RTD input as PT1000 on IO1:9999.990°K		
		Average measured RTD input as PT1000 on IO2:9999.990°K		
		Average measured RTD input as PT1000 on IO3:9999.990°K		
		Average measured RTD input as PT1000 on IO4:9999.990°K		
		Average measured RTD input as PT1000 on IO5:9999.990°K		
		Average measured RTD input as PT1000 on IO6:9999.990°K		
		Average measured RTD input as PT1000 on IO7:9999.990°K		
		Average measured RTD input as PT1000 on IO8:9999.990°K		
This command shows for RTD INPUT IOs the average measured RTD value linearized as PT1000 sensor in °Kelvin -999.990: Temperature is lower than 223.15°K +999.990: Temperature is higher than 403.15°K All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET AVG RTD INPUT AS PT1000 KELVIN	ASCII READ COMMAND	#GAVGRTDIPT1000K<IONR> <CR> Result: #GAVGRTDIPT1000K<IONR>:<IOxDbl> <CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDIPT1000K1<CR>		
	RX	#1,GAVGRTDIPT1000K1:9999.990<CR>		
		Average measured RTD input as PT1000 on IO1:9999.990°K		
This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as PT1000 sensor in °Kelvin -999.990: Temperature is lower than 223.15°K +999.990: Temperature is higher than 403.15°K All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
<b>RTD INPUTS NI1000-DIN43760 KELVIN</b>				

GET RTD INPUTS AS NI1000 DIN43760 KELVIN	ASCII READ COMMAND	#GRTDISNI1000DIN43760K<CR> Result: #GRTDISNI1000DIN43760K:<RTD1DbI>,<RTD2DbI>,...,<RTD8DbI><CR>	ASCII	
	TX	#1,GRTDISNI1000DIN43760K<CR>		
	RX	#1,GRTDISNI1000DIN43760K:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as NI1000-DIN43760 on IO1:9999.990°K		
		Actual measured RTD input as NI1000-DIN43760 on IO2:9999.990°K		
		Actual measured RTD input as NI1000-DIN43760 on IO3:9999.990°K		
		Actual measured RTD input as NI1000-DIN43760 on IO4:9999.990°K		
		Actual measured RTD input as NI1000-DIN43760 on IO5:9999.990°K		
		Actual measured RTD input as NI1000-DIN43760 on IO6:9999.990°K		
		Actual measured RTD input as NI1000-DIN43760 on IO7:9999.990°K		
		Actual measured RTD input as NI1000-DIN43760 on IO8:9999.990°K		

This command shows for RTD INPUT IOs the actual measured RTD value linearized as NI1000 DIN43760 sensor in °Kelvin

-999.990: Temperature is lower than 223.15°K

+999.990: Temperature is higher than 403.15°K

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET RTD INPUT AS NI1000 DIN43760 KELVIN	ASCII READ COMMAND	#GRTDINI1000DIN43760K<IONR><CR> Result: #GRTDINI1000DIN43760K<IONR>:<IOxDbI><CR>	ASCII	
	IONR	1		
	TX	#1,GRTDINI1000DIN43760K1<CR>		
	RX	#1,GRTDINI1000DIN43760K3:9999.990<CR>		
		Actual measured RTD input as NI1000-DIN43760 on IO1:9999.990°K		

This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as NI1000 DIN43760 sensor in °Kelvin

-999.990: Temperature is lower than 223.15°K

+999.990: Temperature is higher than 403.15°K

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVERAGE RTD INPUTS AS NI1000 DIN43760 KELVIN	ASCII READ COMMAND	#GAVGRTDISNI1000DIN43760K<CR> Result: #GAVGRTDISNI1000DIN43760K:<RTD1DbI>,<RTD2DbI>,...,<RTD8DbI><CR>	ASCII	
	TX	#1,GAVGRTDISNI1000DIN43760K<CR>		
	RX	#1,GAVGRTDISNI1000DIN43760K:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Average measured RTD input as NI1000-DIN43760 on IO1:9999.990°K		
		Average measured RTD input as NI1000-DIN43760 on IO2:9999.990°K		
		Average measured RTD input as NI1000-DIN43760 on IO3:9999.990°K		
		Average measured RTD input as NI1000-DIN43760 on IO4:9999.990°K		
		Average measured RTD input as NI1000-DIN43760 on IO5:9999.990°K		
		Average measured RTD input as NI1000-DIN43760 on IO6:9999.990°K		
		Average measured RTD input as NI1000-DIN43760 on IO7:9999.990°K		
		Average measured RTD input as NI1000-DIN43760 on IO8:9999.990°K		

This command shows for RTD INPUT IOs the average measured RTD value linearized as NI1000 DIN43760 sensor in °Kelvin

-999.990: Temperature is lower than 223.15°K

+999.990: Temperature is higher than 403.15°K

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVG RTD INPUT AS NI1000 DIN43760 KELVIN	ASCII READ COMMAND	#GAVGRTDINI1000DIN43760K<IONR><CR> Result: #GAVGRTDINI1000DIN43760K<IONR>:<IOxDbl><CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDINI1000DIN43760K1<CR>		
	RX	#1,GAVGRTDINI1000DIN43760K1.9999.990<CR>		
		Average measured RTD input as NI1000-DIN43760 on IO1:9999.990°K		
This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as NI1000 DIN43760 sensor in °Kelvin -999.990: Temperature is lower than 223.15°K +999.990: Temperature is higher than 403.15°K All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
<b>RTD INPUTS PT100 FAHRENHEIT</b>				
GET RTD INPUTS AS PT100 FAHRENHEIT	ASCII READ COMMAND	#GRTDISPT100F<CR> Result: #GRTDISPT100F:<RTD1Dbl>,<RTD2Dbl>,<RTD8Dbl><CR>	ASCII	
	TX	#1,GRTDISPT100F<CR>		
	RX	#1,GRTDISPT100F:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as PT100 on IO1:9999.990°F		
		Actual measured RTD input as PT100 on IO2:9999.990°F		
		Actual measured RTD input as PT100 on IO3:9999.990°F		
		Actual measured RTD input as PT100 on IO4:9999.990°F		
		Actual measured RTD input as PT100 on IO5:9999.990°F		
		Actual measured RTD input as PT100 on IO6:9999.990°F		
		Actual measured RTD input as PT100 on IO7:9999.990°F		
		Actual measured RTD input as PT100 on IO8:9999.990°F		
This command shows for RTD INPUT IOs the actual measured RTD value linearized as PT100 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET RTD INPUT AS PT100 FAHRENHEIT	ASCII READ COMMAND	#GRTDIPT100F<IONR><CR> Result: #GRTDIPT100F<IONR>:<IOxDbl><CR>	ASCII	
	IONR	1		
	TX	#1,GRTDIPT100F1<CR>		
	RX	#1,GRTDIPT100F3:9999.990<CR>		
		Actual measured RTD input as PT100 on IO1:9999.990°F		
This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as PT100 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET AVERAGE RTD INPUTS AS PT100 FAHRENHEIT	ASCII READ COMMAND	#GAVGRTDISPT100F<CR> Result: #GAVGRTDISPT100F:<RTD1Dbl>,<RTD2Dbl>,<RTD8Dbl><CR>	ASCII	
	TX	#1,GAVGRTDISPT100F<CR>		
	RX	#1,GAVGRTDISPT100F:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		

		Average measured RTD input as PT100 on IO1:9999.990°F		
		Average measured RTD input as PT100 on IO2:9999.990°F		
		Average measured RTD input as PT100 on IO3:9999.990°F		
		Average measured RTD input as PT100 on IO4:9999.990°F		
		Average measured RTD input as PT100 on IO5:9999.990°F		
		Average measured RTD input as PT100 on IO6:9999.990°F		
		Average measured RTD input as PT100 on IO7:9999.990°F		
		Average measured RTD input as PT100 on IO8:9999.990°F		

This command shows for RTD INPUT IOs the average measured RTD value linearized as PT100 sensor in °Fahrenheit

-999.990: Temperature is lower than -58°F

+999.990: Temperature is higher than 266°F

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET AVG RTD INPUT AS PT100 FAHRENHEIT	ASCII READ COMMAND	#GAVGRTDIPT100F<IONR> <CR> Result: #GAVGRTDIPT100F<IONR>:<IOxDbl> <CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDIPT100F1<CR>		
	RX	#1,GAVGRTDIPT100F1:9999.990<CR>		
		Average measured RTD input as PT100 on IO1:9999.990°F		

This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as PT100 sensor in °Fahrenheit

-999.990: Temperature is lower than -58°F

+999.990: Temperature is higher than 266°F

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

#### RTD INPUTS PT1000 FAHRENHEIT

GET RTD INPUTS AS PT1000 FAHRENHEIT	ASCII READ COMMAND	#GRTDISPT1000F<CR> Result: #GRTDISPT1000F:<RTD1DbI>,<RTD2DbI>,...,<RTD8DbI> <CR>	ASCII	
	TX	#1,GRTDISPT1000F<CR>		
	RX	#1,GRTDISPT1000F:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as PT1000 on IO1:9999.990°F		
		Actual measured RTD input as PT1000 on IO2:9999.990°F		
		Actual measured RTD input as PT1000 on IO3:9999.990°F		
		Actual measured RTD input as PT1000 on IO4:9999.990°F		
		Actual measured RTD input as PT1000 on IO5:9999.990°F		
		Actual measured RTD input as PT1000 on IO6:9999.990°F		
		Actual measured RTD input as PT1000 on IO7:9999.990°F		
		Actual measured RTD input as PT1000 on IO8:9999.990°F		

This command shows for RTD INPUT IOs the actual measured RTD value linearized as PT1000 sensor in °Fahrenheit

-999.990: Temperature is lower than -58°F

+999.990: Temperature is higher than 266°F

All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.

GET RTD INPUT AS PT1000 FAHRENHEIT	ASCII READ COMMAND	#GRTDIPT1000F<IONR> <CR> Result: #GRTDIPT1000F<IONR>:<IOxDbl> <CR>	ASCII	
	IONR	1		
	TX	#1,GRTDIPT1000F1<CR>		

	RX	#1,GRTDIPT1000F3:9999.990<CR>		
		Actual measured RTD input as PT1000 on IO1:9999.990°F		
This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as PT1000 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET AVERAGE RTD INPUTS AS PT1000 FAHRENHEIT	ASCII READ COMMAND	#GAVGRTDISPT1000F<CR> Result: #GAVGRTDISPT1000F:<RTD1DbI>,<RTD2DbI>,...,<RTD8DbI> <CR>	ASCII	
	TX	#1,GAVGRTDISPT1000F<CR>		
	RX	#1,GAVGRTDISPT1000F:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Average measured RTD input as PT1000 on IO1:9999.990°F		
		Average measured RTD input as PT1000 on IO2:9999.990°F		
		Average measured RTD input as PT1000 on IO3:9999.990°F		
		Average measured RTD input as PT1000 on IO4:9999.990°F		
		Average measured RTD input as PT1000 on IO5:9999.990°F		
		Average measured RTD input as PT1000 on IO6:9999.990°F		
		Average measured RTD input as PT1000 on IO7:9999.990°F		
		Average measured RTD input as PT1000 on IO8:9999.990°F		
This command shows for RTD INPUT IOs the average measured RTD value linearized as PT1000 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET AVG RTD INPUT AS PT1000 FAHRENHEIT	ASCII READ COMMAND	#GAVGRTDIPT1000F<IONR> <CR> Result: #GAVGRTDIPT1000F<IONR>:<IOxDbI> <CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDIPT1000F1<CR>		
	RX	#1,GAVGRTDIPT1000F1:9999.990<CR>		
		Average measured RTD input as PT1000 on IO1:9999.990°F		
This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as PT1000 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
<b>RTD INPUTS NI1000-DIN43760 FAHRENHEIT</b>				
GET RTD INPUTS AS NI1000 DIN43760 FAHRENHEIT	ASCII READ COMMAND	#GRTDISNI1000DIN43760F<CR> Result: #GRTDISNI1000DIN43760F:<RTD1DbI>,<RTD2DbI>,...,<RTD8DbI> <CR>	ASCII	
	TX	#1,GRTDISNI1000DIN43760F<CR>		
	RX	#1,GRTDISNI1000DIN43760F:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Actual measured RTD input as NI1000-DIN43760 on IO1:9999.990°F		
		Actual measured RTD input as NI1000-DIN43760 on IO2:9999.990°F		
		Actual measured RTD input as NI1000-DIN43760 on IO3:9999.990°F		
		Actual measured RTD input as NI1000-DIN43760 on IO4:9999.990°F		
		Actual measured RTD input as NI1000-DIN43760 on IO5:9999.990°F		

		Actual measured RTD input as NI1000-DIN43760 on IO6:9999.990°F		
		Actual measured RTD input as NI1000-DIN43760 on IO7:9999.990°F		
		Actual measured RTD input as NI1000-DIN43760 on IO8:9999.990°F		
This command shows for RTD INPUT IOs the actual measured RTD value linearized as NI1000 DIN43760 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET RTD INPUT AS NI1000 DIN43760 FARENEHEIT	ASCII READ COMMAND	#GRTDINI1000DIN43760F<IONR><CR> Result: #GRTDINI1000DIN43760F<IONR>:<IOxDBl><CR>	ASCII	
	IONR	1		
	TX	#1,GRTDINI1000DIN43760F1<CR>		
	RX	#1,GRTDINI1000DIN43760F3:9999.990<CR>		
		Actual measured RTD input as NI1000-DIN43760 on IO1:9999.990°F		
This command shows for RTD INPUT IO <IONR> the actual measured RTD value linearized as NI1000 DIN43760 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET AVERAGE RTD INPUTS AS NI1000 DIN43760 FARENEHEIT	ASCII READ COMMAND	#GAVGRTDISNI1000DIN43760F<CR> Result: #GAVGRTDISNI1000DIN43760F:<RTD1DbI>,<RTD2DbI>,...,<RTD8DbI><CR>	ASCII	
	TX	#1,GAVGRTDISNI1000DIN43760F<CR>		
	RX	#1,GAVGRTDISNI1000DIN43760F:9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990,9999.990<CR>		
		Average measured RTD input as NI1000-DIN43760 on IO1:9999.990°F		
		Average measured RTD input as NI1000-DIN43760 on IO2:9999.990°F		
		Average measured RTD input as NI1000-DIN43760 on IO3:9999.990°F		
		Average measured RTD input as NI1000-DIN43760 on IO4:9999.990°F		
		Average measured RTD input as NI1000-DIN43760 on IO5:9999.990°F		
		Average measured RTD input as NI1000-DIN43760 on IO6:9999.990°F		
		Average measured RTD input as NI1000-DIN43760 on IO7:9999.990°F		
		Average measured RTD input as NI1000-DIN43760 on IO8:9999.990°F		
This command shows for RTD INPUT IOs the average measured RTD value linearized as NI1000 DIN43760 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				
GET AVG RTD INPUT AS NI1000 DIN43760 FARENEHEIT	ASCII READ COMMAND	#GAVGRTDINI1000DIN43760F<IONR><CR> Result: #GAVGRTDINI1000DIN43760F<IONR>:<IOxDBl><CR>	ASCII	
	IONR	1		
	TX	#1,GAVGRTDINI1000DIN43760F1<CR>		
	RX	#1,GAVGRTDINI1000DIN43760F1:9999.990<CR>		
		Average measured RTD input as NI1000-DIN43760 on IO1:9999.990°F		
This command shows for RTD INPUT IO <IONR> the average measured RTD value linearized as NI1000 DIN43760 sensor in °Fahrenheit -999.990: Temperature is lower than -58°F +999.990: Temperature is higher than 266°F All IOs with a different usage type will return 9999.990 to indicate, that no measurement is done.				

Register NAME Command NAME	MODBUS Register ASCII Command	Register VALUE ASCII Command	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>ASCII COMMANDS</b>						
<b>INTER PROCESSOR COMMUNICATION</b>						
AIOX IS ONLINE	ASCII READ COMMAND	#G16AIOXISONLINE<CR> Result: #G16AIOXISONLINE:<YesNo><CR>			ASCII	
	TX	#1,G16AIOXISONLINE<CR>				
	RX	#1,G16AIOXISONLINE:YES<CR>				
		Actual communication state co-processor to AIOX processor:YES				
This command returns the actual state of the serial communication between the ARM co-processor and the additional processor for the AIOX. YES: Currently the communication is fine NO: There is a mayor problem/hardware fault between the two processors						
<b>CHIP COMMUNICATION</b>						
ARE CHIPS ONLINE	ASCII READ COMMAND	#ARECHIPSONLINE<CR> Result: #ARECHIPSONLINE:<Chip1IsOnline>,<Chip2IsOnline><CR>			ASCII	
	TX	#1,ARECHIPSONLINE<CR>				
	RX	#1,ARECHIPSONLINE:1,1<CR>				
		Actual state of CHIP1:1				
		Actual state of CHIP2:1				
This command shows the current SPI communication status with each chip. ChipxIsOnline: =0: Currently there is a SPI error in the communication and the chip is offline =1: The SPI communication with the chip is ok						
IS CHIPx ONLINE	ASCII READ COMMAND	#ISCHIPONLINE<CHIPNR><CR> Result: #ISCHIPONLINE<CHIPNR>:<ChipxIsOnline><CR>			ASCII	
	CHIPNR	1				
	TX	#1,ISCHIPONLINE1<CR>				
	RX	#1,ISCHIPONLINE1:1<CR>				
		Actual state of CHIP1:1				
This command shows the current SPI communication status with chip <CHIPNR>. =0: Currently there is a SPI error in the communication and the chip is offline =1: The SPI communication with the chip is ok						
GET ALL SPI ERRORS	ASCII READ COMMAND	#GASPIERRS<CR> Result: #GASPIERRS:<SPI1ErrDec>,<SPI2ErrDec>,<SPI1ErrHex>,<SPI2ErrHex><CR>			ASCII	
	TX	#1,GASPIERRS<CR>				
	RX	#1,GASPIERRS:0,0,0x0,0x0<CR>				
		Actual SPI errors of CHIP1:0				
		Actual SPI errors of CHIP2:0				
This command shows the acutal SPI errors since power up for every chip						



GET SPI ERROR	ASCII READ COMMAND	#GSPERR<CHIPNR><CR> Result: #GSPERR<CHIPNR>:<SPlexErrDec>,<SPlexErrHex><CR>	ASCII	
	CHIPNR	1		
	TX	#1,GSPERR1<CR>		
	RX	#1,GSPERR1:0,0x0<CR>		
		Actual SPI errors of CHIP1:0		
This command shows the actual SPI errors since power up for chip <CHIPNR>				
GET CHIP STATEMACHINES	ASCII READ COMMAND	#GCHIPSMS<CR> Result: #GCHIPSMS:<Chip1StateMachine>,<Chip2StateMachine><CR>	ASCII	
	TX	#1,GCHIPSMS<CR>		
	RX	#1,GCHIPSMS:12090,12090<CR>		
		Actual state of CHIP1:12090		
		Actual state of CHIP2:12090		
This command shows the actual state of the internal communication state machine for all chips				
GET CHIP STATEMACHINE	ASCII READ COMMAND	#GCHIPSM<CHIPNR><CR> Result: #GCHIPSM<CHIPNR>:<ChipxStateMachine><CR>	ASCII	
	CHIPNR	1		
	TX	#1,GCHIPSM1<CR>		
	RX	#1,GCHIPSM1:12010<CR>		
		Actual state of CHIP1:12010		
This command shows the actual state of the internal communication state machine for chip <CHIPNR>				
RESET CHIP STATEMACHINE	ASCII WRITE COMMAND	#RCHIPSM<CHIPNR><CR> Result: #OK<CR>	ASCII	YES
	CHIPNR	1		
	TX	#1,RCHIPSM1<CR>		
	RX	N/A		
This command restarts the state machine for chip <CHIPNR>. The affected chip will be resetted & initialized completely				
<b>CHIP STATUS</b>				
GET ALL LIVE STATES	ASCII READ COMMAND	#GALSTATES<CR> Result: #GALSTATE:<Chip1LiveStateDec>,<Chip2LiveStateDec>, <Chip1LiveStateHex>,<Chip2LiveStateHex><CR>	ASCII	
	TX	#1,GALSTATES<CR>		
	RX	#1,GALSTATES:27648,30720,0x6C00,0x7800<CR>		
		Actual live state of CHIP1:27648,0x6C00		
		Actual live state of CHIP2:30720,0x7800		

Returns the actual chip status of all chips.

Each result bit stands for a different state:

Bit 0: VI\_ERR\_CURR\_A: Status of channel A:Voltage or current error detected on Channel A. This bit is interpreted differently depending on which of the following IO function selected:

Voltage output: short-circuit error. The error condition is debounced for 2 ms before the status bit is set.

Current output: open circuit error. The error condition is debounced for 2 ms before the status bit is set.

Current input, loop powered: short-circuit error. A short to ground is detected

Current input, externally powered: short-circuit error. A current source >25 mA is detected

Bit 1: VI\_ERR\_CURR\_B: Status of voltage input B. Same like VI\_ERR\_CURR\_A

Bit 2: VI\_ERR\_CURR\_C: Status of voltage input C. Same like VI\_ERR\_CURR\_A

Bit 3: VI\_ERR\_CURR\_D: Status of voltage input D. Same like VI\_ERR\_CURR\_A

Bit 4: HI\_TEMP\_STATUS: If the die temperature is typically at or above 115°C, the HI\_TEMP\_STATUS bit is asserted

Bit 5: CHARGE\_PUMP\_STATUS: Charge pump error detected.

Bit 6: ALDO5V\_STATUS: ALDO5V Power Supply Monitor Error. This bit is asserted when the ALDO5V pin falls below 4.05 V. Usually ~5V.

Bit 7: AVDD\_STATUS: AVDD Power Supply Monitor Error. This bit is asserted when the AVDD pin falls below 9.26 V. Usually ~17V.

Bit 8: DVCC\_STATUS: DVCC Power Supply Monitor Error. This bit is asserted when the DVCC pin falls below 1.93 V. Usually ~3.3V.

Bit 9: ALDO1V8\_STATUS: ALDO1V8 Power Supply Monitor Error. This bit is asserted when the ALDO1V8 pin falls below 1.35 V. Usually ~1.8V.

Bit 10-12: ADC\_CH\_CURR: Current converted channel of the ADC (0:A, 1:B, 2:C, 3:D, 4:Diagnostic 0, 5:Diagnostic 1, 6:Diagnostic 2, 7:Diagnostic 3)

Bit 13: ADC\_BUSY: ADC busy status bit.

Bit 14: ADC\_DATA\_RDY:ADC data ready. The ADC\_DATA\_RDY bit asserts when a conversion cycle has completed. The bit stays asserted until a user writes 1 to clear the bit. In single conversion mode, the ADC\_RDY pin follows the ADC\_DATA\_RDY bit and only deasserts when the ADC\_DATA\_RDY bit is cleared. In continuous conversion mode, the ADC\_RDY pin returns high after 24 µs.

Bit 15: RESERVED: Reserved

GET LIVE STATE	ASCII READ COMMAND	#GLSTATE<CHIPNR> <CR> Result: #GLSTATE<CHIPNR>:<ChipxLiveDataDec>,<ChipxLiveDataHex> <CR>	ASCII
	CHIPNR	1	
	TX	#1,GLSTATE1<CR>	
	RX	#1,GLSTATE4:29696,0x7400<CR>	
		Actual live state of CHIP1:29696,0x7400	
		Live state bit 0: VI_ERR_CURR_A:0	
		Live state bit 1: VI_ERR_CURR_B:0	
		Live state bit 2: VI_ERR_CURR_C:0	
		Live state bit 3: VI_ERR_CURR_D:0	
		Live state bit 4: HI_TEMP_STATUS:0	
		Live state bit 5: CHARGE_PUMP_STATUS:0	
		Live state bit 6: ALDO5V_STATUS:0	
		Live state bit 7: AVDD_STATUS:0	
		Live state bit 8: DVCC_STATUS:0	
		Live state bit 9: ALDO1V8_STATUS:0	
		Live state bit 10-12: ADC_CH_CURR:5	
		Live state bit 13: ADC_BUSY:1	
		Live state bit 14: ADC_DATA_RDY:0	
		Live state bit 15: RESERVED:0	

Returns the actual chip status of chip <CHIPNR>

Each result bit stands for a different state:

Bit 0: VI\_ERR\_CURR\_A: Status of channel A:Voltage or current error detected on Channel A. This bit is interpreted differently depending on which of the following IO function selected:

Voltage output: short-circuit error. The error condition is debounced for 2 ms before the status bit is set.

Current output: open circuit error. The error condition is debounced for 2 ms before the status bit is set.

Current input, loop powered: short-circuit error. A short to ground is detected

Current input, externally powered: short-circuit error. A current source >25 mA is detected

Bit 1: VI\_ERR\_CURR\_B: Status of voltage input B. Same like VI\_ERR\_CURR\_A

Bit 2: VI\_ERR\_CURR\_C: Status of voltage input C. Same like VI\_ERR\_CURR\_A

Bit 3: VI\_ERR\_CURR\_D: Status of voltage input D. Same like VI\_ERR\_CURR\_A

Bit 4: HI\_TEMP\_STATUS: If the die temperature is typically at or above 115°C, the HI\_TEMP\_STATUS bit is asserted

Bit 5: CHARGE\_PUMP\_STATUS: Charge pump error detected.

Bit 6: ALDO5V\_STATUS: ALDO5V Power Supply Monitor Error. This bit is asserted when the ALDO5V pin falls below 4.05 V. Usually ~5V.

Bit 7: AVDD\_STATUS: AVDD Power Supply Monitor Error. This bit is asserted when the AVDD pin falls below 9.26 V. Usually ~17V.

Bit 8: DVCC\_STATUS: DVCC Power Supply Monitor Error. This bit is asserted when the DVCC pin falls below 1.93 V. Usually ~3.3V.

Bit 9: ALDO1V8\_STATUS: ALDO1V8 Power Supply Monitor Error. This bit is asserted when the ALDO1V8 pin falls below 1.35 V. Usually ~1.8V.

Bit 10-12: ADC\_CH\_CURR: Current converted channel of the ADC (0:A, 1:B, 2:C, 3:D, 4:Diagnostic 0, 5:Diagnostic 1, 6:Diagnostic 2, 7:Diagnostic 3)

Bit 13: ADC\_BUSY: ADC busy status bit.

Bit 14: ADC\_DATA\_RDY:ADC data ready. The ADC\_DATA\_RDY bit asserts when a conversion cycle has completed. The bit stays asserted until a user writes 1 to clear the bit. In single conversion mode, the ADC\_RDY pin follows the ADC\_DATA\_RDY bit and only deasserts when the ADC\_DATA\_RDY bit is cleared. In continuous conversion mode, the ADC\_RDY pin returns high after 24 µs.

Bit 15: RESERVED: Reserved

GET ALL ALERT STATES	ASCII READ COMMAND	#GAASTATES<CR> Result: #GAASTATES:<Chip1AlertStateDec>,<Chip2AlertStateDec>, <Chip1AlertStateHex>,<Chip2AlertStateHex> <CR>	ASCII	
	TX	#1,GAASTATES<CR>		
	RX	#1,GAASTATES:33792,33792,0x8400,0x8400<CR>		
		Actual alert state of CHIP1:33792,0x8400		
		Actual alert state of CHIP2:33792,0x8400		

Returns the actual alert states for all chips.

Each result bit stands for a different state:

Bit 0: VI\_ERR\_CURR\_A: Status of channel A:Voltage or current error detected on Channel A. This bit is interpreted differently depending on which of the following IO function selected:

Voltage output: short-circuit error. The error condition is debounced for 2 ms before the status bit is set.

Current output: open circuit error. The error condition is debounced for 2 ms before the status bit is set.

Current input, loop powered: short-circuit error. A short to ground is detected

Current input, externally powered: short-circuit error. A current source >25 mA is detected

Bit 1: VI\_ERR\_CURR\_B: Status of voltage input B. Same like VI\_ERR\_CURR\_A

Bit 2: VI\_ERR\_CURR\_C: Status of voltage input C. Same like VI\_ERR\_CURR\_A

Bit 3: VI\_ERR\_CURR\_D: Status of voltage input D. Same like VI\_ERR\_CURR\_A

Bit 4: HI\_TEMP\_STATUS: If the die temperature is typically at or above 115°C, the HI\_TEMP\_STATUS bit is asserted

Bit 5: CHARGE\_PUMP\_STATUS: Charge pump error detected.

Bit 6: ALDO5V\_STATUS: ALDO5V Power Supply Monitor Error. This bit is asserted when the ALDO5V pin falls below 4.05 V. Usually ~5V.

Bit 7: AVDD\_STATUS: AVDD Power Supply Monitor Error. This bit is asserted when the AVDD pin falls below 9.26 V. Usually ~17V.

Bit 8: DVCC\_STATUS: DVCC Power Supply Monitor Error. This bit is asserted when the DVCC pin falls below 1.93 V. Usually ~3.3V.

Bit 9: ALDO1V8\_STATUS: ALDO1V8 Power Supply Monitor Error. This bit is asserted when the ALDO1V8 pin falls below 1.35 V. Usually ~1.8V.

Bit 10: ADC\_CONV\_ERR: ADC Conversion Error. ADC results may be outside the selected measurement range.

Bit 11: ADC\_SAT\_ERR: ADC Saturation Error. ADC may be outside the user selected measurement range.

Bit 12: SPI\_SCLK\_CNT\_ERR: SPI SCLK count error detected. This bit is asserted if an SPI command is applied but 32 SCLKs are not provided.

Bit 13: SPI\_CRC\_ERR: SPI CRC error detected. This bit is asserted if an invalid CRC is received.

Bit 14: CAL\_MEM\_ERR: Calibration Memory Error. This flag asserts under the following two conditions: When a calibration memory CRC error or an uncorrectable error correcting code (ECC) error is detected on the calibration memory upload. It is not possible to clear this bit if there is a CRC error or uncorrectable ECC error. It is recommended to reset the device and check the supplies in this situation. When there is an attempted SPI access to a register before the calibration memory refresh is complete. Do not address the device until the calibration memory is refreshed. Writing 1 to this bit clears the flag, if the flag is asserted due to this condition.

Bit 15: RESET\_OCCURRED: Reset occurred. This bit is asserted after a reset event, which asserts the ALERT pin after the reset. Write a 1 to this bit to clear the flag. Note that a mask bit is not provided for this bit.

GET ALERT STATE	ASCII READ COMMAND	#GASTATE<CHIPNR> <CR> Result: #GASTATE<CHIPNR>:<ChipxAlertState> <CR>	ASCII	
	CHIPNR	1		
	TX	#1,GASTATE1<CR>		
	RX	#1,GASTATE4:33792,0x8400<CR>		
		Actual alert state of CHIP1:33792,0x8400		
		Alert state bit 0: VI_ERR_A:0		
		Alert state bit 1: VI_ERR_B:0		
		Alert state bit 2: VI_ERR_C:0		
		Alert state bit 3: VI_ERR_D:0		
		Alert state bit 4: HI_TEMP_ERR:0		
		Alert state bit 5: CHARGE_PUMP_ERR:0		
		Alert state bit 6: ALDO5V_ERR:0		
		Alert state bit 7: AVDD_ERR:0		
		Alert state bit 8: DVCC_ERR:0		
		Alert state bit 9: ALDO1V8_ERR:0		
		Alert state bit 10: ADC_CONV_ERR:1		
		Alert state bit 11: ADC_SAT_ERR:0		
		Alert state bit 12: SPI_SCLK_CNT_ERR:0		
		Alert state bit 13: SPI_CRC_ERR:0		
		Alert state bit 14: CAL_MEM_ERR:0		
		Alert state bit 15: RESET OCCURED:0		

Returns the actual alert states for chip <CHIPNR>.

Each result bit stands for a different state:

Bit 0: VI\_ERR\_CURR\_A: Status of channel A: Voltage or current error detected on Channel A. This bit is interpreted differently depending on which of the following IO function selected:

Voltage output: short-circuit error. The error condition is debounced for 2 ms before the status bit is set.

Current output: open circuit error. The error condition is debounced for 2 ms before the status bit is set.

Current input, loop powered: short-circuit error. A short to ground is detected

Current input, externally powered: short-circuit error. A current source >25 mA is detected

Bit 1: VI\_ERR\_CURR\_B: Status of voltage input B. Same like VI\_ERR\_CURR\_A

Bit 2: VI\_ERR\_CURR\_C: Status of voltage input C. Same like VI\_ERR\_CURR\_A

Bit 3: VI\_ERR\_CURR\_D: Status of voltage input D. Same like VI\_ERR\_CURR\_A

Bit 4: HI\_TEMP\_STATUS: If the die temperature is typically at or above 115°C, the HI\_TEMP\_STATUS bit is asserted

Bit 5: CHARGE\_PUMP\_STATUS: Charge pump error detected.

Bit 6: ALDO5V\_STATUS: ALDO5V Power Supply Monitor Error. This bit is asserted when the ALDO5V pin falls below 4.05 V. Usually ~5V.

Bit 7: AVDD\_STATUS: AVDD Power Supply Monitor Error. This bit is asserted when the AVDD pin falls below 9.26 V. Usually ~17V.

Bit 8: DVCC\_STATUS: DVCC Power Supply Monitor Error. This bit is asserted when the DVCC pin falls below 1.93 V. Usually ~3.3V.

Bit 9: ALDO1V8\_STATUS: ALDO1V8 Power Supply Monitor Error. This bit is asserted when the ALDO1V8 pin falls below 1.35 V. Usually ~1.8V.

Bit 10: ADC\_CONV\_ERR: ADC Conversion Error. ADC results may be outside the selected measurement range.

Bit 11: ADC\_SAT\_ERR: ADC Saturation Error. ADC may be outside the user selected measurement range.

Bit 12: SPI\_SCLK\_CNT\_ERR: SPI SCLK count error detected. This bit is asserted if an SPI command is applied but 32 SCLKs are not provided.

Bit 13: SPI\_CRC\_ERR: SPI CRC error detected. This bit is asserted if an invalid CRC is received.

Bit 14: CAL\_MEM\_ERR: Calibration Memory Error. This flag asserts under the following two conditions: When a calibration memory CRC error or an uncorrectable error correcting code (ECC) error is detected on the calibration memory upload. It is not possible to clear this bit if there is a CRC error or uncorrectable ECC error. It is recommended to reset the device and check the supplies in this situation. When there is an attempted SPI access to a register before the calibration memory refresh is complete. Do not address the device until the calibration memory is refreshed. Writing 1 to this bit clears the flag, if the flag is asserted due to this condition.

Bit 15: RESET\_OCCURRED: Reset occurred. This bit is asserted after a reset event, which asserts the ALERT pin after the reset. Write a 1 to this bit to clear the flag. Note that a mask bit is not provided for this bit.

CLEAR ALERT STATE	ASCII WRITE COMMAND	#CALERTS<CHIPNR>:<AlertState> <CR> Result: #OK<CR>	ASCII	YES
	CHIPNR	1		
	Bit 0	1:RESET FLAG	0:VI_ERR_A	
	Bit 1	1:RESET FLAG	1:VI_ERR_B	
	Bit 2	1:RESET FLAG	2:VI_ERR_C	
	Bit 3	1:RESET FLAG	3:VI_ERR_D	
	Bit 4	1:RESET FLAG	4:HI_TEMP_ERR	
	Bit 5	1:RESET FLAG	5:CHARGE_PUMP_ERR	
	Bit 6	1:RESET FLAG	6:ALDO5V_ERR	
	Bit 7	1:RESET FLAG	7:AVDD_ERR	
	Bit 8	1:RESET FLAG	8:DVCC_ERR	
	Bit 9	1:RESET FLAG	9:ALDO1V8_ERR	
	Bit 10	1:RESET FLAG	10:ADC_CONV_ERR	
	Bit 11	1:RESET FLAG	11:ADC_SAT_ERR	
	Bit 12	1:RESET FLAG	12:SPI_SCLK_ERR	
	Bit 13	1:RESET FLAG	13:SPI_CRC_ERR	
	Bit 14	1:RESET FLAG	14:CAL_MEM_ERR	
	Bit 15	1:RESET FLAG	15:RESET_OCCURED	
	TX	#1,CALERTS1:65535<CR>		
	RX	N/A		

With this command you can reset individual alert bits in the alert status register

### CHIP TEMPERATURES

GET CHIP TEMPERATURES	ASCII READ COMMAND	#GCHIPTemps<CR> Result: #GCHIPTemps:<Chip1TempDbl>, <Chip2TempDbl> <CR>	ASCII	
	TX	#1,GCHIPTemps<CR>		
	RX	#1,GCHIPTemps:46.37,47.49<CR>		
		Actual temperature of CHIP1:46.37°C		
		Actual temperature of CHIP2:47.49°C		

This command returns for every AIOX chip the actual chip temperature in °C

GET CHIP TEMPERATURE	ASCII READ COMMAND	#GCHIPTemp<CHIPNR> <CR> Result: #GCHIPTemp<CHIPNR>:<ChipxTempDbl> <CR>	ASCII	
	CHIPNR	1		
	TX	#1,GCHIPTemp1<CR>		
	RX	#1,GCHIPTemp1:46.37<CR>		
		Actual temperature of CHIP1:46.37°C		

This command returns for AIOX chip <CHIPNR> the actual chip temperature in °C

### AVERAGE CHIP TEMPERATURES

GET AVERAGE CHIP TEMPERATURES	ASCII READ COMMAND	#GAVGCHIPTemps<CR> Result: #GAVGCHIPTemps:<Chip1AvgTempDbl>, <Chip2AvgTempDbl> <CR>	ASCII	
-------------------------------	--------------------------	---	-------	--

	TX	#1,GAVGCHIPTemps<CR>		
	RX	#1,GAVGCHIPTemps:46.36,47.47<CR>		
		Average temperature of CHIP1:46.36°C		
		Average temperature of CHIP2:47.47°C		

This command returns for every AIOX chip the average chip temperature in °C

GET AVERAGE CHIP TEMPERATURE	ASCII READ COMMAND	#GAVGCHIPTemp<CHIPNR><CR> Result: #GAVGCHIPTemp<CHIPNR>:<ChipxAvgTempDbl><CR>	ASCII	
	CHIPNR	1		
	TX	#1,GAVGCHIPTemp1<CR>		
	RX	#1,GAVGCHIPTemp1:46.36<CR>		
		Average temperature of CHIP1:46.36°C		

This command returns for AIOX chip <CHIPNR> the average chip temperature in °C

### CHIP SUPPLY VOLTAGES

GET SUPPLY VOLTAGES	ASCII READ COMMAND	#GVAVDDS<CR> Result: #GVAVDDS:<Chip1VAVDDDBl>,<Chip2VAVDDDBl><CR>	ASCII	
	TX	#1,GVAVDDS<CR>		
	RX	#1,GVAVDDS:14.61,14.62<CR>		
		Actual supply voltage of CHIP1:14.61V		
		Actual supply voltage of CHIP2:14.62V		

This command returns for every AIOX chip the actual supply voltage in Volts.

This must be >14.5V, if not, there is a severe wiring or other hardware issue!

GET SUPPLY VOLTAGE	ASCII READ COMMAND	#GVAVDD<CHIPNR><CR> Result: #GVAVDD<CHIPNR>:<ChipxVAVDD><CR>	ASCII	
	CHIPNR	1		
	TX	#1,GVAVDD1<CR>		
	RX	#1,GVAVDD1:14.61<CR>		
		Actual supply voltage of CHIP1:14.61V		

This command returns for AIOX chip <CHIPNR> the actual supply voltage in Volts.

This must be >14.5V, if not, there is a severe wiring or other hardware issue!

### AVERAGE CHIP SUPPLY VOLTAGES

GET AVERAGE SUPPLY VOLTAGES	ASCII READ COMMAND	#GAVGVAVDDS<CR> Result: #GAVGVAVDDS:<Chip1AvgVAVDDDBl>,<Chip2AvgVAVDDDBl><CR>	ASCII	
	TX	#1,GAVGVAVDDS<CR>		
	RX	#1,GAVGVAVDDS:14.61,14.60<CR>		
		Average supply voltage of CHIP1:14.61V		
		Average supply voltage of CHIP2:14.60V		

This command returns for every AIOX chip the average supply voltage in Volts.

This must be >14.5V, if not, there is a severe wiring or other hardware issue!

GET AVERAGE SUPPLY VOLTAGE	ASCII READ COMMAND	#GAVGVAVDD<CHIPNR><CR> Result: #GAVGVAVDD<CHIPNR>:<ChipxAvgVAVDD><CR>	ASCII	
	CHIPNR	1		

	TX	#1,GAVGVAVDD1<CR>		
	RX	#1,GAVGVAVDD1:14.61<CR>		
		Average supply voltage of CHIP1:14.61V		

This command returns for AIOX chip <CHIPNR> the average supply voltage in Volts.  
This must be >14.5V, if not, there is a severe wiring or other hardware issue!

**CHIP GROUND VOLTAGES**

GET GROUND VOLTAGES	ASCII READ COMMAND	#GVAGNDS<CR> Result: #GVAGNDS:<Chip1VAGNDDbl>,<Chip2VAGNDDbl><CR>	ASCII	
	TX	#1,GVAGNDS<CR>		
	RX	#1,GVAGNDS:0.00,0.00<CR>		
		Actual ground voltage of CHIP1:0.00V		
		Actual ground voltage of CHIP2:0.00V		

This command returns for every AIOX chip the actual ground voltage in Volts.  
This must be 0, if not, there is a severe wiring or other hardware issue!

GET GROUND VOLTAGE	ASCII READ COMMAND	#GVAGND<CHIPNR><CR> Result: #GVAGND<CHIPNR>:<ChipxVAGNDDbl><CR>	ASCII	
	CHIPNR	1		
	TX	#1,GVAGND1<CR>		
	RX	#1,GVAGND1:0.00<CR>		
		Actual ground voltage of CHIP1:0.00V		

This command returns for AIOX chip <CHIPNR> the actual ground voltage in Volts.  
This must be 0, if not, there is a severe wiring or other hardware issue!

**AVERAGE CHIP GROUND VOLTAGES**

GET AVERAGE GROUND VOLTAGES	ASCII READ COMMAND	#GAVGVAGNDS<CR> Result: #GAVGVAGNDS:<Chip1AvgVAGNDDbl>,<Chip2AvgVAGNDDbl><CR>	ASCII	
	TX	#1,GAVGVAGNDS<CR>		
	RX	#1,GAVGVAGNDS:0.00,0.00<CR>		
		Average ground voltage of CHIP1:0.00V		
		Average ground voltage of CHIP2:0.00V		

This command returns for every AIOX chip the average ground voltage in Volts.  
This must be 0, if not, there is a severe wiring or other hardware issue!

GET AVERAGE GROUND VOLTAGE	ASCII READ COMMAND	#GAVGVAGND<CHIPNR><CR> Result: #GAVGVAGND<CHIPNR>:<ChipxAvgVAVGNDDbl><CR>	ASCII	
	CHIPNR	1		
	TX	#1,GAVGVAGND1<CR>		
	RX	#1,GAVGVAGND1:0.00<CR>		
		Average ground voltage of CHIP1:0.00V		

This command returns for AIOX chip <CHIPNR> the average ground voltage in Volts.  
This must be 0, if not, there is a severe wiring or other hardware issue!

Register NAME Command NAME	MODBUS Register ASCII Command	Register VALUE ASCII Command	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>ASCII COMMANDS</b>						
SET CONFIG OUTPUT VALUES	ASCII WRITE COMMAND	#SCFGOVs:<IO1CfgValDbl>,<IO2CfgValDbl>,<IO3CfgValDbl>,<IO4CfgValDbl>,<IO5CfgValDbl>,<IO6CfgValDbl>,<IO7CfgValDbl>,<IO8CfgValDbl><CR> Result: #OK<CR>			ASCII	YES
	IO1Value	,000				
	IO2Value	,000				
	IO3Value	,000				
	IO4Value	,000				
	IO5Value	,000				
	IO6Value	,000				
	IO7Value	,000				
	IO8Value	,000				
	TX	#1,SCFGOVs:0,0,0,0,0,0,0,0<CR>				
	RX	N/A				
This command sets for all outputs the standard value in Volt or in mA, which are used when the controller is restarted or performing a watchdog reset and the channel is used as voltage output or current output. For voltage outputs the range is 0 to 11,0V. For current outputs the range is 0 to 25mA.						
SET CONFIG OUTPUT VALUEx	ASCII WRITE COMMAND	#SCFGOV<IONR>:<IOxCfgValueDbl><CR> Result: #OK<CR>			ASCII	YES
	IONR	1				
	IOxCfgValue	,000				
	TX	#1,SCFGOV1:0<CR>				
	RX	N/A				
This command sets for one outputs the standard value in Volt or in mA, which is used when the controller is restarted and the channel is used as voltage output or current output. For voltage outputs the range is 0 to 11,0V. For current outputs the range is 0 to 25mA.						
GET CONFIG OUTPUT VALUES	ASCII READ COMMAND	#GCFGOVs<CR> Result: #GCFGOVs:<IOVolt1Dbl>,<IOVolt2Dbl>,...<IOVolt8Dbl><CR>			ASCII	
	TX	#1,GCFGOVs<CR>				
	RX	#1,GCFGOVs:999.99,999.99,999.99,999.99,999.99,999.99,999.99,999.99<CR>				
		Actual config value on IO1:999.99V or mA				
		Actual config value on IO2:999.99V or mA				
		Actual config value on IO3:999.99V or mA				
		Actual config value on IO4:999.99V or mA				
		Actual config value on IO5:999.99V or mA				
		Actual config value on IO6:999.99V or mA				
		Actual config value on IO7:999.99V or mA				
		Actual config value on IO8:999.99V or mA				



This command shows for all channels the current saved startup values for use as voltage or current outputs

For voltage outputs the range is 0 to 11,0V.

For current outputs the range is 0 to 25mA.

All IOs with a different usage type will return 999.99.

GET CONFIG OUTPUT VALUE	ASCII READ COMMAND	#GCFGOV<IONR><CR> Result: #GCFGOV<IONR>:<IOXValueDbl><CR>	ASCII	
	IONR	1		
	TX	#1,GCFGOV1<CR>		
	RX	#1,GCFGOV1:999.99<CR>		
		Actual config value on IO1:999.99V or mA		

This command shows for one channel the current saved startup value for use as voltage or current output.

For voltage outputs the range is 0 to 11,0V.

For current outputs the range is 0 to 25mA.

All IOs with a different usage type will return 999.99.

RESET 16AIOXCPU	ASCII WRITE COMMAND	#R16AIOXCPU<CR> Result: #OK<CR>	ASCII	NO
	TX	#1,R16AIOXCPU<CR>		
	RX	N/A		

This command restarts the internal CPU of the 16AIOX addon print. All channels will be resetted & initialized completely

Register NAME Command NAME	MODBUS Register ASCII Command	Register VALUE ASCII Command	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>AIOX IO TYPES</b>						
IO TYPE1	3x40001 4x40001 I:40000	0,0x0000 B:00 00		13:RTDI[OHM]	UINT16 R/W	YES
		Actual IO type of AIOx:0:UU		CHOOSE NEW IO TYPE FROM LIST		
Current configured IO type for AIOx =0: UNUSED =1: VOLTAGE INPUT[0-10V] =2: VOLTAGE INPUT[2-10V] =3: VOLTAGE OUTPUT[0-10V] =4: VOLTAGE OUTPUT[2-10V] =5: CURRENT INPUT LOOP POWERED[0-20mA] =6: CURRENT INPUT LOOP POWERED[4-20mA] =7: CURRENT INPUT EXTERNAL POWERED[0-20mA] =8: CURRENT INPUT EXTERNAL POWERED[4-20mA] =9: CURRENT OUTPUT[0-20mA] =10: CURRENT OUTPUT[4-20mA] =11: DIGITAL INPUT LOGIC 24V= =12: DIGITAL INPUT LOOP POWERED =13: RESISTANCE MEASUREMENT						
HINT: The last IO type is automatically stored in FRAM and will be used after a system restart.						
IO TYPE2	3x40002 4x40002 I:40001	0,0x0000 B:00 00		12:DI[24V;LP]	UINT16 R/W	YES
		Actual IO type of AIOx:0:UU		CHOOSE NEW IO TYPE FROM LIST		
IO TYPE3	3x40003 4x40003 I:40002	0,0x0000 B:00 00		1:VI[0-10V]	UINT16 R/W	NO
		Actual IO type of AIOx:0:UU		CHOOSE NEW IO TYPE FROM LIST		
IO TYPE4	3x40004 4x40004 I:40003	0,0x0000 B:00 00		1:VI[0-10V]	UINT16 R/W	NO
		Actual IO type of AIOx:0:UU		CHOOSE NEW IO TYPE FROM LIST		
IO TYPE5	3x40005 4x40005 I:40004	0,0x0000 B:00 00		3:VO[0-10V]	UINT16 R/W	NO
		Actual IO type of AIOx:0:UU		CHOOSE NEW IO TYPE FROM LIST		
IO TYPE6	3x40006 4x40006 I:40005	0,0x0000 B:00 00		3:VO[0-10V]	UINT16 R/W	NO
		Actual IO type of AIOx:0:UU		CHOOSE NEW IO TYPE FROM LIST		

IO TYPE7	3x40007 4x40007 I:40006	0,0x0000 B:00 00		3:VO[0-10V]	UINT16 R/W	NO
		Actual IO type of AIOx:0:UU		CHOOSE NEW IO TYPE FROM LIST		
IO TYPE8	3x40008 4x40008 I:40007	0,0x0000 B:00 00		3:VO[0-10V]	UINT16 R/W	NO
		Actual IO type of AIOx:0:UU		CHOOSE NEW IO TYPE FROM LIST		
<b>AIOX:VOLTAGE INPUTS</b>						
VOLTAGE INPUT1 IN VOLTS	3x40009 4x40009 I:40008	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
Current value of voltage input in x*100V, range 0-10V =65535,0xFFFF: The channel is not configured as voltage input						
VOLTAGE INPUT2 IN VOLTS	3x40010 4x40010 I:40009	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT3 IN VOLTS	3x40011 4x40011 I:40010	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT4 IN VOLTS	3x40012 4x40012 I:40011	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT5 IN VOLTS	3x40013 4x40013 I:40012	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT6 IN VOLTS	3x40014 4x40014 I:40013	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT7 IN VOLTS	3x40015 4x40015 I:40014	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT8 IN VOLTS	3x40016 4x40016 I:40015	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
<b>AIOX:VOLTAGE INPUTS</b>						

VOLTAGE INPUT1 IN PERCENT	3x40017 4x40017 I:40016	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
Current value of voltage input in x*100%, range 0-100% =65535,0xFFFF: The channel is not configured as voltage input						
VOLTAGE INPUT3 IN PERCENT	3x40018 4x40018 I:40017	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT3 IN PERCENT	3x40019 4x40019 I:40018	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT4 IN PERCENT	3x40020 4x40020 I:40019	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT5 IN PERCENT	3x40021 4x40021 I:40020	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT6 IN PERCENT	3x40022 4x40022 I:40021	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT7 IN PERCENT	3x40023 4x40023 I:40022	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
VOLTAGE INPUT8 IN PERCENT	3x40024 4x40024 I:40023	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of Vlx:65535=N/V				
<b>AIOX:VOLTAGE OUTPUTS</b>						
VOLTAGE OUTPUT1 IN VOLTS	3x40025 4x40025 I:40024	65535,0xFFFF B:FF FF	1100	11	UINT16 R/W	NO
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx		
Current value of voltage output in x*100V, range 0-11V =65535,0xFFFF: The channel is not configured as voltage output						
Writing a new value onto this register sets voltage output x to a new output value in Volt						
VOLTAGE OUTPUT2 IN VOLTS	3x40026 4x40026 I:40025	65535,0xFFFF B:FF FF	1100	11	UINT16 R/W	NO

		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
VOLTAGE OUTPUT3 IN VOLTS	3x40027 4x40027 I:40026	65535,0xFFFF B:FF FF	1100	11	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
VOLTAGE OUTPUT4 IN VOLTS	3x40028 4x40028 I:40027	65535,0xFFFF B:FF FF	1100	11	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
VOLTAGE OUTPUT5 IN VOLTS	3x40029 4x40029 I:40028	65535,0xFFFF B:FF FF	1100	11	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
VOLTAGE OUTPUT6 IN VOLTS	3x40030 4x40030 I:40029	65535,0xFFFF B:FF FF	1100	11	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
VOLTAGE OUTPUT7 IN VOLTS	3x40031 4x40031 I:40030	65535,0xFFFF B:FF FF	1100	11	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
VOLTAGE OUTPUT8 IN VOLTS	3x40032 4x40032 I:40031	65535,0xFFFF B:FF FF	1100	11	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
<b>AIOX:VOLTAGE OUTPUTS</b>							
VOLTAGE OUTPUT1 IN PERCENT	3x40033 4x40033 I:40032	65535,0xFFFF B:FF FF	11000	110	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
Current value of voltage output in x*100%, range 0-110% (100%=10V) =65535,0xFFFF: The channel is not configured as voltage output							
Writing a new value onto this register sets voltage output x to a new output value in percent							
VOLTAGE OUTPUT2 IN PERCENT	3x40034 4x40034 I:40033	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
VOLTAGE OUTPUT3 IN PERCENT	3x40035 4x40035 I:40034	65535,0xFFFF B:FF FF	3000	30	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			
VOLTAGE OUTPUT4 IN PERCENT	3x40036 4x40036 I:40035	65535,0xFFFF B:FF FF	7500	75	UINT16 R/W	NO	
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx			

VOLTAGE OUTPUT5 IN PERCENT	3x40037 4x40037 I:40036	65535,0xFFFF B:FF FF	0	0	UINT16 R/W	NO
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx		
VOLTAGE OUTPUT6 IN PERCENT	3x40038 4x40038 I:40037	65535,0xFFFF B:FF FF	0	0	UINT16 R/W	NO
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx		
VOLTAGE OUTPUT7 IN PERCENT	3x40039 4x40039 I:40038	65535,0xFFFF B:FF FF	0	0	UINT16 R/W	NO
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx		
VOLTAGE OUTPUT8 IN PERCENT	3x40040 4x40040 I:40039	65535,0xFFFF B:FF FF	0	0	UINT16 R/W	NO
		Actual value of VOx:65535=N/V		ENTER NEW VALUE FOR VOx		
<b>AIOX:VOLTAGE OUTPUTS</b>						
VOLTAGE OUTPUT1 MEASURED CURRENT	3x40041 4x40041 I:40040	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of VOx:-32768=N/V				
Returns the measured output current in x*100mA on voltage output VOx, Range -25mA..+25mA =-32768,0x8000: The channel is not configured as voltage output						
VOLTAGE OUTPUT2 MEASURED CURRENT	3x40042 4x40042 I:40041	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of VOx:-32768=N/V				
VOLTAGE OUTPUT3 MEASURED CURRENT	3x40043 4x40043 I:40042	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of VOx:-32768=N/V				
VOLTAGE OUTPUT4 MEASURED CURRENT	3x40044 4x40044 I:40043	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of VOx:-32768=N/V				
VOLTAGE OUTPUT5 MEASURED CURRENT	3x40045 4x40045 I:40044	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of VOx:-32768=N/V				
VOLTAGE OUTPUT6 MEASURED CURRENT	3x40046 4x40046 I:40045	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of VOx:-32768=N/V				
VOLTAGE OUTPUT7 MEASURED CURRENT	3x40047 4x40047 I:40046	-32768,0x8000 B:80 00			SINT16 R/O	

		Actual measured output current of VOx:-32768=N/V				
VOLTAGE OUTPUT8 MEASURED CURRENT	3x40048 4x40048 I:40047	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of VOx:-32768=N/V				
<b>AIOX:CURRENT INPUTS</b>						
CURRENT INPUT1 IN MILLIAMPERE	3x40049 4x40049 I:40048	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				
Current value of current input in x*100mA, range 0-25mA =65535,0xFFFF: The channel is not configured as current input						
CURRENT INPUT2 IN MILLIAMPERE	3x40050 4x40050 I:40049	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of VIx:65535=N/V				
CURRENT INPUT3 IN MILLIAMPERE	3x40051 4x40051 I:40050	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of VIx:65535=N/V				
CURRENT INPUT4 IN MILLIAMPERE	3x40052 4x40052 I:40051	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of VIx:65535=N/V				
CURRENT INPUT5 IN MILLIAMPERE	3x40053 4x40053 I:40052	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of VIx:65535=N/V				
CURRENT INPUT6 IN MILLIAMPERE	3x40054 4x40054 I:40053	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of VIx:65535=N/V				
CURRENT INPUT7 IN MILLIAMPERE	3x40055 4x40055 I:40054	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of VIx:65535=N/V				
CURRENT INPUT8 IN MILLIAMPERE	3x40056 4x40056 I:40055	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of VIx:65535=N/V				
<b>AIOX:CURRENT INPUTS</b>						
CURRENT INPUT1 IN PERCENT	3x40057 4x40057 I:40056	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				

Current value of current input in x*100%, range 0-125% (100%=20mA) =65535,0xFFFF: The channel is not configured as current input						
CURRENT INPUT2 IN PERCENT	3x40058 4x40058 I:40057	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				
CURRENT INPUT3 IN PERCENT	3x40059 4x40059 I:40058	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				
CURRENT INPUT4 IN PERCENT	3x40060 4x40060 I:40059	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				
CURRENT INPUT5 IN PERCENT	3x40061 4x40061 I:40060	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				
CURRENT INPUT6 IN PERCENT	3x40062 4x40062 I:40061	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				
CURRENT INPUT7 IN PERCENT	3x40063 4x40063 I:40062	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				
CURRENT INPUT8 IN PERCENT	3x40064 4x40064 I:40063	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual value of CIx:65535=N/V				
<b>AIOX:CURRENT OUTPUTS</b>						
CURRENT OUTPUT1 IN MILIAMPERE	3x40065 4x40065 I:40064	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	NO
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx	
Current value of current output in x*100mA, range 0-25mA =65535,0xFFFF: The channel is not configured as current output						
Writing a new value onto this register sets current output x to a new output value in Milliampere						
CURRENT OUTPUT2 IN MILIAMPERE	3x40066 4x40066 I:40065	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	NO
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx	
CURRENT OUTPUT3 IN MILIAMPERE	3x40067 4x40067 I:40066	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	NO



		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
CURRENT OUTPUT4 IN MILIAMPERE	3x40068 4x40068 I:40067	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
CURRENT OUTPUT5 IN MILIAMPERE	3x40069 4x40069 I:40068	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
CURRENT OUTPUT6 IN MILIAMPERE	3x40070 4x40070 I:40069	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
CURRENT OUTPUT7 IN MILIAMPERE	3x40071 4x40071 I:40070	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
CURRENT OUTPUT8 IN MILIAMPERE	3x40072 4x40072 I:40071	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
<b>AIOX:CURRENT OUTPUTS</b>							
CURRENT OUTPUT1 IN PERCENT	3x40073 4x40073 I:40072	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
Current value of current output in x*100%, range 0-125% (100%=20mA) =65535,0xFFFF: The channel is not configured as current output							
Writing a new value onto this register sets current output x to a new output value in percent							
CURRENT OUTPUT2 IN PERCENT	3x40074 4x40074 I:40073	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
CURRENT OUTPUT3 IN PERCENT	3x40075 4x40075 I:40074	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
CURRENT OUTPUT4 IN PERCENT	3x40076 4x40076 I:40075	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		
CURRENT OUTPUT5 IN PERCENT	3x40077 4x40077 I:40076	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO	
		Actual value of COx:65535=N/V			ENTER NEW VALUE FOR COx		

CURRENT OUTPUT6 IN PERCENT	3x40078 4x40078 I:40077	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO
		Actual value of COx:65535=N/V		ENTER NEW VALUE FOR COx		
CURRENT OUTPUT7 IN PERCENT	3x40079 4x40079 I:40078	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO
		Actual value of COx:65535=N/V		ENTER NEW VALUE FOR COx		
CURRENT OUTPUT8 IN PERCENT	3x40080 4x40080 I:40079	65535,0xFFFF B:FF FF	5000	50	UINT16 R/W	NO
		Actual value of COx:65535=N/V		ENTER NEW VALUE FOR COx		
<b>AIOX:CURRENT OUTPUTS</b>						
CURRENT OUTPUT1 MEASURED VOLTS	3x40081 4x40081 I:40080	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
Current measured output voltage for current output x*100V, range 0-10V =65535,0xFFFF: The channel is not configured as current output						
CURRENT OUTPUT2 MEASURED VOLTS	3x40082 4x40082 I:40081	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
CURRENT OUTPUT3 MEASURED VOLTS	3x40083 4x40083 I:40082	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
CURRENT OUTPUT4 MEASURED VOLTS	3x40084 4x40084 I:40083	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
CURRENT OUTPUT5 MEASURED VOLTS	3x40085 4x40085 I:40084	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
CURRENT OUTPUT6 MEASURED VOLTS	3x40086 4x40086 I:40085	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
CURRENT OUTPUT7 MEASURED VOLTS	3x40087 4x40087 I:40086	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
CURRENT OUTPUT8 MEASURED VOLTS	3x40088 4x40088 I:40087	65535,0xFFFF B:FF FF			UINT16 R/O	

		Actual measured output voltage COx:65535=N/V				
<b>AIOX:DIGITAL INPUTS</b>						
DIGITAL INPUT1	3x40089 4x40089 I:40088	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual state of digital input DIx:65535=N/V				
Current measured state of digital input DIx =0: Digital input is OFF or loop is closed =1: Digital input is ON (+24V attached) or loop is open =65535,0xFFFF: The channel is not configured as digital input						
DIGITAL INPUT2	3x40090 4x40090 I:40089	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual state of digital input DIx:65535=N/V				
DIGITAL INPUT3	3x40091 4x40091 I:40090	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
DIGITAL INPUT4	3x40092 4x40092 I:40091	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
DIGITAL INPUT5	3x40093 4x40093 I:40092	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
DIGITAL INPUT6	3x40094 4x40094 I:40093	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
DIGITAL INPUT7	3x40095 4x40095 I:40094	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
DIGITAL INPUT8	3x40096 4x40096 I:40095	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured output voltage COx:65535=N/V				
<b>AIOX:DIGITAL INPUTS</b>						
DIGITAL INPUT1 MEASURED CURRENT	3x40097 4x40097 I:40096	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of DIx:-32768=N/V				
Returns the measured output current in x*100mA on DIGITAL INPUT VOx, Range -25mA..+25mA =-32768,0x8000: The channel is not configured as DIGITAL INPUT						

DIGITAL INPUT2 MEASURED CURRENT	3x40098 4x40098 I:40097	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of DIx:-32768=N/V				
DIGITAL INPUT3 MEASURED CURRENT	3x40099 4x40099 I:40098	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of DIx:-32768=N/V				
DIGITAL INPUT4 MEASURED CURRENT	3x40100 4x40100 I:40099	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of DIx:-32768=N/V				
DIGITAL INPUT5 MEASURED CURRENT	3x40101 4x40101 I:40100	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of DIx:-32768=N/V				
DIGITAL INPUT6 MEASURED CURRENT	3x40102 4x40102 I:40101	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of DIx:-32768=N/V				
DIGITAL INPUT7 MEASURED CURRENT	3x40103 4x40103 I:40102	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of DIx:-32768=N/V				
DIGITAL INPUT8 MEASURED CURRENT	3x40104 4x40104 I:40103	-32768,0x8000 B:80 00			SINT16 R/O	
		Actual measured output current of DIx:-32768=N/V				

Register NAME Command NAME	MODBUS Register ASCII Command	Register VALUE ASCII Command	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>AIOX:RTD INPUTS OHM*10</b>						
RTD INPUT1 IN OHM*10	3x41001 4x41001 I:41000	65534,0xFFFE B:FF FE			UINT16 R/O	
Actual measured ohm value of RTDIx:65534=OPEN						
Current measured RTD in Ohm*10 between 0 and 600000 =0..60000: Current measured resistance in Ohm*10 =65534,0xFFFE: The sensor or cabling is open (broken, not connected, or out of range) =65535,0xFFFF: The channel is not configured as RTD input						
RTD INPUT2 IN OHM*10	3x41002 4x41002 I:41001	65534,0xFFFE B:FF FE			UINT16 R/O	
Actual measured ohm value of RTDIx:65534=OPEN						
RTD INPUT3 IN OHM*10	3x41003 4x41003 I:41002	65534,0xFFFE B:FF FE			UINT16 R/O	
Actual measured ohm value of RTDIx:65534=OPEN						
RTD INPUT4 IN OHM*10	3x41004 4x41004 I:41003	65534,0xFFFE B:FF FE			UINT16 R/O	
Actual measured ohm value of RTDIx:65534=OPEN						
RTD INPUT5 IN OHM*10	3x41005 4x41005 I:41004	65534,0xFFFE B:FF FE			UINT16 R/O	
Actual measured ohm value of RTDIx:65534=OPEN						
RTD INPUT6 IN OHM*10	3x41006 4x41006 I:41005	65534,0xFFFE B:FF FE			UINT16 R/O	
Actual measured ohm value of RTDIx:65534=OPEN						
RTD INPUT7 IN OHM*10	3x41007 4x41007 I:41006	65534,0xFFFE B:FF FE			UINT16 R/O	
Actual measured ohm value of RTDIx:65534=OPEN						
RTD INPUT8 IN OHM*10	3x41008 4x41008 I:41007	65534,0xFFFE B:FF FE			UINT16 R/O	
Actual measured ohm value of RTDIx:65534=OPEN						
<b>AIOX:RTD INPUTS OHM*1</b>						
RTD INPUT1 IN OHM	3x41009 4x41009 I:41008	65535,0xFFFF B:FF FF			UINT16 R/O	

		Actual measured ohm value of RTDIx:65535=N/V				
Current measured RTD in Ohm*1 between 0 and 60000 =0..60000: Current measured resistance in Ohm*1 =65534,0xFFFF: The sensor or cabling is open (broken, not connected, or out of range) =65535,0xFFFF: The channel is not configured as RTD input						
RTD INPUT2 IN OHM	3x41010 4x41010 I:41009	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				
RTD INPUT3 IN OHM	3x41011 4x41011 I:41010	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				
RTD INPUT4 IN OHM	3x41012 4x41012 I:41011	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				
RTD INPUT5 IN OHM	3x41013 4x41013 I:41012	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				
RTD INPUT6 IN OHM	3x41014 4x41014 I:41013	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				
RTD INPUT7 IN OHM	3x41015 4x41015 I:41014	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				
RTD INPUT8 IN OHM	3x41016 4x41016 I:41015	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				
<b>AIOX:RTD INPUTS OHM/10</b>						
RTD INPUT1 IN OHM/10	3x41017 4x41017 I:41016	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				
Current measured RTD in Ohm/10 between 0 and 60000 =0..60000: Current measured resistance in Ohm/10 =65534,0xFFFF: The sensor or cabling is open (broken, not connected, or out of range) =65535,0xFFFF: The channel is not configured as RTD input						
RTD INPUT2 IN OHM/10	3x41018 4x41018 I:41017	65535,0xFFFF B:FF FF			UINT16 R/O	
		Actual measured ohm value of RTDIx:65535=N/V				

RTD INPUT3 IN OHM/10	3x41019 4x41019 I:41018	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured ohm value of RTDIx:65535=N/V						
RTD INPUT4 IN OHM/10	3x41020 4x41020 I:41019	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured ohm value of RTDIx:65535=N/V						
RTD INPUT5 IN OHM/10	3x41021 4x41021 I:41020	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured ohm value of RTDIx:65535=N/V						
RTD INPUT6 IN OHM/10	3x41022 4x41022 I:41021	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured ohm value of RTDIx:65535=N/V						
RTD INPUT7 IN OHM/10	3x41023 4x41023 I:41022	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured ohm value of RTDIx:65535=N/V						
RTD INPUT8 IN OHM/10	3x41024 4x41024 I:41023	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured ohm value of RTDIx:65535=N/V						
<b>AIOX:RTD INPUTS PT100 CELSIUS</b>						
RTD INPUT1 AS PT100 IN CELSIUS	3x41025 4x41025 I:41024	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						
Current measured RTD sensor value linearized as PT100 sensor in Celsius*100 in the range of -5000 to +13000 for -50.0 to +130.0 °C -32766,0x8002: Measured value is below -50°C -32767,0x8001: Measured value is above +130°C -32768,0x8000: The channel is not configured as RTD input						
RTD INPUT2 AS PT100 IN CELSIUS	3x41026 4x41026 I:41025	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						
RTD INPUT3 AS PT100 IN CELSIUS	3x41027 4x41027 I:41026	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						
RTD INPUT4 AS PT100 IN CELSIUS	3x41028 4x41028 I:41027	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						

RTD INPUT5 AS PT100 IN CELSIUS	3x41029 4x41029 I:41028	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V					
RTD INPUT6 AS PT100 IN CELSIUS	3x41030 4x41030 I:41029	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V					
RTD INPUT7 AS PT100 IN CELSIUS	3x41031 4x41031 I:41030	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V					
RTD INPUT8 AS PT100 IN CELSIUS	3x41032 4x41032 I:41031	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V					
<b>AIOX:RTD INPUTS PT1000 CELSIUS</b>					
RTD INPUT1 AS PT1000 IN CELSIUS	3x41033 4x41033 I:41032	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
Current measured RTD sensor value linearized as PT1000 sensor in Celsius*100 in the range of -5000 to +13000 for -50.0 to +130.0 °C -32766,0x8002: Measured value is below -50°C -32767,0x8001: Measured value is above +130°C -32768,0x8000: The channel is not configured as RTD input					
RTD INPUT2 AS PT1000 IN CELSIUS	3x41034 4x41034 I:41033	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT3 AS PT1000 IN CELSIUS	3x41035 4x41035 I:41034	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT4 AS PT1000 IN CELSIUS	3x41036 4x41036 I:41035	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT5 AS PT1000 IN CELSIUS	3x41037 4x41037 I:41036	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT6 AS PT1000 IN CELSIUS	3x41038 4x41038 I:41037	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					



RTD INPUT7 AS PT1000 IN CELSIUS	3x41039 4x41039 I:41038	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT8 AS PT1000 IN CELSIUS	3x41040 4x41040 I:41039	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
<b>AIOX:RTD INPUTS NI1000-DIN43760 CELSIUS</b>					
RTD INPUT1 AS NI1000-DIN43760 IN CELSIUS	3x41041 4x41041 I:41040	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:-32768=N/V					
Current measured RTD sensor value linearized as NI1000-DIN43760 sensor in Celsius*100 in the range of -5000 to +13000 for -50.0 to +130.0 °C -32766,0x8002: Measured value is below -50°C -32767,0x8001: Measured value is above +130°C -32768,0x8000: The channel is not configured as RTD input					
RTD INPUT2 AS NI1000-DIN43760 IN CELSIUS	3x41042 4x41042 I:41041	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:-32768=N/V					
RTD INPUT3 AS NI1000-DIN43760 IN CELSIUS	3x41043 4x41043 I:41042	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:-32768=N/V					
RTD INPUT4 AS NI1000-DIN43760 IN CELSIUS	3x41044 4x41044 I:41043	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:-32768=N/V					
RTD INPUT5 AS NI1000-DIN43760 IN CELSIUS	3x41045 4x41045 I:41044	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:-32768=N/V					
RTD INPUT6 AS NI1000-DIN43760 IN CELSIUS	3x41046 4x41046 I:41045	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:-32768=N/V					
RTD INPUT7 AS NI1000-DIN43760 IN CELSIUS	3x41047 4x41047 I:41046	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:-32768=N/V					
RTD INPUT8 AS NI1000-DIN43760 IN CELSIUS	3x41048 4x41048 I:41047	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:-32768=N/V					
<b>AIOX:RTD INPUTS PT100 KELVIN</b>					

RTD INPUT1 AS PT100 IN KELVIN	3x41049 4x41049 I:41048	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT100 temperature RTDIx:65535=655,35°K						
Current measured RTD sensor value linearized as PT100 sensor in Kelvin*100 in the range of 22315 to 40315 for 223.15 to 403.15 °K 65533,0xFFFFD: Measured value is below 223,15°K 65534,0xFFFFE: Measured value is above 403,15°K 65535,0xFFFFF: The channel is not configured as RTD input						
RTD INPUT2 AS PT100 IN KELVIN	3x41050 4x41050 I:41049	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT100 temperature RTDIx:65535=655,35°K						
RTD INPUT3 AS PT100 IN KELVIN	3x41051 4x41051 I:41050	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT100 temperature RTDIx:65535=655,35°K						
RTD INPUT4 AS PT100 IN KELVIN	3x41052 4x41052 I:41051	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT100 temperature RTDIx:65535=655,35°K						
RTD INPUT5 AS PT100 IN KELVIN	3x41053 4x41053 I:41052	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT100 temperature RTDIx:65535=655,35°K						
RTD INPUT6 AS PT100 IN KELVIN	3x41054 4x41054 I:41053	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT100 temperature RTDIx:65535=655,35°K						
RTD INPUT7 AS PT100 IN KELVIN	3x41055 4x41055 I:41054	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT100 temperature RTDIx:65535=655,35°K						
RTD INPUT8 AS PT100 IN KELVIN	3x41056 4x41056 I:41055	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT100 temperature RTDIx:65535=655,35°K						
<b>AIOX:RTD INPUTS PT1000 KELVIN</b>						
RTD INPUT1 AS PT1000 IN KELVIN	3x41057 4x41057 I:41056	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT1000 temperature RTDIx:65535=655,35°K						
Current measured RTD sensor value linearized as PT1000 sensor in Kelvin*100 in the range of 22315 to 40315 for 223.15 to 403.15 °K 65533,0xFFFFD: Measured value is below 223,15°K 65534,0xFFFFE: Measured value is above 403,15°K 65535,0xFFFFF: The channel is not configured as RTD input						

RTD INPUT2 AS PT1000 IN KELVIN	3x41058 4x41058 I:41057	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT1000 temperature RTDIx:65535=655,35°K						
RTD INPUT3 AS PT1000 IN KELVIN	3x41059 4x41059 I:41058	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT1000 temperature RTDIx:65535=655,35°K						
RTD INPUT4 AS PT1000 IN KELVIN	3x41060 4x41060 I:41059	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT1000 temperature RTDIx:65535=655,35°K						
RTD INPUT5 AS PT1000 IN KELVIN	3x41061 4x41061 I:41060	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT1000 temperature RTDIx:65535=655,35°K						
RTD INPUT6 AS PT1000 IN KELVIN	3x41062 4x41062 I:41061	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT1000 temperature RTDIx:65535=655,35°K						
RTD INPUT7 AS PT1000 IN KELVIN	3x41063 4x41063 I:41062	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT1000 temperature RTDIx:65535=655,35°K						
RTD INPUT8 AS PT1000 IN KELVIN	3x41064 4x41064 I:41063	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured PT1000 temperature RTDIx:65535=655,35°K						
<b>AIOX:RTD INPUTS NI1000-DIN43760 KELVIN</b>						
RTD INPUT1 AS NI1000-DIN43760 IN KELVIN	3x41065 4x41065 I:41064	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
Current measured RTD sensor value linearized as NI1000-DIN43760 sensor in Kelvin*100 in the range of 22315 to 40315 for 223.15 to 403.15 °K 65533,0xFFFF: Measured value is below 223,15°K 65534,0xFFFF: Measured value is above 403,15°K 65535,0xFFFF: The channel is not configured as RTD input						
RTD INPUT2 AS NI1000-DIN43760 IN KELVIN	3x41066 4x41066 I:41065	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
RTD INPUT3 AS NI1000-DIN43760 IN KELVIN	3x41067 4x41067 I:41066	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:65535=655,35°K						

RTD INPUT4 AS NI1000-DIN43760 IN KELVIN	3x41068 4x41068 I:41067	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
RTD INPUT5 AS NI1000-DIN43760 IN KELVIN	3x41069 4x41069 I:41068	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
RTD INPUT6 AS NI1000-DIN43760 IN KELVIN	3x41070 4x41070 I:41069	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
RTD INPUT7 AS NI1000-DIN43760 IN KELVIN	3x41071 4x41071 I:41070	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
RTD INPUT8 AS NI1000-DIN43760 IN KELVIN	3x41072 4x41072 I:41071	65535,0xFFFF B:FF FF			UINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
<b>AIOX:RTD INPUTS PT100 FAHRENHEIT</b>						
RTD INPUT1 AS PT100 IN FAHRENHEIT	3x41073 4x41073 I:41072	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						
Current measured RTD sensor value linearized as PT100 sensor in Fahrenheit*100 in the range of -5800 to +26600 for -58.0 to +266.0 °F -32766,0x8002: Measured value is below -58°C -32767,0x8001: Measured value is above +266°C -32768,0x8000: The channel is not configured as RTD input						
RTD INPUT2 AS PT100 IN FAHRENHEIT	3x41074 4x41074 I:41073	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						
RTD INPUT3 AS PT100 IN FAHRENHEIT	3x41075 4x41075 I:41074	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						
RTD INPUT4 AS PT100 IN FAHRENHEIT	3x41076 4x41076 I:41075	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						
RTD INPUT5 AS PT100 IN FAHRENHEIT	3x41077 4x41077 I:41076	-32768,0x8000 B:80 00			SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V						

RTD INPUT6 AS PT100 IN FAHRENHEIT	3x41078 4x41078 I:41077	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V					
RTD INPUT7 AS PT100 IN FAHRENHEIT	3x41079 4x41079 I:41078	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V					
RTD INPUT8 AS PT100 IN FAHRENHEIT	3x41080 4x41080 I:41079	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT100 temperature RTDIx:-32768=N/V					
<b>AIOX:RTD INPUTS PT1000 FAHRENHEIT</b>					
RTD INPUT1 AS PT1000 IN FAHRENHEIT	3x41081 4x41081 I:41080	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
Current measured RTD sensor value linearized as PT1000 sensor in Fahrenheit*100 in the range of -5800 to +26600 for -58.0 to +266.0 °F -32766,0x8002: Measured value is below -58°C -32767,0x8001: Measured value is above +266°C -32768,0x8000: The channel is not configured as RTD input					
RTD INPUT2 AS PT1000 IN FAHRENHEIT	3x41082 4x41082 I:41081	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT3 AS PT1000 IN FAHRENHEIT	3x41083 4x41083 I:41082	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT4 AS PT1000 IN FAHRENHEIT	3x41084 4x41084 I:41083	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT5 AS PT1000 IN FAHRENHEIT	3x41085 4x41085 I:41084	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT6 AS PT1000 IN FAHRENHEIT	3x41086 4x41086 I:41085	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					
RTD INPUT7 AS PT1000 IN FAHRENHEIT	3x41087 4x41087 I:41086	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDIx:-32768=N/V					

RTD INPUT8 AS PT1000 IN FAHRENHEIT	3x41088 4x41088 I:41087	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured PT1000 temperature RTDlx:-32768=N/V					
<b>AIOX:RTD INPUTS NI1000-DIN43760 FAHRENHEIT</b>					
RTD INPUT1 AS NI1000-DIN43760 IN FAHRENHEIT	3x41089 4x41089 I:41088	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDlx:-32768=N/V					
Current measured RTD sensor value linearized as NI1000-DIN43760 sensor in Fahrenheit*100 in the range of -5800 to +26600 for -58.0 to +266.0 °F -32766,0x8002: Measured value is below -58°C -32767,0x8001: Measured value is above +266°C -32768,0x8000: The channel is not configured as RTD input					
RTD INPUT2 AS NI1000-DIN43760 IN FAHRENHEIT	3x41090 4x41090 I:41089	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDlx:-32768=N/V					
RTD INPUT3 AS NI1000-DIN43760 IN FAHRENHEIT	3x41091 4x41091 I:41090	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDlx:-32768=N/V					
RTD INPUT4 AS NI1000-DIN43760 IN FAHRENHEIT	3x41092 4x41092 I:41091	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDlx:-32768=N/V					
RTD INPUT5 AS NI1000-DIN43760 IN FAHRENHEIT	3x41093 4x41093 I:41092	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDlx:-32768=N/V					
RTD INPUT6 AS NI1000-DIN43760 IN FAHRENHEIT	3x41094 4x41094 I:41093	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDlx:-32768=N/V					
RTD INPUT7 AS NI1000-DIN43760 IN FAHRENHEIT	3x41095 4x41095 I:41094	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDlx:-32768=N/V					
RTD INPUT8 AS NI1000-DIN43760 IN FAHRENHEIT	3x41096 4x41096 I:41095	-32768,0x8000 B:80 00		SINT16 R/O	
Actual measured NI1000-DIN43760 temperature RTDlx:-32768=N/V					
<b>AIOX:RTD INPUTS OHM*100</b>					
RTD INPUT1 IN OHM*100	3x41501 4x41501 I:41500	4294967295,0xFFFFFFFF B:FF FF FF FF		UINT32 R/O	
Actual measured ohm value of RTDlx:-1=N/V					

Current measured RTD in Ohm*100 =0xFFFFFFFF: The channel is not configured as RTD input					
RTD INPUT2 IN OHM*100	3x41503 4x41503 I:41502	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O
Actual measured ohm value of RTDIx:-1=N/V					
RTD INPUT3 IN OHM*100	3x41505 4x41505 I:41504	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O
Actual measured ohm value of RTDIx:-1=N/V					
RTD INPUT4 IN OHM*100	3x41507 4x41507 I:41506	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O
Actual measured ohm value of RTDIx:-1=N/V					
RTD INPUT5 IN OHM*100	3x41509 4x41509 I:41508	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O
Actual measured ohm value of RTDIx:-1=N/V					
RTD INPUT6 IN OHM*100	3x41511 4x41511 I:41510	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O
Actual measured ohm value of RTDIx:-1=N/V					
RTD INPUT7 IN OHM*100	3x41513 4x41513 I:41512	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O
Actual measured ohm value of RTDIx:-1=N/V					
RTD INPUT8 IN OHM*100	3x41515 4x41515 I:41514	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O
Actual measured ohm value of RTDIx:-1=N/V					
<b>AIOX:RTD INPUTS OHM*100</b>					
RTD INPUT1 IN OHM*100	3x41517 4x41517 I:41516	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O
Actual measured ohm value of RTDIx:-1=N/V					
Current measured RTD in Ohm*100 =0xFFFFFFFF: The channel is not configured as RTD input					
RTD INPUT2 IN OHM*100	3x41519 4x41519 I:41518	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O
Actual measured ohm value of RTDIx:-1=N/V					
RTD INPUT3 IN OHM*100	3x41521 4x41521 I:41520	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O
Actual measured ohm value of RTDIx:-1=N/V					

RTD INPUT4 IN OHM*100	3x41523 4x41523 I:41522	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Actual measured ohm value of RTDIx:-1=N/V				
RTD INPUT5 IN OHM*100	3x41525 4x41525 I:41524	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Actual measured ohm value of RTDIx:-1=N/V				
RTD INPUT6 IN OHM*100	3x41527 4x41527 I:41526	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Actual measured ohm value of RTDIx:-1=N/V				
RTD INPUT7 IN OHM*100	3x41529 4x41529 I:41528	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Actual measured ohm value of RTDIx:-1=N/V				
RTD INPUT8 IN OHM*100	3x41531 4x41531 I:41530	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Actual measured ohm value of RTDIx:-1=N/V				



Register NAME Command NAME	MODBUS Register ASCII Command	Register VALUE ASCII Command	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>AIOX:AVERAGE RTD INPUTS OHM*10</b>						
AVERAGE RTD INPUT1 IN OHM*10	3x42001 4x42001 l:42000	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
Measured average RTD in Ohm*10 between 0 and 600000 =0..60000: Measured average resistance in Ohm*10 =65534,0xFFFF: The sensor or cabling is open (broken, not connected, or out of range) =65535,0xFFFF: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 IN OHM*10	3x42002 4x42002 l:42001	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT3 IN OHM*10	3x42003 4x42003 l:42002	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT4 IN OHM*10	3x42004 4x42004 l:42003	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT5 IN OHM*10	3x42005 4x42005 l:42004	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT6 IN OHM*10	3x42006 4x42006 l:42005	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT7 IN OHM*10	3x42007 4x42007 l:42006	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT8 IN OHM*10	3x42008 4x42008 l:42007	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
<b>AIOX:AVERAGE RTD INPUTS OHM*1</b>						
AVERAGE RTD INPUT1 IN OHM	3x42009 4x42009 l:42008	65535,0xFFFF B:FF FF			UINT16 R/O	

		Measured average ohm value of RTDIx:65535=N/V				
Measured average RTD in Ohm*1 between 0 and 60000 =0..60000: Measured average resistance in Ohm*1 =65534,0xFFFF: The sensor or cabling is open (broken, not connected, or out of range) =65535,0xFFFF: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 IN OHM	3x42010 4x42010 I:42009	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				
AVERAGE RTD INPUT3 IN OHM	3x42011 4x42011 I:42010	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				
AVERAGE RTD INPUT4 IN OHM	3x42012 4x42012 I:42011	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				
AVERAGE RTD INPUT5 IN OHM	3x42013 4x42013 I:42012	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				
AVERAGE RTD INPUT6 IN OHM	3x42014 4x42014 I:42013	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				
AVERAGE RTD INPUT7 IN OHM	3x42015 4x42015 I:42014	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				
AVERAGE RTD INPUT8 IN OHM	3x42016 4x42016 I:42015	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				
<b>AIOX:AVERAGE RTD INPUTS OHM/10</b>						
AVERAGE RTD INPUT1 IN OHM/10	3x42017 4x42017 I:42016	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				
Measured average RTD in Ohm/10 between 0 and 60000 =0..60000: Measured average resistance in Ohm/10 =65534,0xFFFF: The sensor or cabling is open (broken, not connected, or out of range) =65535,0xFFFF: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 IN OHM/10	3x42018 4x42018 I:42017	65535,0xFFFF B:FF FF			UINT16 R/O	
		Measured average ohm value of RTDIx:65535=N/V				

AVERAGE RTD INPUT3 IN OHM/10	3x42019 4x42019 I:42018	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT4 IN OHM/10	3x42020 4x42020 I:42019	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT5 IN OHM/10	3x42021 4x42021 I:42020	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT6 IN OHM/10	3x42022 4x42022 I:42021	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT7 IN OHM/10	3x42023 4x42023 I:42022	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
AVERAGE RTD INPUT8 IN OHM/10	3x42024 4x42024 I:42023	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average ohm value of RTDix:65535=N/V						
<b>AIOX:AVERAGE RTD INPUTS PT100 CELSIUS</b>						
AVERAGE RTD INPUT1 AS PT100 IN CELSIUS	3x42025 4x42025 I:42024	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDix:-32768=N/V						
Calculated average value of RTD sensor value linearized as PT100 sensor in Celsius*100 in the range of -5000 to +13000 for -50.0 to +130.0 °C -32766,0x8002: Measured value is below -50°C -32767,0x8001: Measured value is above +130°C -32768,0x8000: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 AS PT100 IN CELSIUS	3x42026 4x42026 I:42025	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDix:-32768=N/V						
AVERAGE RTD INPUT3 AS PT100 IN CELSIUS	3x42027 4x42027 I:42026	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDix:-32768=N/V						
AVERAGE RTD INPUT4 AS PT100 IN CELSIUS	3x42028 4x42028 I:42027	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDix:-32768=N/V						

AVERAGE RTD INPUT5 AS PT100 IN CELSIUS	3x42029 4x42029 I:42028	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT100 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT6 AS PT100 IN CELSIUS	3x42030 4x42030 I:42029	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT100 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT7 AS PT100 IN CELSIUS	3x42031 4x42031 I:42030	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT100 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT8 AS PT100 IN CELSIUS	3x42032 4x42032 I:42031	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT100 temperature RTDIx:-32768=N/V					
<b>AIOX:AVERAGE RTD INPUTS PT1000 CELSIUS</b>					
AVERAGE RTD INPUT1 AS PT1000 IN CELSIUS	3x42033 4x42033 I:42032	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V					
Calculated average value of RTD sensor value linearized as PT1000 sensor in Celsius*100 in the range of -5000 to +13000 for -50.0 to +130.0 °C -32766,0x8002: Measured value is below -50°C -32767,0x8001: Measured value is above +130°C -32768,0x8000: The channel is not configured as RTD input					
AVERAGE RTD INPUT2 AS PT1000 IN CELSIUS	3x42034 4x42034 I:42033	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT3 AS PT1000 IN CELSIUS	3x42035 4x42035 I:42034	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT4 AS PT1000 IN CELSIUS	3x42036 4x42036 I:42035	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT5 AS PT1000 IN CELSIUS	3x42037 4x42037 I:42036	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT6 AS PT1000 IN CELSIUS	3x42038 4x42038 I:42037	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V					

AVERAGE RTD INPUT7 AS PT1000 IN CELSIUS	3x42039 4x42039 I:42038	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT8 AS PT1000 IN CELSIUS	3x42040 4x42040 I:42039	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V					
<b>AIOX:AVERAGE RTD INPUTS NI1000-DIN43760 CELSIUS</b>					
AVERAGE RTD INPUT1 AS NI1000-DIN43760 IN CELSIUS	3x42041 4x42041 I:42040	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:-32768=N/V					
Calculated average value of RTD sensor value linearized as NI1000-DIN43760 sensor in Celsius*100 in the range of -5000 to +13000 for -50.0 to +130.0 °C -32766,0x8002: Measured value is below -50°C -32767,0x8001: Measured value is above +130°C -32768,0x8000: The channel is not configured as RTD input					
AVERAGE RTD INPUT2 AS NI1000-DIN43760 IN CELSIUS	3x42042 4x42042 I:42041	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT3 AS NI1000-DIN43760 IN CELSIUS	3x42043 4x42043 I:42042	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT4 AS NI1000-DIN43760 IN CELSIUS	3x42044 4x42044 I:42043	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT5 AS NI1000-DIN43760 IN CELSIUS	3x42045 4x42045 I:42044	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT6 AS NI1000-DIN43760 IN CELSIUS	3x42046 4x42046 I:42045	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT7 AS NI1000-DIN43760 IN CELSIUS	3x42047 4x42047 I:42046	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:-32768=N/V					
AVERAGE RTD INPUT8 AS NI1000-DIN43760 IN CELSIUS	3x42048 4x42048 I:42047	-32768,0x8000 B:80 00		SINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:-32768=N/V					
<b>AIOX:AVERAGE RTD INPUTS PT100 KELVIN</b>					

AVERAGE RTD INPUT1 AS PT100 IN KELVIN	3x42049 4x42049 I:42048	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT100 temperature RTDix:65535=655,35°K						
Average value of measured RTD sensor linearized as PT100 sensor in Kelvin*100 in the range of 22315 to 40315 for 223.15 to 403.15 °K 65533,0xFFFFD: Measured value is below 223,15°K 65534,0xFFFFE: Measured value is above 403,15°K 65535,0xFFFFF: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 AS PT100 IN KELVIN	3x42050 4x42050 I:42049	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT100 temperature RTDix:65535=655,35°K						
AVERAGE RTD INPUT3 AS PT100 IN KELVIN	3x42051 4x42051 I:42050	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT100 temperature RTDix:65535=655,35°K						
AVERAGE RTD INPUT4 AS PT100 IN KELVIN	3x42052 4x42052 I:42051	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT100 temperature RTDix:65535=655,35°K						
AVERAGE RTD INPUT5 AS PT100 IN KELVIN	3x42053 4x42053 I:42052	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT100 temperature RTDix:65535=655,35°K						
AVERAGE RTD INPUT6 AS PT100 IN KELVIN	3x42054 4x42054 I:42053	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT100 temperature RTDix:65535=655,35°K						
AVERAGE RTD INPUT7 AS PT100 IN KELVIN	3x42055 4x42055 I:42054	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT100 temperature RTDix:65535=655,35°K						
AVERAGE RTD INPUT8 AS PT100 IN KELVIN	3x42056 4x42056 I:42055	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT100 temperature RTDix:65535=655,35°K						
<b>AIOX:AVERAGE RTD INPUTS PT1000 KELVIN</b>						
AVERAGE RTD INPUT1 AS PT1000 IN KELVIN	3x42057 4x42057 I:42056	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT1000 temperature RTDix:65535=655,35°K						
Average value of measured RTD sensor linearized as PT1000 sensor in Kelvin*100 in the range of 22315 to 40315 for 223.15 to 403.15 °K 65533,0xFFFFD: Measured value is below 223,15°K 65534,0xFFFFE: Measured value is above 403,15°K 65535,0xFFFFF: The channel is not configured as RTD input						

AVERAGE RTD INPUT2 AS PT1000 IN KELVIN	3x42058 4x42058 I:42057	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT1000 temperature RTDIx:65535=655,35°K						
AVERAGE RTD INPUT3 AS PT1000 IN KELVIN	3x42059 4x42059 I:42058	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT1000 temperature RTDIx:65535=655,35°K						
AVERAGE RTD INPUT4 AS PT1000 IN KELVIN	3x42060 4x42060 I:42059	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT1000 temperature RTDIx:65535=655,35°K						
AVERAGE RTD INPUT5 AS PT1000 IN KELVIN	3x42061 4x42061 I:42060	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT1000 temperature RTDIx:65535=655,35°K						
AVERAGE RTD INPUT6 AS PT1000 IN KELVIN	3x42062 4x42062 I:42061	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT1000 temperature RTDIx:65535=655,35°K						
AVERAGE RTD INPUT7 AS PT1000 IN KELVIN	3x42063 4x42063 I:42062	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT1000 temperature RTDIx:65535=655,35°K						
AVERAGE RTD INPUT8 AS PT1000 IN KELVIN	3x42064 4x42064 I:42063	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average PT1000 temperature RTDIx:65535=655,35°K						
<b>AIOX:AVERAGE RTD INPUTS NI1000-DIN43760 KELVIN</b>						
AVERAGE RTD INPUT1 AS NI1000-DIN43760 IN KELVIN	3x42065 4x42065 I:42064	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
Average value of measured RTD sensor linearized as NI1000-DIN43760 sensor in Kelvin*100 in the range of 22315 to 40315 for 223.15 to 403.15 °K 65533,0xFFFF: Measured value is below 223,15°K 65534,0xFFFFE: Measured value is above 403,15°K 65535,0xFFFF: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 AS NI1000-DIN43760 IN KELVIN	3x42066 4x42066 I:42065	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:65535=655,35°K						
AVERAGE RTD INPUT3 AS NI1000-DIN43760 IN KELVIN	3x42067 4x42067 I:42066	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDIx:65535=655,35°K						

AVERAGE RTD INPUT4 AS NI1000-DIN43760 IN KELVIN	3x42068 4x42068 I:42067	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDlx:65535=655,35°K						
AVERAGE RTD INPUT5 AS NI1000-DIN43760 IN KELVIN	3x42069 4x42069 I:42068	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDlx:65535=655,35°K						
AVERAGE RTD INPUT6 AS NI1000-DIN43760 IN KELVIN	3x42070 4x42070 I:42069	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDlx:65535=655,35°K						
AVERAGE RTD INPUT7 AS NI1000-DIN43760 IN KELVIN	3x42071 4x42071 I:42070	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDlx:65535=655,35°K						
AVERAGE RTD INPUT8 AS NI1000-DIN43760 IN KELVIN	3x42072 4x42072 I:42071	65535,0xFFFF B:FF FF			UINT16 R/O	
Measured average NI1000-DIN43760 temperature RTDlx:65535=655,35°K						
<b>AIOX:AVERAGE RTD INPUTS PT100 FAHRENHEIT</b>						
AVERAGE RTD INPUT1 AS PT100 IN FAHRENHEIT	3x42073 4x42073 I:42072	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDlx:-32768=N/V						
Average value of measured RTD sensor value linearized as PT100 sensor in Fahrenheit*100 in the range of -5800 to +26600 for -58.0 to +266.0 °F -32766,0x8002: Measured value is below -58°C -32767,0x8001: Measured value is above +266°C -32768,0x8000: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 AS PT100 IN FAHRENHEIT	3x42074 4x42074 I:42073	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDlx:-32768=N/V						
AVERAGE RTD INPUT3 AS PT100 IN FAHRENHEIT	3x42075 4x42075 I:42074	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDlx:-32768=N/V						
AVERAGE RTD INPUT4 AS PT100 IN FAHRENHEIT	3x42076 4x42076 I:42075	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDlx:-32768=N/V						
AVERAGE RTD INPUT5 AS PT100 IN FAHRENHEIT	3x42077 4x42077 I:42076	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDlx:-32768=N/V						



AVERAGE RTD INPUT6 AS PT100 IN FAHRENHEIT	3x42078 4x42078 I:42077	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDIx:-32768=N/V						
AVERAGE RTD INPUT7 AS PT100 IN FAHRENHEIT	3x42079 4x42079 I:42078	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDIx:-32768=N/V						
AVERAGE RTD INPUT8 AS PT100 IN FAHRENHEIT	3x42080 4x42080 I:42079	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT100 temperature RTDIx:-32768=N/V						
<b>AIOX:AVERAGE RTD INPUTS PT1000 FAHRENHEIT</b>						
AVERAGE RTD INPUT1 AS PT1000 IN FAHRENHEIT	3x42081 4x42081 I:42080	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V						
Average value of measured RTD sensor value linearized as PT1000 sensor in Fahrenheit*100 in the range of -5800 to +26600 for -58.0 to +266.0 °F -32766,0x8002: Measured value is below -58°C -32767,0x8001: Measured value is above +266°C -32768,0x8000: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 AS PT1000 IN FAHRENHEIT	3x42082 4x42082 I:42081	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V						
AVERAGE RTD INPUT3 AS PT1000 IN FAHRENHEIT	3x42083 4x42083 I:42082	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V						
AVERAGE RTD INPUT4 AS PT1000 IN FAHRENHEIT	3x42084 4x42084 I:42083	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V						
AVERAGE RTD INPUT5 AS PT1000 IN FAHRENHEIT	3x42085 4x42085 I:42084	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V						
AVERAGE RTD INPUT6 AS PT1000 IN FAHRENHEIT	3x42086 4x42086 I:42085	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V						
AVERAGE RTD INPUT7 AS PT1000 IN FAHRENHEIT	3x42087 4x42087 I:42086	-32768,0x8000 B:80 00			SINT16 R/O	
Measured average PT1000 temperature RTDIx:-32768=N/V						

AVERAGE RTD INPUT8 AS PT1000 IN FAHRENHEIT	3x42088 4x42088 I:42087	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average PT1000 temperature RTDix:-32768=N/V			
<b>AIOX:AVERAGE RTD INPUTS NI1000-DIN43760 FAHRENHEIT</b>					
AVERAGE RTD INPUT1 AS NI1000-DIN43760 IN FAHRENHEIT	3x42089 4x42089 I:42088	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average NI1000-DIN43760 temperature RTDix:-32768=N/V			
Average value of measured RTD sensor value linearized as NI1000-DIN43760 sensor in Fahrenheit*100 in the range of -5800 to +26600 for -58.0 to +266.0 °F -32766,0x8002: Measured value is below -58°C -32767,0x8001: Measured value is above +266°C -32768,0x8000: The channel is not configured as RTD input					
AVERAGE RTD INPUT2 AS NI1000-DIN43760 IN FAHRENHEIT	3x42090 4x42090 I:42089	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average NI1000-DIN43760 temperature RTDix:-32768=N/V			
AVERAGE RTD INPUT3 AS NI1000-DIN43760 IN FAHRENHEIT	3x42091 4x42091 I:42090	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average NI1000-DIN43760 temperature RTDix:-32768=N/V			
AVERAGE RTD INPUT4 AS NI1000-DIN43760 IN FAHRENHEIT	3x42092 4x42092 I:42091	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average NI1000-DIN43760 temperature RTDix:-32768=N/V			
AVERAGE RTD INPUT5 AS NI1000-DIN43760 IN FAHRENHEIT	3x42093 4x42093 I:42092	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average NI1000-DIN43760 temperature RTDix:-32768=N/V			
AVERAGE RTD INPUT6 AS NI1000-DIN43760 IN FAHRENHEIT	3x42094 4x42094 I:42093	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average NI1000-DIN43760 temperature RTDix:-32768=N/V			
AVERAGE RTD INPUT7 AS NI1000-DIN43760 IN FAHRENHEIT	3x42095 4x42095 I:42094	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average NI1000-DIN43760 temperature RTDix:-32768=N/V			
AVERAGE RTD INPUT8 AS NI1000-DIN43760 IN FAHRENHEIT	3x42096 4x42096 I:42095	-32768,0x8000 B:80 00		SINT16 R/O	
		Measured average NI1000-DIN43760 temperature RTDix:-32768=N/V			
<b>AIOX:RTD INPUTS OHM*100</b>					
AVERAGE RTD INPUT1 IN OHM*100	3x42501 4x42501 I:42500	4294967295,0xFFFFFFFF B:FF FF FF FF		UINT32 R/O	
		Measured average ohm value of RTDix:-1=N/V			

Measured average RTD in Ohm*100 =0xFFFFFFFF: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 IN OHM*100	3x42503 4x42503 I:42502	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O	
Measured average ohm value of RTDix:-1=N/V						
AVERAGE RTD INPUT3 IN OHM*100	3x42505 4x42505 I:42504	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O	
Measured average ohm value of RTDix:-1=N/V						
AVERAGE RTD INPUT4 IN OHM*100	3x42507 4x42507 I:42506	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O	
Measured average ohm value of RTDix:-1=N/V						
AVERAGE RTD INPUT5 IN OHM*100	3x42509 4x42509 I:42508	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O	
Measured average ohm value of RTDix:-1=N/V						
AVERAGE RTD INPUT6 IN OHM*100	3x42511 4x42511 I:42510	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O	
Measured average ohm value of RTDix:-1=N/V						
AVERAGE RTD INPUT7 IN OHM*100	3x42513 4x42513 I:42512	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O	
Measured average ohm value of RTDix:-1=N/V						
AVERAGE RTD INPUT8 IN OHM*100	3x42515 4x42515 I:42514	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32 R/O	
Measured average ohm value of RTDix:-1=N/V						
<b>AIOX:AVERAGE RTD INPUTS OHM*100</b>						
AVERAGE RTD INPUT1 IN OHM*100	3x42517 4x42517 I:42516	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
Measured average ohm value of RTDix:-1=N/V						
Measured average RTD in Ohm*100 =0xFFFFFFFF: The channel is not configured as RTD input						
AVERAGE RTD INPUT2 IN OHM*100	3x42519 4x42519 I:42518	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
Measured average ohm value of RTDix:-1=N/V						
AVERAGE RTD INPUT3 IN OHM*100	3x42521 4x42521 I:42520	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
Measured average ohm value of RTDix:-1=N/V						

AVERAGE RTD INPUT4 IN OHM*100	3x42523 4x42523 I:42522	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Measured average ohm value of RTDix:-1=N/V				
AVERAGE RTD INPUT5 IN OHM*100	3x42525 4x42525 I:42524	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Measured average ohm value of RTDix:-1=N/V				
AVERAGE RTD INPUT6 IN OHM*100	3x42527 4x42527 I:42526	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Measured average ohm value of RTDix:-1=N/V				
AVERAGE RTD INPUT7 IN OHM*100	3x42529 4x42529 I:42528	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Measured average ohm value of RTDix:-1=N/V				
AVERAGE RTD INPUT8 IN OHM*100	3x42531 4x42531 I:42530	4294967295,0xFFFFFFFF B:FF FF FF FF			UINT32R R/O	
		Measured average ohm value of RTDix:-1=N/V				

Register NAME Command NAME	MODBUS Register ASCII Command	Register VALUE ASCII Command	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>AIOX CHIP TEMPERATURE</b>						
TEMPERATURE CHIP 1 IN CELSIUS	3x43001 4x43001 l:43000	464,0x01D0 B:01 D0			UINT16 R/O	
Actual measured temperature of CHIPx:46,4°C						
Current measured chip temperature for CHIPx in x*10 °C. Each CHIP supports 4 AIOX channels.						
TEMPERATURE CHIP 2 IN CELSIUS	3x43002 4x43002 l:43001	475,0x01DB B:01 DB			UINT16 R/O	
Actual measured temperature of CHIPx:47,5°C						
<b>AIOX CHIP TEMPERATURE</b>						
AVERAGE TEMPERATURE CHIP 1 IN CELSIUS	3x43003 4x43003 l:43002	464,0x01D0 B:01 D0			UINT16 R/O	
Measured average temperature of CHIPx:46,4°C						
Measured average chip temperature for CHIPx in x*10 °C. Each CHIP supports 4 AIOX channels.						
AVERAGE TEMPERATURE CHIP 2 IN CELSIUS	3x43004 4x43004 l:43003	475,0x01DB B:01 DB			UINT16 R/O	
Measured average temperature of CHIPx:47,5°C						
<b>AIOX CHIP VOLTAGES</b>						
Vavdd CHIP 1 IN VOLT	3x43005 4x43005 l:43004	146,0x0092 B:00 92			UINT16 R/O	
Actual measured voltage Vavdd of CHIPx:14,6V						
Current measured voltage Vavdd for CHIPx in x*10 Volts. Each CHIP supports 4 AIOX channels. This must be >14.5V, if not, there is a severe wiring or other hardware issue!						
Vavdd CHIP 2 IN VOLT	3x43006 4x43006 l:43005	146,0x0092 B:00 92			UINT16 R/O	
Actual measured voltage Vavdd of CHIPx:14,6V						
<b>AIOX CHIP VOLTAGES</b>						
AVERAGE Vavdd CHIP 1 IN VOLT	3x43007 4x43007 l:43006	146,0x0092 B:00 92			UINT16 R/O	
Measured average voltage Vavdd of CHIPx:14,6V						
Current measured voltage Vavdd for CHIPx in x*10 Volts. Each CHIP supports 4 AIOX channels. This must be >14.5V, if not, there is a severe wiring or other hardware issue!						
AVERAGE Vavdd CHIP 2 IN VOLT	3x43008 4x43008 l:43007	146,0x0092 B:00 92			UINT16 R/O	

		Measured average voltage Vagnd of CHIPx:14,6V				
<b>AIOX CHIP VOLTAGES</b>						
Vagnd CHIP 1 IN VOLT	3x43009 4x43009 I:43008	0,0x0000 B:00 00			UINT16 R/O	
		Actual measured voltage Vagnd of CHIPx:0,0V				
Current measured voltage Vagnd for CHIPx in x*10 Volts. Each CHIP supports 4 AIOX channels. This must be 0V, if not, there is a severe wiring or other hardware issue!						
Vagnd CHIP 2 IN VOLT	3x43010 4x43010 I:43009	0,0x0000 B:00 00			UINT16 R/O	
		Actual measured voltage Vagnd of CHIPx:0,0V				
<b>AIOX CHIP VOLTAGES</b>						
AVERAGE Vagnd CHIP 1 IN VOLT	3x43011 4x43011 I:43010	0,0x0000 B:00 00			UINT16 R/O	
		Measured average voltage Vagnd of CHIPx:0,0V				
Current measured voltage Vagnd for CHIPx in x*10 Volts. Each CHIP supports 4 AIOX channels. This must be 0V, if not, there is a severe wiring or other hardware issue!						
AVERAGE Vagnd CHIP 2 IN VOLT	3x43012 4x43012 I:43011	0,0x0000 B:00 00			UINT16 R/O	
		Measured average voltage Vagnd of CHIPx:0,0V				
<b>AIOX CHIP STATUS</b>						
LIVE STATUS CHIP 1	3x43013 4x43013 I:43012	30720,0x7800 B:78 00			UINT16 R/O	
		Actual live status of CHIPx:7800				
Current live status for CHIPx. Each CHIP supports 4 AIOX channels. Each result bit stands for a different state: Bit 0: VI_ERR_CURR_A: Status of channel A:Voltage or current error detected on Channel A. This bit is interpreted differently depending on which of the following IO function selected: Voltage output: short-circuit error. The error condition is debounced for 2 ms before the status bit is set. Current output: open circuit error. The error condition is debounced for 2 ms before the status bit is set. Current input, loop powered: short-circuit error. A short to ground is detected Current input, externally powered: short-circuit error. A current source >25 mA is detected Bit 1: VI_ERR_CURR_B: Status of voltage input B. Same like VI_ERR_CURR_A Bit 2: VI_ERR_CURR_C: Status of voltage input C. Same like VI_ERR_CURR_A Bit 3: VI_ERR_CURR_D: Status of voltage input D. Same like VI_ERR_CURR_A Bit 4: HI_TEMP_STATUS: If the die temperature is typically at or above 115°C, the HI_TEMP_STATUS bit is asserted Bit 5: CHARGE_PUMP_STATUS: Charge pump error detected. Bit 6: ALDO5V_STATUS: ALDO5V Power Supply Monitor Error. This bit is asserted when the ALDO5V pin falls below 4.05 V. Usually ~5V. Bit 7: AVDD_STATUS: AVDD Power Supply Monitor Error. This bit is asserted when the AVDD pin falls below 9.26 V. Usually ~17V. Bit 8: DVCC_STATUS: DVCC Power Supply Monitor Error. This bit is asserted when the DVCC pin falls below 1.93 V. Usually ~3.3V. Bit 9: ALDO1V8_STATUS: ALDO1V8 Power Supply Monitor Error. This bit is asserted when the ALDO1V8 pin falls below 1.35 V. Usually ~1.8V. Bit 10-12: ADC_CH_CURR: Current converted channel of the ADC (0:A, 1:B, 2:C, 3:D, 4:Diagnostic 0, 5:Diagnostic 1, 6:Diagnostic 2, 7:Diagnostic 3) Bit 13: ADC_BUSY: ADC busy status bit. Bit 14: ADC_DATA_RDY:ADC data ready. The ADC_DATA_RDY bit asserts when a conversion cycle has completed. The bit stays asserted until a user writes 1 to clear the bit. In single conversion mode, the ADC_RDY pin follows the ADC_DATA_RDY bit and only deasserts when the ADC_DATA_RDY bit is cleared. In continuous conversion mode, the ADC_RDY pin returns high after 24 µs. Bit 15: RESERVED: Reserved						

LIVE STATUS CHIP 2	3x43014 4x43014 l:43013	24576,0x6000 B:60 00			UINT16 R/O	
Actual live status of CHIPx:6000						
<b>AIOX CHIP STATUS</b>						
ALERT STATUS CHIP 1	3x43015 4x43015 l:43014	33792,0x8400 B:84 00			UINT16 R/O	
Actual alert status of CHIPx:8400						
<p>Current alert status for CHIPx. Each CHIP supports 4 AIOX channels.  Each result bit stands for a different state:  Bit 0: VI_ERR_CURR_A: Status of channel A:Voltage or current error detected on Channel A. This bit is interpreted differently depending on which of the following IO function selected:  Voltage output: short-circuit error. The error condition is debounced for 2 ms before the status bit is set.  Current output: open circuit error. The error condition is debounced for 2 ms before the status bit is set.  Current input, loop powered: short-circuit error. A short to ground is detected  Current input, externally powered: short-circuit error. A current source &gt;25 mA is detected  Bit 1: VI_ERR_CURR_B: Status of voltage input B. Same like VI_ERR_CURR_A  Bit 2: VI_ERR_CURR_C: Status of voltage input C. Same like VI_ERR_CURR_A  Bit 3: VI_ERR_CURR_D: Status of voltage input D. Same like VI_ERR_CURR_A  Bit 4: HI_TEMP_STATUS: If the die temperature is typically at or above 115°C, the HI_TEMP_STATUS bit is asserted  Bit 5: CHARGE_PUMP_STATUS: Charge pump error detected.  Bit 6: ALDO5V_STATUS: ALDO5V Power Supply Monitor Error. This bit is asserted when the ALDO5V pin falls below 4.05 V. Usually ~5V.  Bit 7: AVDD_STATUS: AVDD Power Supply Monitor Error. This bit is asserted when the AVDD pin falls below 9.26 V. Usually ~17V.  Bit 8: DVCC_STATUS: DVCC Power Supply Monitor Error. This bit is asserted when the DVCC pin falls below 1.93 V. Usually ~3.3V.  Bit 9: ALDO1V8_STATUS: ALDO1V8 Power Supply Monitor Error. This bit is asserted when the ALDO1V8 pin falls below 1.35 V. Usually ~1.8V.  Bit 10: ADC_CONV_ERR: ADC Conversion Error. ADC results may be outside the selected measurement range.  Bit 11: ADC_SAT_ERR: ADC Saturation Error. ADC may be outside the user selected measurement range.  Bit 12: SPI_SCLK_CNT_ERR: SPI SCLK count error detected. This bit is asserted if an SPI command is applied but 32 SCLKs are not provided.  Bit 13: SPI_CRC_ERR: SPI CRC error detected. This bit is asserted if an invalid CRC is received.  Bit 14: CAL_MEM_ERR: Calibration Memory Error. This flag asserts under the following two conditions: When a calibration memory CRC error or an uncorrectable error correcting code (ECC) error is detected on the calibration memory upload.  It is not possible to clear this bit if there is a CRC error or uncorrectable ECC error. It is recommended to reset the device and check the supplies in this situation. When there is an attempted SPI access to a register before the calibration memory refresh is complete. Do not address the device until the calibration memory is refreshed. Writing 1 to this bit clears the flag, if the flag is asserted due to this condition.  Bit 15: RESET_OCCURRED: Reset occurred. This bit is asserted after a reset event, which asserts the ALERT pin after the reset. Write a 1 to this bit to clear the flag. Note that a mask bit is not provided for this bit.</p>						
ALERT STATUS CHIP 2	3x43016 4x43016 l:43015	33792,0x8400 B:84 00			UINT16 R/O	
Actual alert status of CHIPx:8400						
<b>AIOX SPI STATUS</b>						
SPI ERRORS CHIP 1	3x43017 4x43017 l:43016	0,0x0000 B:00 00			UINT16 R/O	
Actual SPI error counter of CHIPx:0 error(s)						
<p>Current SPI error counter for CHIPx. Each CHIP supports 4 AIOX channels.  This command shows the actual SPI errors since power up for every chip</p>						
SPI ERRORS CHIP 2	3x43018 4x43018 l:43017	0,0x0000 B:00 00			UINT16 R/O	
Actual SPI error counter of CHIPx:0 error(s)						
<b>AIOX STATE MACHINES</b>						

STATE MACHINE CHIP 1	3x43019 4x43019 l:43018	12070,0x2F26 B:2F 26			UINT16 R/O	
		Actual state of CHIPx:12070				
This command shows the acutal state of the internal communication state machine for CHIPx						
STATE MACHINE CHIP 2	3x43020 4x43020 l:43019	12050,0x2F12 B:2F 12			UINT16 R/O	
		Actual state of CHIPx:12050				
<b>AIOX ONLINE</b>						
IS ONLINE CHIP 1	3x43021 4x43021 l:43020	1,0x0001 B:00 01			UINT16 R/O	
		Is CHIPx online:1=YES				
This command shows the acutal state of the internal communication state machine for CHIPx						
IS ONLINE CHIP 2	3x43022 4x43022 l:43021	1,0x0001 B:00 01			UINT16 R/O	
		Is CHIPx online:1=YES				
<b>AIOX CLEAR ALARM STATE</b>						
CLEAR ALERT STATES CHIP 1	3x43023 4x43023 l:43022	0,0x0000 B:00 00	65535		UINT16 R/W	YES
		0:VI_ERR_A		1:RESET FLAG		
		1:VI_ERR_B		1:RESET FLAG		
		2:VI_ERR_C		1:RESET FLAG		
		3:VI_ERR_D		1:RESET FLAG		
		4:HI_TEMP_ERR		1:RESET FLAG		
		5:CHARGE_PUMP_ERR		1:RESET FLAG		
		6:ALDO5V_ERR		1:RESET FLAG		
		7:AVDD_ERR		1:RESET FLAG		
		8:DVCC_ERR		1:RESET FLAG		
		9:ALDO1V8_ERR		1:RESET FLAG		
		10:ADC_CONV_ERR		1:RESET FLAG		
		11:ADC_SAT_ERR		1:RESET FLAG		
		12:SPI_SCLK_ERR		1:RESET FLAG		
		13:SPI_CRC_ERR		1:RESET FLAG		
		14:CAL_MEM_ERR		1:RESET FLAG		
		15:RESET_OCCURED		1:RESET FLAG		
With this command you can reset individual alert bits in the alert status register of CHIPx						
CLEAR ALERT STATES CHIP 2	3x43024 4x43024 l:43023	0,0x0000 B:00 00	65535		UINT16 R/W	YES
		0:VI_ERR_A		1:RESET FLAG		
		1:VI_ERR_B		1:RESET FLAG		



		2:VI_ERR_C		1:RESET FLAG		
		3:VI_ERR_D		1:RESET FLAG		
		4:HI_TEMP_ERR		1:RESET FLAG		
		5:CHARGE_PUMP_ERR		1:RESET FLAG		
		6:ALDO5V_ERR		1:RESET FLAG		
		7:AVDD_ERR		1:RESET FLAG		
		8:DVCC_ERR		1:RESET FLAG		
		9:ALDO1V8_ERR		1:RESET FLAG		
		10:ADC_CONV_ERR		1:RESET FLAG		
		11:ADC_SAT_ERR		1:RESET FLAG		
		12:SPI_SCLK_ERR		1:RESET FLAG		
		13:SPI_CRC_ERR		1:RESET FLAG		
		14:CAL_MEM_ERR		1:RESET FLAG		
		15:RESET_OCCURED		1:RESET FLAG		

With this command you can reset individual alert bits in the alert status register of CHIPx

#### AIOX RESET STATE MACHINE

RESET CHIP 1 STATE MACHINE	3x43025 4x43025 I:43024	0,0x0000 B:00 00	1	1:RESET STATE MACHINE	UINT16 R/W	YES
-------------------------------	-------------------------------	---------------------	---	-----------------------	---------------	-----

This command restarts the state machine for chip CHIPx . The affected chip will be resetted & initialized completely

RESET CHIP 2 STATE MACHINE	3x43026 4x43026 I:43025	0,0x0000 B:00 00	1	1:RESET STATE MACHINE	UINT16 R/W	YES
-------------------------------	-------------------------------	---------------------	---	-----------------------	---------------	-----

Register NAME Command NAME	MODBUS Register ASCII Command	Register VALUE ASCII Command	NEW REAL VALUE	NEW VALUE	DATA TYPE	DO WRITE
<b>AIOX CONFIG OUTPUT VALUES</b>						
CONFIG OUTPUT VALUE AIOX1	3x44001 4x44001 I:44000	65535,0xFFFF B:FF FF	100	1	UINT16 R/W	YES
Actual config value for AIOx:N/A			ENTER NEW CONFIG VALUE FOR AIOx			
This command sets for all outputs the standard value in Volt*100 or in mA*100, which are used when the controller is restarted or a watchdog condition has occurred and the channel is used as voltage output or current output. For voltage outputs the range is 0 to 1100 (0 to 11,0V). For current outputs the range is 0 to 2500 (0 to 25mA). All IOs with a different usage type will return 65535,0xFFFF.						
CONFIG OUTPUT VALUE AIOX2	3x44002 4x44002 I:44001	65535,0xFFFF B:FF FF	200	2	UINT16 R/W	YES
Actual config value for AIOx:N/A			ENTER NEW CONFIG VALUE FOR AIOx			
CONFIG OUTPUT VALUE AIOX3	3x44003 4x44003 I:44002	65535,0xFFFF B:FF FF	300	3	UINT16 R/W	YES
Actual config value for AIOx:N/A			ENTER NEW CONFIG VALUE FOR AIOx			
CONFIG OUTPUT VALUE AIOX4	3x44004 4x44004 I:44003	65535,0xFFFF B:FF FF	400	4	UINT16 R/W	YES
Actual config value for AIOx:N/A			ENTER NEW CONFIG VALUE FOR AIOx			
CONFIG OUTPUT VALUE AIOX5	3x44005 4x44005 I:44004	65535,0xFFFF B:FF FF	500	5	UINT16 R/W	YES
Actual config value for AIOx:N/A			ENTER NEW CONFIG VALUE FOR AIOx			
CONFIG OUTPUT VALUE AIOX6	3x44006 4x44006 I:44005	65535,0xFFFF B:FF FF	600	6	UINT16 R/W	YES
Actual config value for AIOx:N/A			ENTER NEW CONFIG VALUE FOR AIOx			
CONFIG OUTPUT VALUE AIOX7	3x44007 4x44007 I:44006	65535,0xFFFF B:FF FF	700	7	UINT16 R/W	YES
Actual config value for AIOx:N/A			ENTER NEW CONFIG VALUE FOR AIOx			
CONFIG OUTPUT VALUE AIOX8	3x44008 4x44008 I:44007	65535,0xFFFF B:FF FF	800	8	UINT16 R/W	YES
Actual config value for AIOx:N/A			ENTER NEW CONFIG VALUE FOR AIOx			
<b>INTER PROCESSOR COMMUNICATION</b>						
AIOX IS ONLINE	3x50000 4x50000 I:49999	1,0x0001 B:00 01			UINT16 R/O	

	Actual communication status co-processor to AIOX processor:OK		
This command returns the actual state of the serial communication between the ARM co-processor and the additional processor for the AIOX. =1: Currently the communication is fine =0: There is a mayor problem/hardware fault between the two processors			