


WICHTIG: Bevor Sie mit der Installation des Produkts beginnen, lesen Sie die beigefügten **WICHTIGEN SICHERHEITSHINWEISE** aufmerksam durch und befolgen Sie diese Informationen sorgfältig!

Beschreibung:
IO-Modul mit Ethernet und MODBUS/TCP-Server und ASCII-Textprotokoll, 64 Digitale Eingänge für DC 12-48V=, 60 Digitale Halbleiterausgänge DC ≤30V=, ≤700mA, kurzschlussfest, Diagnosefunktionen, 16 Universelle Analoge Ein- oder Ausgänge, 0/2-10V, 0/4-20mA, RTD Sensoren 0-1MΩ, PT100, PT1000, NI1000, Logik Eingang: ≤40V, ≤1.8mA, pro Kanal individuell konfigurierbar, Größe (LxBxH):213x110x62mm, Gewicht:589g, Spannungsversorgung:12-48V=, Leistungsaufnahme:3.0W, Gehäuse:12TE, Montage:Schnappbar auf EN50022 DIN Schiene oder Wandmontage, Klemmen:Klemmentyp RM5 , Kabelquerschnitt: max. 2.5 mm², max. 14AWG, Schraube: M3, Anzugsmoment: max. 0.5Nm, max. 4.43 Lb-in, Klemmentyp RM3.5, Kabelquerschnitt: max. 1.5 mm², max. 16AWG, Schraube: M2, Anzugsmoment: max. 0.2Nm, max. 1.77 Lb-in, Zertifizierung:CE, Schutzklasse:IP20, TARIC Nummer:8538 90 91

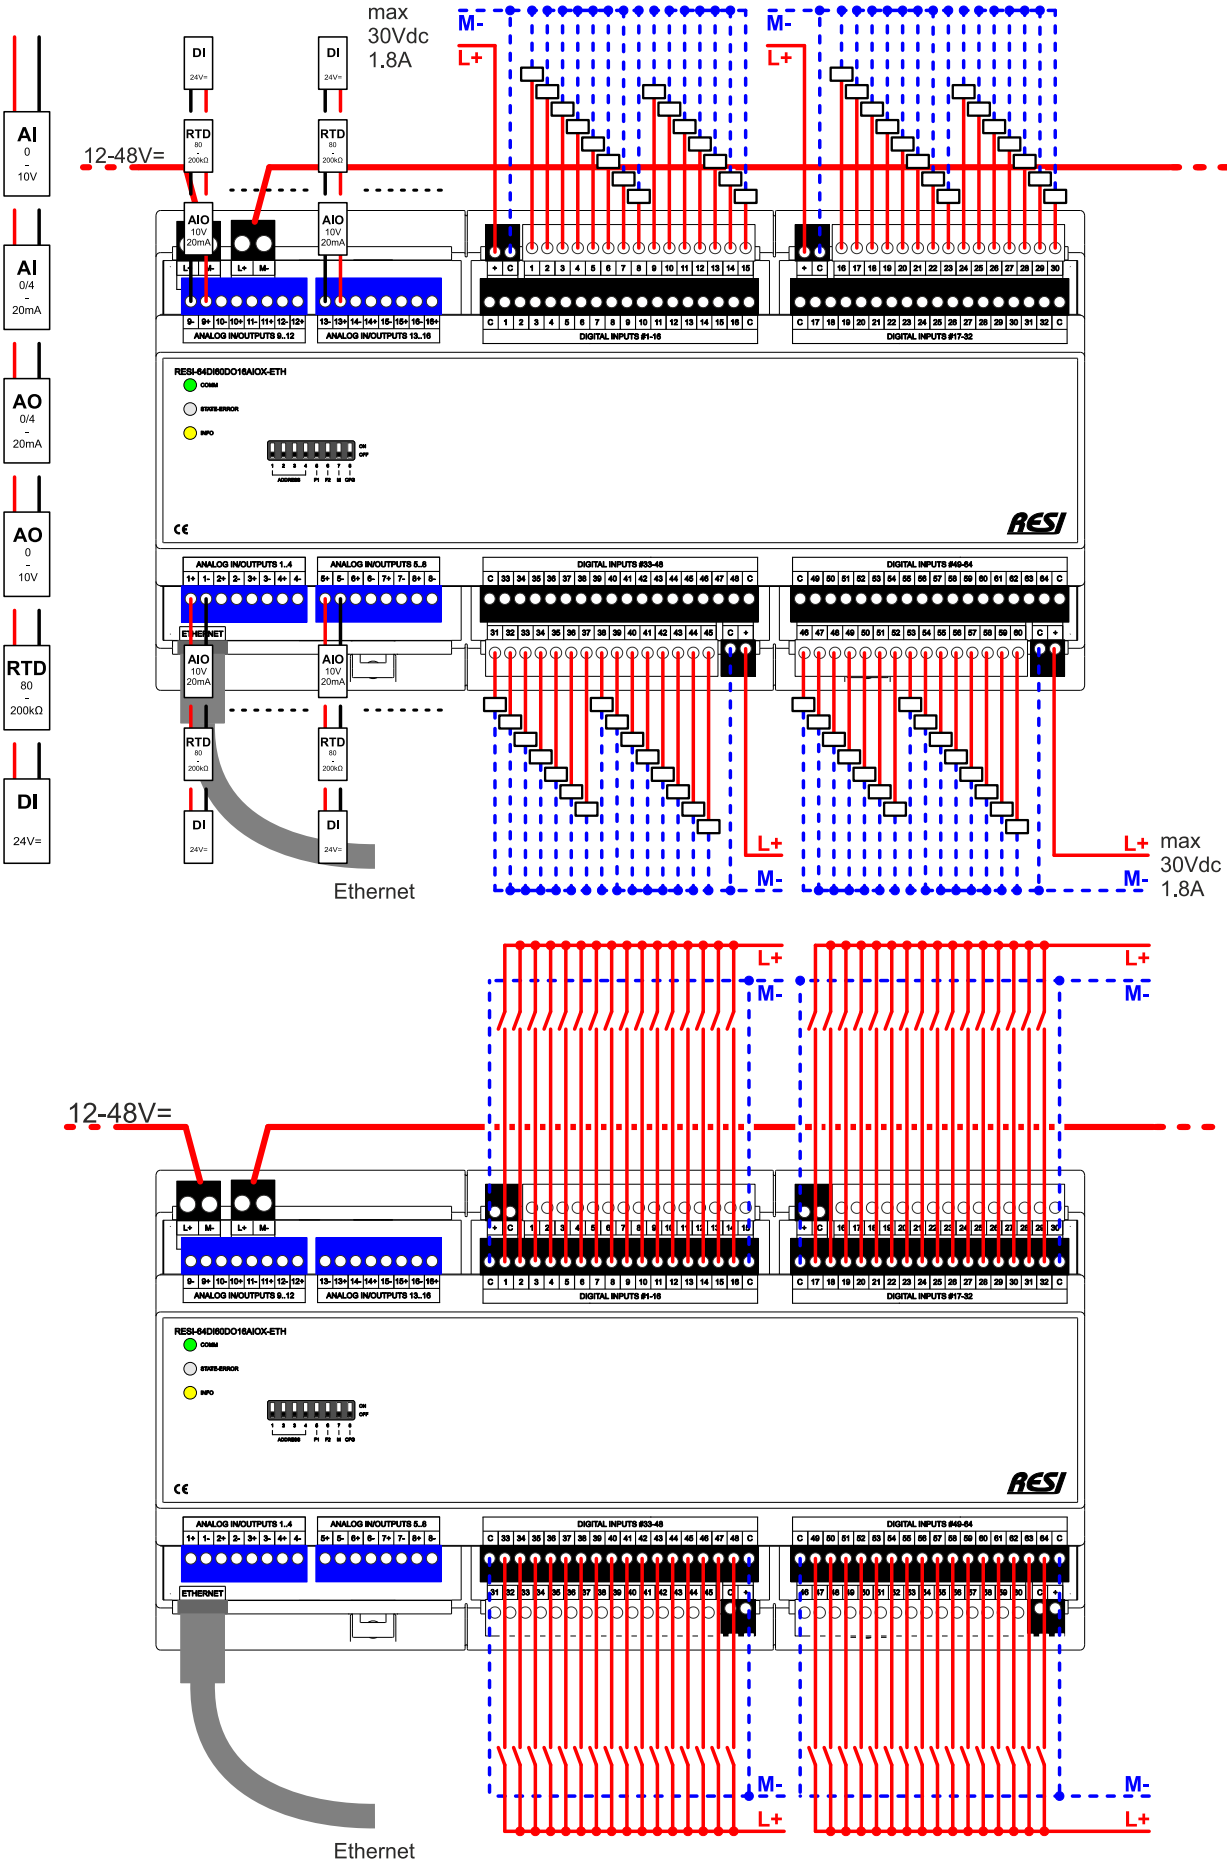

WICHTIG: Bevor Sie mit der Installation des Produkts beginnen, lesen Sie die beigefügten **WICHTIGEN SICHERHEITSHINWEISE** aufmerksam durch und befolge Sie diese Informationen sorgfältig!

KLEMMEN: L+, M-	Zwei 2-polige Steckklemmen RM5 Spannungsversorgung für Daisy-chain IN und OUT von vielen IO Modulen 1 L+ 12-48 V= 2 M- Masse
ETH	Ethernet Schnittstelle, RJ45
DIGITALE EINGÄNGE	Vier 18-polige Steckklemmen RM3.5 64 digitale Eingänge für Signale: 12...48V=, ≤1.8mA
KLEMME #1-#4	18-polige Steckklemme 1 C Gemeinsame Masse M- 2 1,17,33,49 Digitaleingang #1 3 2,18,34,50 Digitaleingang #2 16 15,31,47,63 Digitaleingang #15 17 16,32,48,64 Digitaleingang #16 18 C Gemeinsame Masse M-
DIGITALE AUSGÄNGE	Vier 2-polige Steckklemmen RM3.5 Versorgung DC Ausgangsgruppe ≤30V=, ≤1.8A S1:DO1-DO15, S2:DO16-DO30, S3:DO31-DO45, S4:DO46-DO60 Vier 15-polige Steckklemmen RM3.5 15 DC Halbleiterausgänge ≤30V=, ≤700mA, kurzschlussfest
KLEMME S1,S2,S3,S4	2-polige Steckklemme 1 Sx:+ Stromversorgung ≤30V, ≤1.8A für Gruppe 2 Sx:C Masse-Signal der Stromversorgung
KLEMME 1-4	15-polige Steckklemme 1 1,16,31,46 Halbleiterausgang DO#1 2 2,17,32,47 Halbleiterausgang DO#2 ... 14 14,29,44,59 Halbleiterausgang DO#14 15 15,30,45,60 Halbleiterausgang DO#15
UNIVERSELLE ANALOGE EIN/AUSGÄNGE	Vier 8-polige Steckklemmen RM3.5 für je 4 universelle analoge Ein-/Ausgänge Jeder EA individuell konfigurierbar: AE Analogeingang 0-10V AA Analogausgang 0-10V AE Analogeingang 0/4-20mA AA Analogausgang 0/4-20mA RTDE RTD Sensoreingang 0-200kOhm DE Digitaleingang 24V
KLEMME 1-2	8-polige Steckklemme 1 1+,5+ Positives Signal für AE/AA/RTDE/DE AIOX#1 2 1-,5- Negatives Signal für AE/AA/RTDE/DE AIOX#1 ... 7 4+,8+ Positives Signal für AE/AA/RTDE/DE AIOX#4 8 4-,8- Negatives Signal für AE/AA/RTDE/DE AIOX#4
KLEMME 3-4	8-polige Steckklemme 1 9-,13- Negatives Signal für AE/AA/RTDE/DE AIOX#1 2 9+,13+ Positives Signal für AE/AA/RTDE/DE AIOX#1 ... 7 12-,16- Negatives Signal für AE/AA/RTDE/DE AIOX#4 8 12+,16+ Positives Signal für AE/AA/RTDE/DE AIOX#4

Technische Information	
Betriebstemperatur	0...+55°C
Lagerungstemperatur	-20...+80°C
Feuchte	25...90%r.F. nicht kondensierend
Spannungsversorgung:	12-48V=
Leistungsaufnahme:	3.0W
Klemmen	Klemmentyp RM5 Kabelquerschnitt: max. 2.5 mm², max. 14AWG Schraube: M3 Anzugsmoment: max. 0.5Nm, max. 4.43 Lb-in
Abmessungen (LxBxH)	Klemmentyp RM3.5 Kabelquerschnitt: max. 1.5 mm², max. 16AWG Schraube: M2 Anzugsmoment: max. 0.2Nm, max. 1.77 Lb-in
Gewicht:	213x110x62mm
Gehäuse:	589g
Montage:	12TE
Zertifizierung:	Schnappbar auf EN5022 DIN Schiene oder Wandmontage
Schutzklasse:	CE
TARIC Nummer:	IP20
	8538 90 91

LEDs:

COMM

STATE-ERROR

INFO

DIP SCHALTER:

ADDRESS

1=ID0

2=ID1

3=ID2

4=ID3

5=F1 DHCP

6=F2 STATIC

7=M MODE

8=CFG CONFIG

STANDARD IP EINSTELLUNGEN:

HINWEIS:

Zeigt an, ob derzeit Daten über die Ethernet-Schnittstelle gesendet oder empfangen werden

Die Status-LED blinkt langsam (ca. 1 s) in WEISS, wenn das Modul in Ordnung ist. Blinkt schnell in ROT, wenn das Modul einen internen Fehler aufweist

Wenn zumindest einer der digitalen Ein- oder Ausgänge aktiviert ist (EIN), ist diese LED EIN.
Wenn keiner der digitalen Ein- oder Ausgänge aktiviert ist (AUS), ist diese LED AUS.

Diese vier DIP-Schalter ID3-ID0 bilden die MODBUS Unit ID oder ASCII-Busadresse. Sie können die folgenden Einstellungen verwenden:

ID3	ID2	ID1	ID0	MODBUS Unit ID oder ASCII-Busnummer
AUS	AUS	AUS	AUS	255
AUS	AUS	AUS	EIN	1
AUS	AUS	EIN	AUS	2
AUS	AUS	EIN	EIN	3
AUS	EIN	AUS	AUS	4
AUS	EIN	AUS	EIN	5
AUS	EIN	EIN	AUS	6
AUS	EIN	EIN	EIN	7
EIN	AUS	AUS	AUS	8
EIN	AUS	AUS	EIN	9
EIN	AUS	EIN	AUS	10
EIN	AUS	EIN	EIN	11
EIN	EIN	AUS	AUS	12
EIN	EIN	AUS	EIN	13
EIN	EIN	EIN	AUS	14
EIN	EIN	EIN	EIN	Interne MODBUS Unit ID von 0 bis 255 aus den FLASH Speicher wird verwendet

Wenn dieser DIP-Schalter beim Hochfahren aktiviert wird, wird die interne IP-Konfiguration auf DHCP-Einstellungen für das Ethernet geändert. Warten Sie, bis die STATE-LED sehr schnell weiß blinkt. Anschließend alle DIP-Schalter auf AUS stellen und das Modul neu starten (Aus- und wieder einschalten)!

Wenn dieser DIP-Schalter beim Hochfahren aktiviert wird, wird die interne IP-Konfiguration auf STATIC Einstellungen für das Ethernet mit der Standard-IP-Adresse des Moduls geändert. Warten Sie, bis die STATE-LED sehr schnell weiß blinkt. Anschließend alle DIP-Schalter auf AUS stellen und das Modul neu starten (Aus- und wieder einschalten)!

Dieser DIP-Schalter wird zusammen mit dem DIP-Schalter 8=CFG verwendet. Wenn dieser DIP-Schalter beim Hochfahren auf 0 (AUS) oder 1 (EIN) gestellt ist und der DIP-Schalter 8=CFG auf 1 (EIN) gesetzt wird, erfolgt eine vollständige Konfiguration und ein Werksreset des Moduls:
Die IP-Schnittstelle wird auf STATISCHE IP-Adresse mit der Standard-IP-Adresse des Moduls eingestellt, der Benutzername und das Passwort werden auf die Standardwerte geändert und alle modulspezifischen Parameter werden auf die Werkseinstellungen gesetzt.
Warten Sie, bis die STATE-LED sehr schnell weiß blinkt. Anschließend alle DIP-Schalter auf AUS stellen und das Modul neu starten (Aus- und wieder einschalten)!

=0: Für die Kommunikation wird das MODBUS/TCP-Protokoll verwendet
=1: Für die Kommunikation wird MODBUS/RTU über Ethernet oder das ASCII-Protokoll verwendet

Dieser DIP-Schalter aktiviert die komplette Grundkonfiguration des Moduls. Wird dieser DIP-Schalter beim Booten in Kombination mit dem DIP-Schalter 7=M gesetzt, führt das Modul einen kompletten System-Reset auf Standard-Werte durch.
Der STATIC IP-Modus wird verwendet
Die Standard-IP-Einstellungen des Moduls werden aktiviert
Der Benutzername und das Passwort für die Webseite sind auf Standardwerte gesetzt
Je nach DIP-Schalter 7=M ist MODBUS/TCP oder MODBUS/RTU via Ethernet oder das ASCII-Protokollmodus aktiviert
Warten Sie, bis die STATE-LED sehr schnell weiß blinkt. Anschließend alle DIP-Schalter auf AUS stellen und das Modul neu starten (Aus- und wieder einschalten)!

IP ADRESSE:

IP MASKE :

IP GATEWAY

UNIT ID

192.168.1.72

255.255.255.0

192.168.1.1

abhängig von ID DIP Switch

BENUTZERNAME:

PASSWORD:

RESI

RESI


Um eine andere IP-Adresse zu konfigurieren, öffnen Sie <http://192.168.1.72> in Ihrem Webbrowser und melden Sie sich mit obigem Benutzernamen und Passwort an!

WICHTIG: Bevor Sie mit der Installation des Produkts beginnen, lesen Sie die beigefügten **WICHTIGEN SICHERHEITSHINWEISE** aufmerksam durch und befolge Sie diese Informationen sorgfältig!


Beschreibung:
Unsere universellen analogen Ein- und Ausgänge sind darauf ausgelegt, die Verwendung analoger E/As zu vereinfachen. Jeder Kanal ist per Software auf einen der folgenden Modi konfigurierbar:

- ANALOG EINGANG: 0-10V oder 2-10V
- ANALOG EINGANG: 0-20mA oder 4-20mA Externe Versorgung
- ANALOG EINGANG: 0-20mA oder 4-20mA Schleifenversorgung
- ANALOG AUSGANG: 0-10V oder 2-10V
- ANALOG AUSGANG: 0-20mA oder 4-20mA
- DIGITAL EINGANG: Logik Eingang: ≤40V, ≤1.8mA, Schwelle 12V = oder Schleifeneingang (4mA)
- OHM MESSUNG: 0-1MΩ
- RTD SENSOR EINGANG: PT100, PT1000, NI1000-DIN43760 2-Leiter


ANALOG EINGANG
0-20mA/4-20mA
Modus: Externe Versorgung

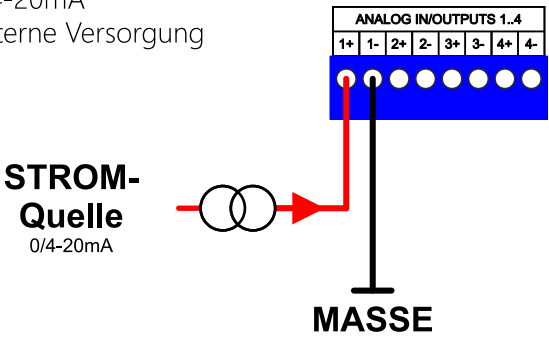

ANALOG EINGANG
0-20mA/4-20mA
Modus: Schleifenversorgung

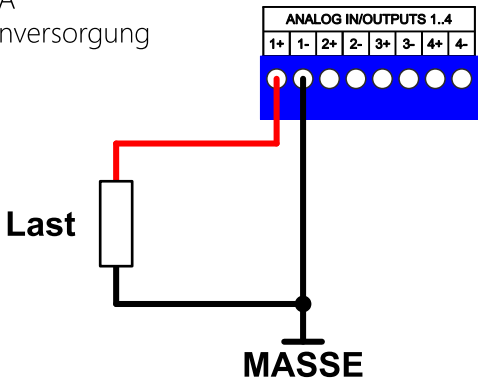


ANALOG EINGANG
0-10V/2-10V






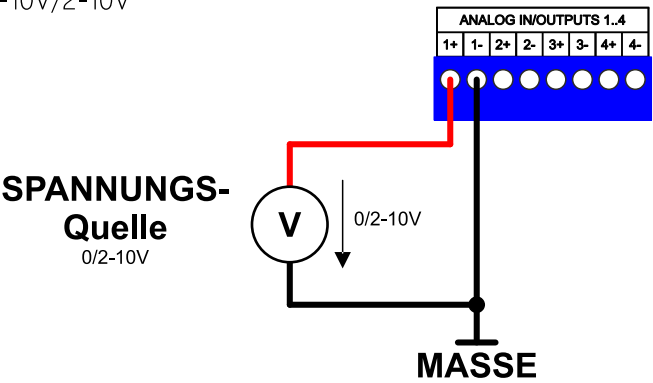


ANALOG MASSE
Alle analogen Masse sind intern miteinander verbunden!

Dies betrifft alle AIOX-Eingänge!
Diese analoge Masse ist jedoch galvanisch vom M- des Moduls getrennt!

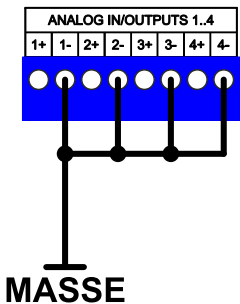


WICHTIG: Bevor Sie mit der Installation des Produkts beginnen, lesen Sie die beigefügten **WICHTIGEN SICHERHEITSHINWEISE** aufmerksam durch und befolgen Sie diese Informationen sorgfältig!

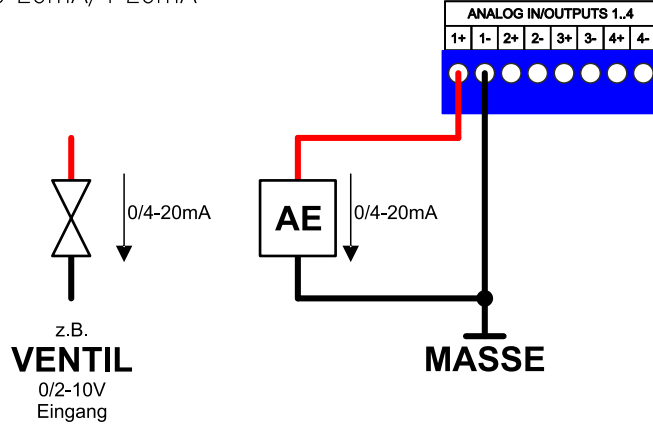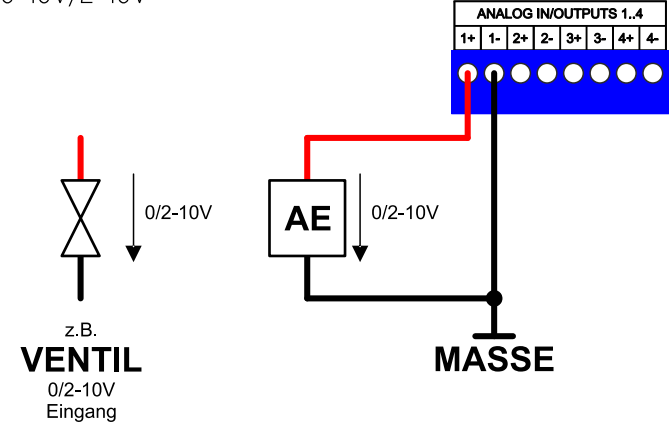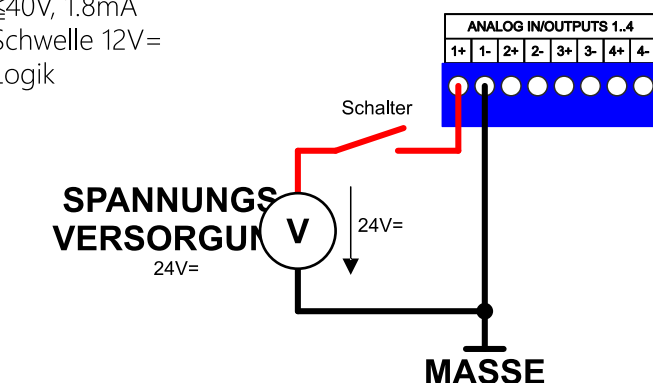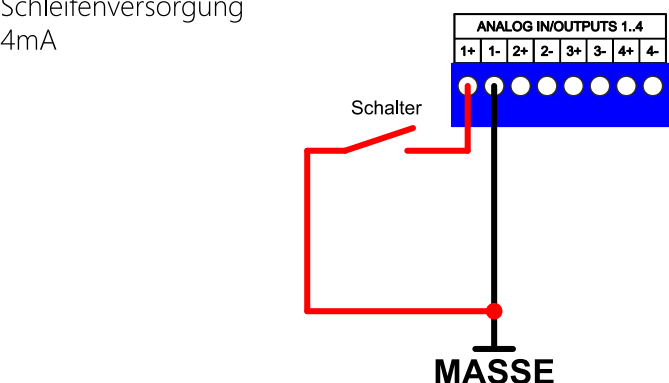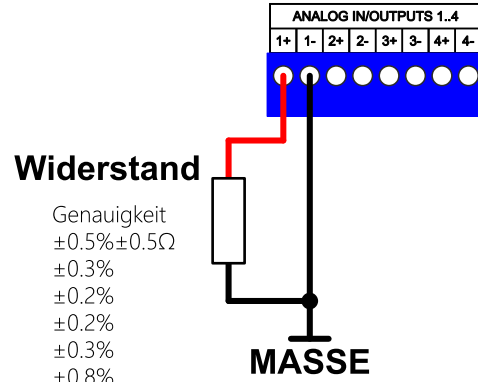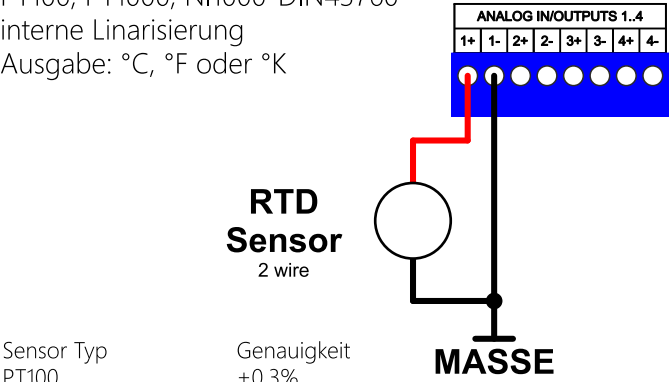ANALOG AUSGANG 0-20mA/4-20mA  z.B. VENTIL 0/2-10V Eingang	ANALOG AUSGANG 0-10V/2-10V  z.B. VENTIL 0/2-10V Eingang																										
DIGITAL EINGANG ≤40V, 1.8mA Schwelle 12V= Logik  SPANNUNGS VERSORGUNG 24V=	DIGITAL EINGANG Schleifenversorgung 4mA 																										
WIDERSTANDS EINGANG 0-1MΩ <table border="0"><tr><td>Messbereich</td><td>Genauigkeit</td></tr><tr><td>0-80Ω</td><td>±0.5%±0.5Ω</td></tr><tr><td>80-200Ω</td><td>±0.3%</td></tr><tr><td>200-1kΩ</td><td>±0.2%</td></tr><tr><td>1k-10kΩ</td><td>±0.2%</td></tr><tr><td>10k-20kΩ</td><td>±0.3%</td></tr><tr><td>20k-100kΩ</td><td>±0.8%</td></tr><tr><td>100k-200kΩ</td><td>±1.0%</td></tr><tr><td>200k-1MΩ</td><td>±8%</td></tr></table> Widerstand	Messbereich	Genauigkeit	0-80Ω	±0.5%±0.5Ω	80-200Ω	±0.3%	200-1kΩ	±0.2%	1k-10kΩ	±0.2%	10k-20kΩ	±0.3%	20k-100kΩ	±0.8%	100k-200kΩ	±1.0%	200k-1MΩ	±8%	WIDERSTANDS EINGANG PT100, PT1000, NI1000-DIN43760 interne Linarisierung Ausgabe: °C, °F oder °K <table border="0"><tr><td>Sensor Typ</td><td>Genauigkeit</td></tr><tr><td>PT100</td><td>±0.3%</td></tr><tr><td>PT1000</td><td>±0.2%</td></tr><tr><td>NI1000-DIN43760</td><td>±0.2%</td></tr></table> RTD Sensor 2 wire	Sensor Typ	Genauigkeit	PT100	±0.3%	PT1000	±0.2%	NI1000-DIN43760	±0.2%
Messbereich	Genauigkeit																										
0-80Ω	±0.5%±0.5Ω																										
80-200Ω	±0.3%																										
200-1kΩ	±0.2%																										
1k-10kΩ	±0.2%																										
10k-20kΩ	±0.3%																										
20k-100kΩ	±0.8%																										
100k-200kΩ	±1.0%																										
200k-1MΩ	±8%																										
Sensor Typ	Genauigkeit																										
PT100	±0.3%																										
PT1000	±0.2%																										
NI1000-DIN43760	±0.2%																										

IMPORTANT: Before you start with the installation of the product, read the attached **IMPORTANT SAFETY NOTES** very carefully and follow all the herein given information very accurate!

Description:
IO module with Ethernet and MODBUS/TCP server and ASCII text protocol, 64 digital inputs for DC 12-48V=, 60 digital semiconductor outputs DC ≤30V=, ≤700mA, short circuit proof, diagnostic functions, 16 universal analog inputs or outputs, 0/2-10V, 0/4-20mA, RTD sensors 0-1MΩ , PT100, PT1000, NI1000, logic input: ≤40V, ≤1.8mA, individually configurable per channel, Size (LxBxH):213x110x62mm, Weight:589g, Power supply:12-48V=, Power consumption:3.0W, Housing:12MU, Mounting:mountable onto a EN50022 DIN rail or wall mounting, Terminals:Terminal type Pitch 5 , Cable cross section: max. 2.5 mm², max. 14AWG, Screw: M3, Tightening torque: max. 0.5Nm, max. 4.43 Lb-in, Terminal type Pitch 3.5, Cable cross section: max. 1.5 mm², max. 16AWG, Screw: M2, Tightening torque: max. 0.2Nm, max. 1.77 Lb-in, Certification:CE, Protection class:IP20, TARIC number:8538 90 91

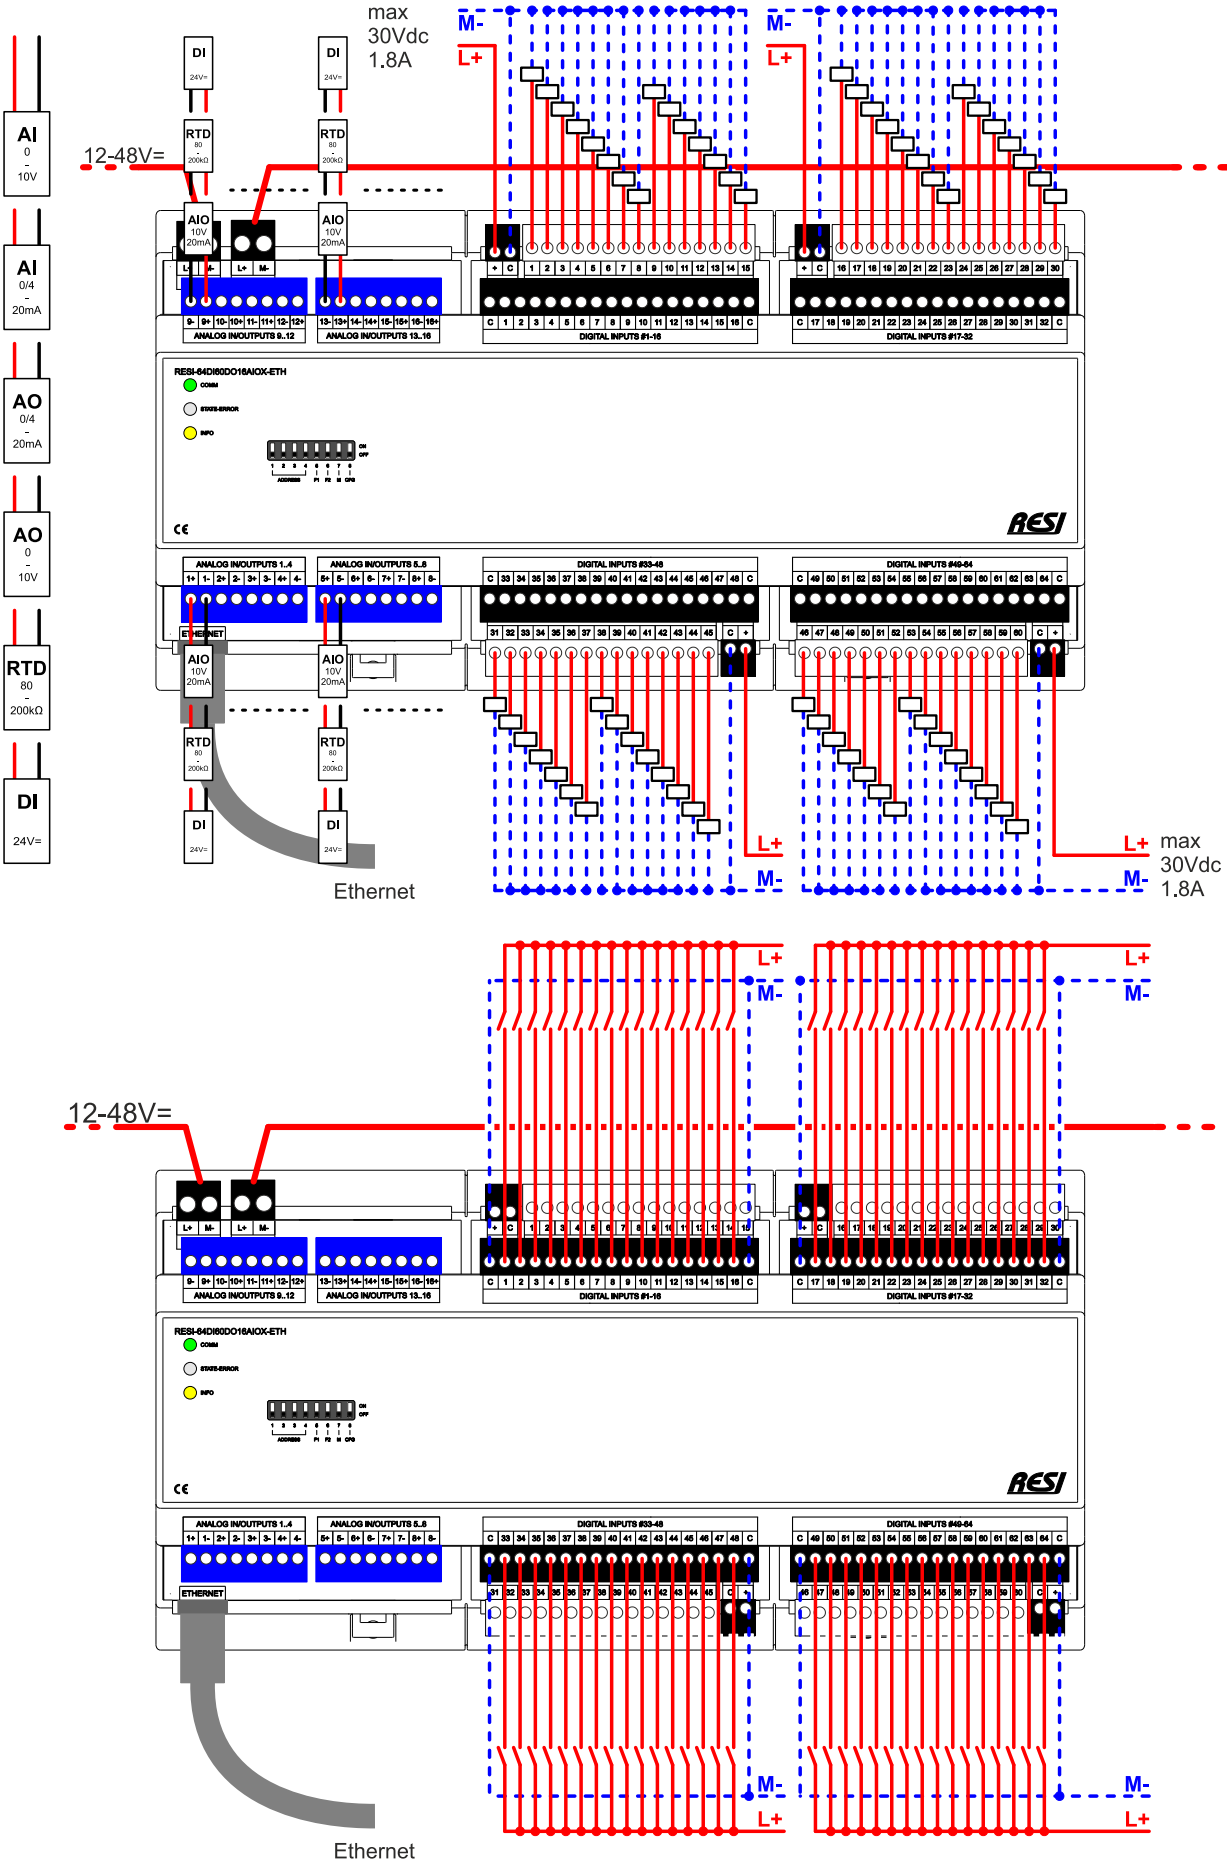

IMPORTANT: Before you start with the installation of the product, read the attached **IMPORTANT SAFETY NOTES** very carefully and follow all the herein given information very accurate!

TERMINALS: L+, M- Two 2-pin plug-in terminals Pitch 5 Power supply for daisy-chain IN and OUT of many IO modules 1 L+ 12-48 V= 2 M- Ground ETH Ethernet interface DIGITAL INPUTS Four 18-pin plug-in terminal block Pitch 3.5 64 digital inputs for signals: 12...48V=, ≤1.8mA TERMINAL 1-4 18 pin plug-in terminal 1 C Common ground M- 2 1,17,33,49 Digital input #1 3 2,18,34,50 Digital input #2 16 15,31,47,63 Digital input #15 17 16,32,48,64 Digital input #16 18 C Common ground M- DIGITAL OUTPUTS Four 2-pin plug-in terminals Pitch 3.5 Power supply DC outputs ≤30V=, ≤1.8A S1:DO1-DO15, S2:DO16-DO30, S3:DO31-DO45, S4:DO46-DO60 Four 15-pin plug-in terminals Pitch 3.5 15 DC semiconductor outputs ≤30V=, ≤700mA, short-circuit proof TERMINAL S1,S2,S3,S4 2-pin plug-in terminal 1 Sx:+ Power supply ≤30V, ≤1.8A for group 2 Sx:C Ground signal of power supply TERMINAL 1-4 15-pin plug-in terminal 1 1,16,31,46 semiconductor output DO#1 2 2,17,32,47 semiconductor output DO#2 ... 14 14,29,44,59 semiconductor output DO#14 15 15,30,45,60 semiconductor output DO#15 UNIVERSAL ANALOG IN/OUTPUTS Four 8-pin plug-in terminals Pitch 3.5 for 4 universal analog in-/outputs each Each IO individually configurable: AI Analog input 0-10V AO Analog output 0-10V AI Analog input 0/4-20mA AO Analog output 0/4-20mA RTDI RTD sensor input 0-200kOhm DI Digital input 24V TERMINAL 1-2 8-pin plug-in terminal 1 1+,5+ Positive signal for AI/AO/RTDI/DI AIOX#1 2 1-,5- Negative signal for AI/AO/RTDI/DI AIOX#1 ... 7 4+,8+ Positive signal for AI/AO/RTDI/DI AIOX#4 8 4-,8- Negative signal for AI/AO/RTDI/DI AIOX#4 TERMINAL 3-4 8-pin plug-in terminal 1 9-,13- Negative signal for AI/AO/RTDI/DI AIOX#1 2 9+,13+ Positive signal for AI/AO/RTDI/DI AIOX#1 ... 7 12-,16- Negative signal for AI/AO/RTDI/DI AIOX#4 8 12+,16+ Positive signal for AI/AO/RTDI/DI AIOX#4		LEDs: COMM Shows whether data is currently being sent or received via the Ethernet interface STATE-ERROR State LED, flashes slowly (approx. 1s) in WHITE if the module is OK. Flashes quickly in RED when the module has an internal error INFO If at least one of the digital inputs or outputs is activated (ON), this LED is ON. If none of the digital inputs or outputs are activated (OFF), this LED is OFF.																																																																																																																																											
Technical Information Operating temperature 0...+55°C Storage temperature -20...+80°C Humidity 25..90%r.H. not condensing Power supply: 12-48V= Power consumption: 3.0W Terminals Terminal type Pitch 5 Cable cross section: max. 2.5 mm², max. 14AWG Screw: M3 Tightening torque: max. 0.5Nm, max. 4.43 Lb-in Terminal type Pitch 3.5 Cable cross section: max. 1.5 mm², max. 16AWG Screw: M2 Tightening torque: max. 0.2Nm, max. 1.77 Lb-in Dimensions (LxWxH) 213x110x62mm Weight: 589g Housing: 12MU Mounting: mountable onto a EN50022 DIN rail or wall mounting CE Protection class: IP20 TARIC number: 8538 90 91		DIP SWITCH: ADDRESS This four DIP switches ID3-ID0 create the MODBUS unit number or ASCII bus address. You can use the following settings: <table><tr><th></th><th>ID3</th><th>ID2</th><th>ID1</th><th>ID0</th><th>MODBUS unit number or ASCII bus number</th></tr><tr><td>1=ID0</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>2=ID1</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>3=ID2</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>4=ID3</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td></td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>255</td></tr><tr><td></td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>1</td></tr><tr><td></td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>2</td></tr><tr><td></td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td><td>3</td></tr><tr><td></td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td><td>4</td></tr><tr><td></td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td><td>5</td></tr><tr><td></td><td>OFF</td><td>ON</td><td>ON</td><td>OFF</td><td>6</td></tr><tr><td></td><td>OFF</td><td>ON</td><td>ON</td><td>ON</td><td>7</td></tr><tr><td></td><td>ON</td><td>OFF</td><td>OFF</td><td>OFF</td><td>8</td></tr><tr><td></td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td><td>9</td></tr><tr><td></td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td><td>10</td></tr><tr><td></td><td>ON</td><td>OFF</td><td>ON</td><td>ON</td><td>11</td></tr><tr><td></td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>12</td></tr><tr><td></td><td>ON</td><td>ON</td><td>OFF</td><td>ON</td><td>13</td></tr><tr><td></td><td>ON</td><td>ON</td><td>ON</td><td>OFF</td><td>14</td></tr><tr><td></td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>Internal MODBUS unit number is used from the FLASH memory in the range of 0 to 255.</td></tr></table> 5=F1 DHCP Enabling this DIP switch at boot changes the internal IP configuration to DHCP settings for the Ethernet. Wait for the STATE LED to flash white very quickly. Then set all DIP switches to OFF and restart the module (switch off and on again)! 6=F2 STATIC If this DIP switch is activated at power up, the internal IP configuration is changed to STATIC settings for the Ethernet with the module's default IP address. Wait for the STATE LED to flash white very quickly. Then set all DIP switches to OFF and restart the module (switch off and on again)! 7=M MODE This DIP switch is used in conjunction with DIP switch 8=CFG. If this DIP switch is set to 0 (OFF) or 1 (ON) at power up and DIP switch 8=CFG is set to 1 (ON), a full configuration and factory reset of the module occurs: The IP interface is set to STATIC IP address with the module's default IP address, the username and password are changed to default values, and all module-specific parameters are set to factory defaults. Wait for the STATE LED to flash white very quickly. Then set all DIP switches to OFF and restart the module (switch off and on again)! =0: The MODBUS/TCP protocol is used for communication =1: MODBUS/RTU is used for communication via Ethernet or uses the ASCII protocol 8=CFG CONFIG This DIP switch activates the complete basic configuration of the module. When booting, this DIP switch is used in combination with the DIP switch 7=M, the module performs a full system reset to default values through. STATIC IP mode is used. The default IP settings of the module are activated The username and password for the website are set to default values Depending on the DIP switch 7=M, MODBUS/TCP or MODBUS/RTU via Ethernet or the ASCII protocol mode is activated Wait for the STATE LED to flash white very quickly. Then set all DIP switches to OFF and restart the module (switch off and on again)! DEFAULT IP SETTINGS: <table><tr><td>IP ADDRESS:</td><td>192.168.1.72</td></tr><tr><td>IP MASK :</td><td>255.255.255.0</td></tr><tr><td>IP GATEWAY</td><td>192.168.1.1</td></tr><tr><td>UNIT ID</td><td>depending on ID DIP Switch</td></tr><tr><td>USERNAME:</td><td>RESI</td></tr><tr><td>PASSWORD:</td><td>RESI</td></tr></table> HINT: To configure a different IP address open http://192.168.1.72 in your web browser and login with the above username and password!			ID3	ID2	ID1	ID0	MODBUS unit number or ASCII bus number	1=ID0						2=ID1						3=ID2						4=ID3							OFF	OFF	OFF	OFF	255		OFF	OFF	OFF	ON	1		OFF	OFF	ON	OFF	2		OFF	OFF	ON	ON	3		OFF	ON	OFF	OFF	4		OFF	ON	OFF	ON	5		OFF	ON	ON	OFF	6		OFF	ON	ON	ON	7		ON	OFF	OFF	OFF	8		ON	OFF	OFF	ON	9		ON	OFF	ON	OFF	10		ON	OFF	ON	ON	11		ON	ON	OFF	OFF	12		ON	ON	OFF	ON	13		ON	ON	ON	OFF	14		ON	ON	ON	ON	Internal MODBUS unit number is used from the FLASH memory in the range of 0 to 255.	IP ADDRESS:	192.168.1.72	IP MASK :	255.255.255.0	IP GATEWAY	192.168.1.1	UNIT ID	depending on ID DIP Switch	USERNAME:	RESI	PASSWORD:	RESI
	ID3	ID2	ID1	ID0	MODBUS unit number or ASCII bus number																																																																																																																																								
1=ID0																																																																																																																																													
2=ID1																																																																																																																																													
3=ID2																																																																																																																																													
4=ID3																																																																																																																																													
	OFF	OFF	OFF	OFF	255																																																																																																																																								
	OFF	OFF	OFF	ON	1																																																																																																																																								
	OFF	OFF	ON	OFF	2																																																																																																																																								
	OFF	OFF	ON	ON	3																																																																																																																																								
	OFF	ON	OFF	OFF	4																																																																																																																																								
	OFF	ON	OFF	ON	5																																																																																																																																								
	OFF	ON	ON	OFF	6																																																																																																																																								
	OFF	ON	ON	ON	7																																																																																																																																								
	ON	OFF	OFF	OFF	8																																																																																																																																								
	ON	OFF	OFF	ON	9																																																																																																																																								
	ON	OFF	ON	OFF	10																																																																																																																																								
	ON	OFF	ON	ON	11																																																																																																																																								
	ON	ON	OFF	OFF	12																																																																																																																																								
	ON	ON	OFF	ON	13																																																																																																																																								
	ON	ON	ON	OFF	14																																																																																																																																								
	ON	ON	ON	ON	Internal MODBUS unit number is used from the FLASH memory in the range of 0 to 255.																																																																																																																																								
IP ADDRESS:	192.168.1.72																																																																																																																																												
IP MASK :	255.255.255.0																																																																																																																																												
IP GATEWAY	192.168.1.1																																																																																																																																												
UNIT ID	depending on ID DIP Switch																																																																																																																																												
USERNAME:	RESI																																																																																																																																												
PASSWORD:	RESI																																																																																																																																												


IMPORTANT: Before you start with the installation of the product, read the attached **IMPORTANT SAFETY NOTES** very carefully and follow all the herein given information very accurate!

Description:
Our universal analog inputs and outputs are designed to ease the use of analog IOs. Every channel is configurable via software to one of the following modes:

- ANALOG INPUT: 0-10V or 2-10V
- ANALOG INPUT: 0-20mA or 4-20mA external powered mode
- ANALOG INPUT: 0-20mA or 4-20mA loop power mode
- ANALOG OUTPUT: 0-10V or 2-10V
- ANALOG OUTPUT: 0-20mA or 4-20mA
- DIGITAL INPUT: logic input: $\leq 40V$, $\leq 1.8mA$, threshold 12V = or loop powered digital input (4mA)
- OHM MEASUREMENT: 0-1M Ω
- RTD SENSOR INPUT: PT100, PT1000, NI1000-DIN43760 2 wire


ANALOG INPUT

0-20mA/4-20mA
External powered mode

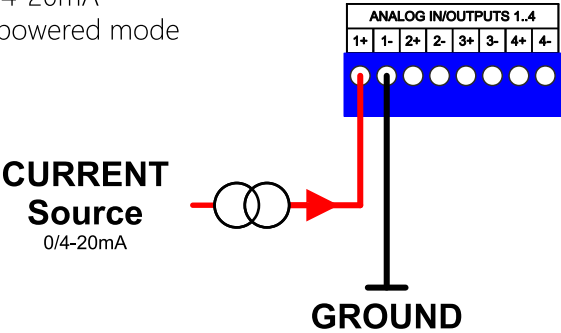


ANALOG INPUT

0-20mA/4-20mA
Loop powered mode

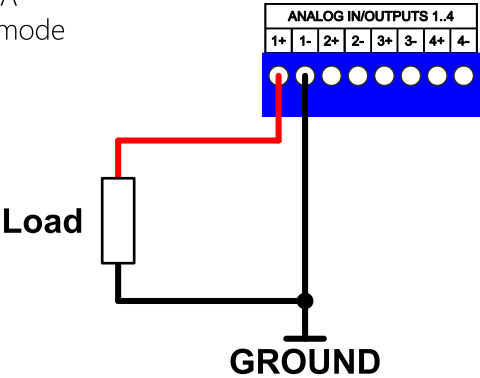

ANALOG INPUT


0-10V/2-10V

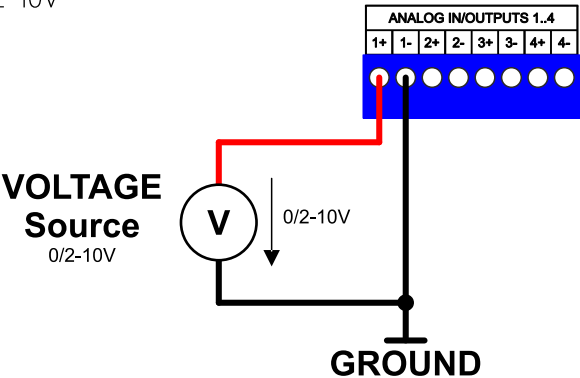

ANALOG GROUND

All analog grounds are internally tied together!


This affects to all AIOX inputs!
But this analog ground is galvanically isolated from the M- of the module!

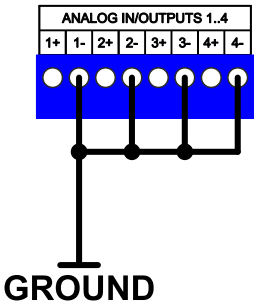

IMPORTANT: Before you start with the installation of the product, read the attached **IMPORTANT SAFETY NOTES** very carefully and follow all the herein given information very accurate!


ANALOG OUTPUT

0-20mA/4-20mA

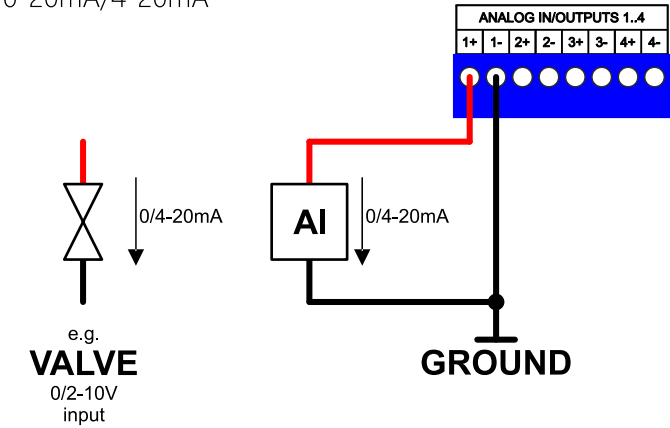


ANALOG OUTPUT

0-10V/2-10V

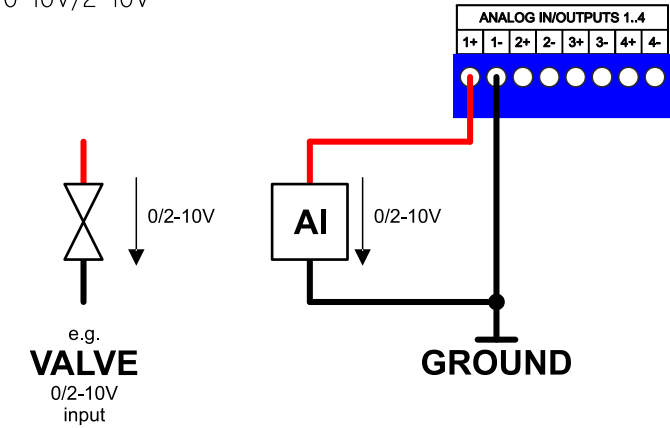


DIGITAL INPUT

≤40V, 1.8mA
Threshold 12V=
Logic

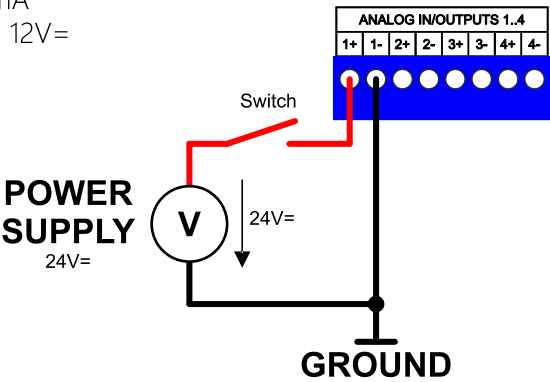

DIGITAL INPUT

Loop powered
4mA

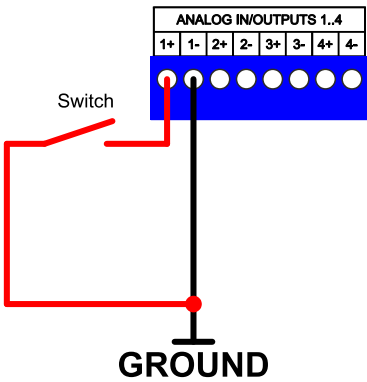


RESISTOR INPUT

0-1MΩ

Measurement Range	Accuracy
0-80Ω	±0.5%±0.5Ω
80-200Ω	±0.3%
200-1kΩ	±0.2%
1k-10kΩ	±0.2%
10k-20kΩ	±0.3%
20k-100kΩ	±0.8%
100k-200kΩ	±1.0%
200k-1MΩ	±8%

Resistor

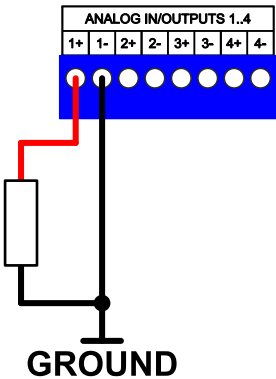


RESISTOR INPUT

PT100, PT1000, NI1000-DIN43760
internal linearisation
Output: °C, °F or °K

Sensor type	Accuracy
PT100	±0.3%
PT1000	±0.2%
NI1000-DIN43760	±0.2%

**RTD
Sensor**
2 wire

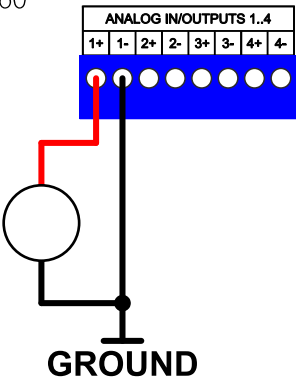

Wichtige Hinweise:

- **Vor der Installation und Inbetriebnahme ist dieser Sicherheitshinweis, die beigelegte Installationsanleitung und das dazugehörige Handbuch zu lesen und alle darin gemachten Hinweise sind zu beachten!**
- Die Installation der Geräte darf nur durch Fachpersonal durchgeführt werden!
- Der Anschluss der Geräte darf nur im spannungslosen Zustand erfolgen!
- Führen Sie bei eingeschaltetem Gerät keine elektrischen Arbeiten am Gerät aus!
- Sichern Sie das Gerät gegen Wiedereinschalten!
- Das Gerät darf nur mit der vorgeschriebenen Spannung versorgt werden!
- Schwankungen und Abweichungen der Netzspannung vom Nennwert dürfen die in den technischen Daten angegebenen Toleranzgrenzen und Vorgaben nicht überschreiten. Bei Nichteinhaltung kann es zu Funktionsbeeinträchtigungen und Funktionsstörungen kommen!
- Es sind die aktuellen EMV Richtlinien in der Verkabelung zu beachten!
- Alle Signal- und Anschlussleitungen sind so zu verlegen, daß induktive und kapazitive Störungen sowie Einstreuungen die Funktionen des Geräts nicht beeinflussen. Falsche Verkabelung kann zu erheblichen Fehlfunktionen des Geräts führen!
- Für Signalleitungen und Sensorleitungen sind geschirmte Kabel zu verwenden, um Schäden durch Spannungsinduktion zu verhindern!
- Es sind die aktuellen Sicherheitsvorschriften der ÖVE, VDE, der Länder, ihrer Überwachungsorgane, des TÜV und des örtlichen EVUs zu beachten!
- Beachten Sie die länderspezifischen Vorschriften und Normen!
- Das Gerät ist nur für den angegebenen Verwendungszweck zu benutzen!
- Für Mängel und Schäden, die durch unsachgemäße Verwendung der Geräte entstehen, werden keinerlei Gewährleistungen und Haftungen übernommen!
- Folgeschäden, welche durch Fehler an diesem Gerät entstehen, sind von der Gewährleistung und Haftung ausgenommen!
- Es gelten ausschließlich die technischen Daten, Anschlussbedingungen und Bedienungsanleitungen, welche den Geräten bei der Lieferung beigelegt sind!
- Alle auf unserer Homepage, oder in unserem Datenblatt, in unseren Handbüchern, in unseren Katalogen oder bei unseren Partnern publizierten technischen Daten müssen im Sinne des technischen Fortschritts nicht immer aktuell sein!
- Bei Veränderungen unserer Geräte durch den Anwender entfallen alle Gewährleistungsansprüche!
- Die beim Gerät spezifizierten technischen Rahmenbedingungen (zB Temperaturen, Spannungsversorgung, etc.) sind unbedingt einzuhalten!
- Der Betrieb von Geräten in der Nähe zu unseren Geräten, welche nicht den EMV-Richtlinien entsprechen, kann zur Beeinflussung der Funktionsweise unseres Gerätes bis zum Ausfall unseres Gerätes führen!
- Unsere Geräte dürfen nicht für Überwachungszwecke, welche ausschließlich dem Schutz von Personen gegen Gefährdung oder Verletzung dienen und nicht als Not-Aus-Schalter in Anlagen und Maschinen oder vergleichbare sicherheitsrelevante Aufgaben verwendet werden!
- Die Gehäuse- und Gehäusezubehörmäße können geringe Toleranzen zu den Angaben in der Installationsanleitung bzw. zu den Angaben im Handbuch aufweisen!
- Veränderungen dieser Unterlagen sind nicht gestattet!
- Reklamationen werden nur in unserer vollständigen Originalverpackung angenommen!

IMPORTANT SAFETY NOTESConfiguration software and manual available at www.resi.cc**Important hint:**

- **Before you start with the installation and the initial setup of the device, you have to read this document and the attached installation guide and the actual manual for the device very carefully. You have to follow all the herein given information very accurate!**
- Only authorized and qualified personnel are allowed to install and setup the device!
- The connection of the device must be done in de-energized state!
- Do not perform any electrical work while the device is connected to power!
- Disable and secure the system against any automatic restart or power on procedure!
- The device must be operated with the defined voltage level!
- Supply voltage jitters must not exceed the technical specifications and tolerances given in the technical manuals for the product. If you do not obey this issue, the proper performance of the device cannot be guaranteed. This can lead to fail functions of the device and in worst case to a complete breakdown of the device!
- You have to obey the current EMC regulations for wiring!
- All signal, control and supply voltage cables must be wired in a way, that no inductive or capacitive interference or any other severe electrical noise disturbance may interfere with the device. Wrong wiring can lead to a malfunction of the device!
- For signal or sensor cables you have to use shielded cables, to avoid damages through induction!
- You have to obey and to apply the current safety regulations given by the ÖVE, VDE, the countries, their control authorities, the TÜV or the local energy supply company!
- Obey country-specific laws and standards!
- The device must be used for the intended purpose of the manufacturer!
- No warranties or liabilities will be accepted for defects and damages resulting from improper or incorrect usage of the device!
- Subsequent damages, which results from faults of this device, are excluded from warranty and liability!
- Only the technical data, wiring diagrams and operation instructions, which are part to the product shipment are valid!
- The information on our homepage, in our datasheets, in our manuals, in our catalogues or published by our partners can deviate from the product documentation and is not necessarily always actual, due to constant improvement of our products for technical progress!
- In case of modification of our devices made by the user, all warranty and liability claims are lost!
- The installation has to fulfill the technical conditions and specifications (e.g. operating temperatures, power supply, ...) given in the devices documentation!
- Operating our device close to equipment, which do not comply with EMC directives, can influence the functionality of our device, leading to malfunction or in worst case to a breakdown of our device!
- Our devices must not be used for monitoring applications, which solely serve the purpose of protecting persons against hazards or injury, or as an emergency stop switch for systems or machinery, or for any other similar safety-relevant purposes!
- Dimensions of the enclosures or enclosures accessories may show slight tolerances on the specifications provided in these instructions!
- Modifications of this documentation is not allowed!
- In case of a complaint, only complete devices returned in original packing will be accepted!