


WICHTIG: Bevor Sie mit der Installation des Produkts beginnen, lesen Sie die beigefügten **WICHTIGEN SICHERHEITSHINWEISE** aufmerksam durch und befolgen Sie diese Informationen sorgfältig!

Beschreibung:
IO-Modul mit Ethernet und MODBUS/TCP-Server und ASCII-Textprotokoll zum Ansteuern von 8 Relais, je zwei Relais plus einmal M-/N-Klemme auf eigenen 3pol Stecker, gemeinsame 24V/230V Versorgung für alle 8 Relais, Kontaktmaterial: AgSnO2, max. 250Vac, max. 6A, Host Kommunikation: Via Ethernet mit MODBUS/TCP Server oder ASCII Text Socket Protokoll, Konfiguration und Test des Moduls über unsere kostenlose LIBRE OFFICE(R) basierende Konfiguratorsoftware oder über unsere kostenlose PC Software MODBUS Konfigurator, Größe (LxBxH): 213x110x62mm, Gewicht:299g, Spannungsversorgung:12-48V=, Leistungsaufnahme:1.9W, Gehäuse:12TE, Montage:Schnappbar auf EN50022 DIN Schiene oder Wandmontage, Klemmen:Klemmentyp RM5 , Kabelquerschnitt: max. 2.5 mm², max. 14AWG, Schraube: M3, Anzugsmoment: max. 0.5Nm, max. 4.43 Lb-in, Klemmentyp RM3.5, Kabelquerschnitt: max. 1.5 mm², max. 16AWG, Schraube: M2, Anzugsmoment: max. 0.2Nm, max. 1.77 Lb-in, Zertifizierung:CE, Schutzklasse:IP20, TARIC Nummer:8538 90 91

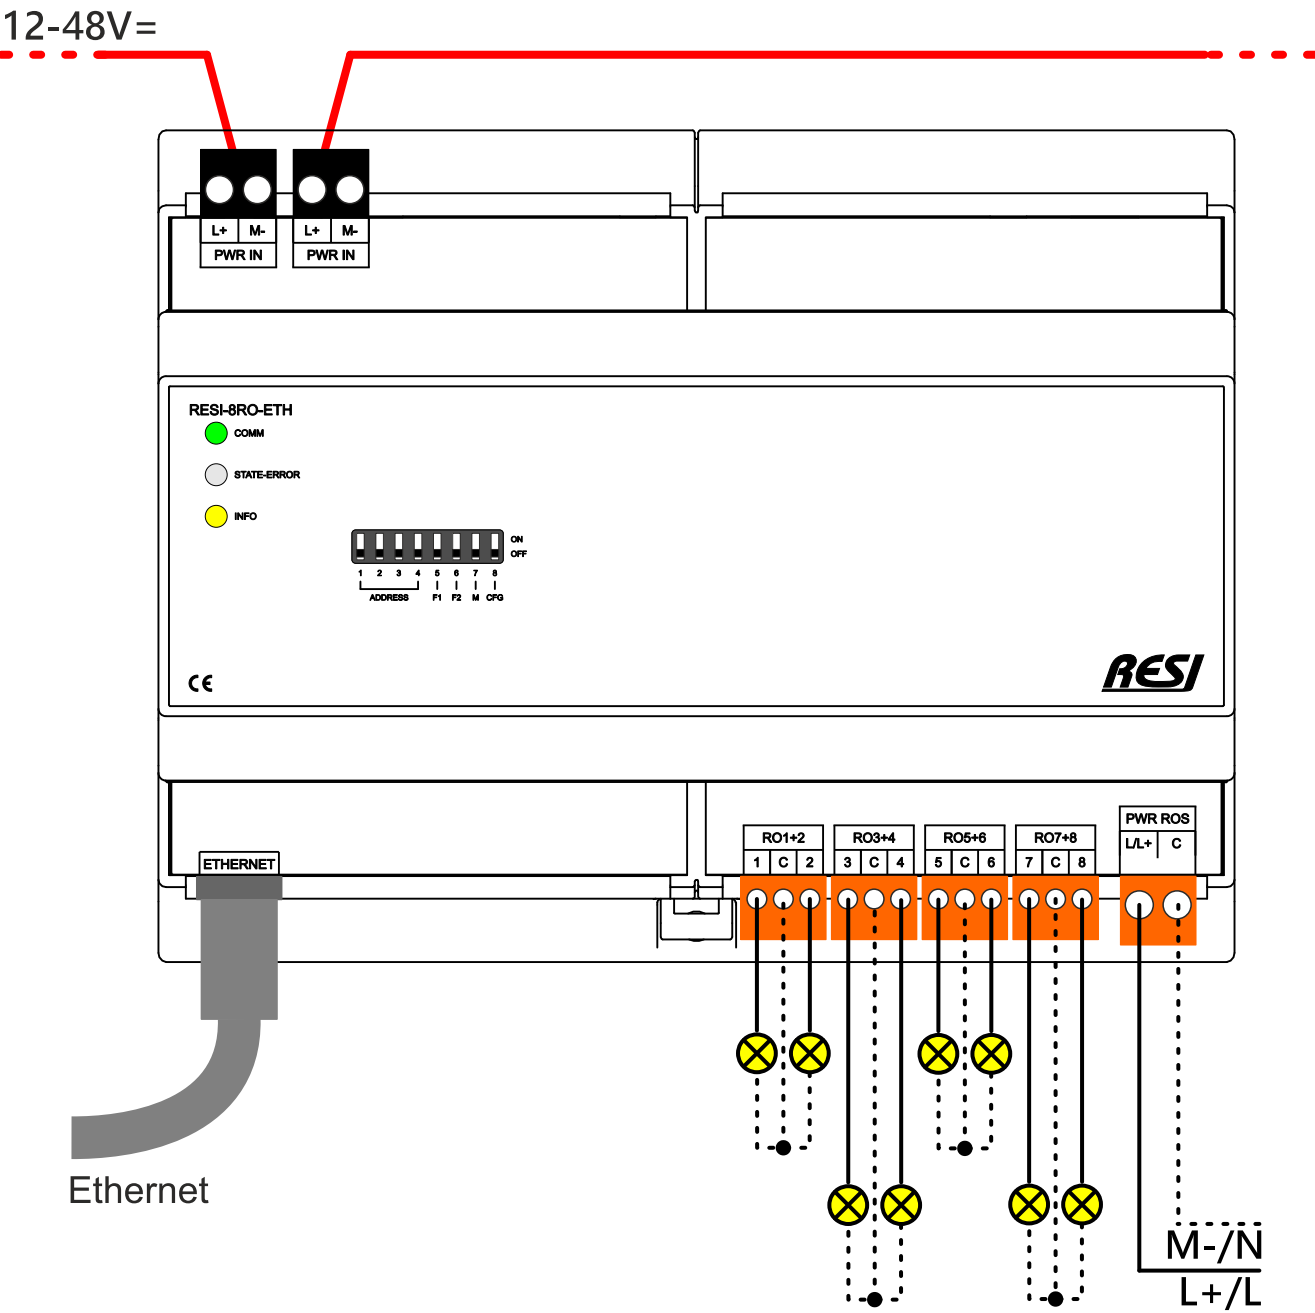


WICHTIG: Bevor Sie mit der Installation des Produkts beginnen, lesen Sie die beigefügten **WICHTIGEN SICHERHEITSHINWEISE** aufmerksam durch und befolge Sie diese Informationen sorgfältig!

KLEMMEN: L+, M- Zwei 2-polige Steckklemmen RM5 Spannungsversorgung für Daisy-chain IN und OUT von vielen IO Modulen 1L+12-48 V= 2M-Masse ETH Ethernet Schnittstelle, RJ45 RELAIS AUSGÄNGE Eine 2-polige Steckklemme RM5 Gemeinsame Versorgung 12-30Vdc oder 12-250Vac für alle Relaisausgänge Vier 3-polige Steckklemmen RM3.5 mit je 2 Form A Relais ≤30V~, ≤250V~, ≤6A, AgSnO₂ und Wurzel KLEMME 1 2-polige Steckklemme RM5 Gemeinsame Versorgung aller Relaisausgängen mit 230Vac/24Vdc 1PWR:L/L + DC/AC Stromversorgung DC 12-30V/AC 12-250V 2PWR:C DC/AC Stromversorgung DC Erde/AC Neutral KLEMME 2 3-polige Steckklemme RM3.5 1RO 1Kontakt des ersten Relais Verbunden mit PWR:L/L + 2CKontakt des zweiten Relais Gemeinsamer Anschluss M- oder N Verbunden mit PWR:C 3RO 2Kontakt des zweiten Relais Verbunden mit PWR:L/L + KLEMME 3-5 analog zu Steckklemme #2 LEDs: COMM Zeigt an, ob derzeit Daten über die Ethernet-Schnittstelle gesendet oder empfangen werden STATE-ERROR Die Status-LED blinkt langsam (ca. 1 s) in WEISS, wenn das Modul in Ordnung ist. Blinkt schnell in ROT, wenn das Modul einen internen Fehler aufweist INFO Wenn zumindest einer der digitalen Ausgänge aktiviert ist (EIN), ist diese LED EIN. Wenn keiner der digitalen Ausgänge aktiviert ist (AUS), ist diese LED AUS.		DIP SCHALTER: ADDRESS Diese vier DIP-Schalter ID3-ID0 bilden die MODBUS Unit ID oder ASCII-Busadresse. Sie können die folgenden Einstellungen verwenden: ID3ID2ID1ID0MODBUS Unit IDoder ASCII-Busnummer 1255 AUSAUSAUSA 21 AUSAUSA 32 AUSAUSA 43 AUSAUSA 54 AUSAUSA 65 AUSAUSA 76 AUSAUSA 87 AUSAUSA 98 AUSAUSA 109 AUSAUSA 1110 AUSAUSA 1211 AUSAUSA 1312 AUSAUSA 1413 AUSAUSA 1514 Interne MODBUS Unit ID von 0 bis 255 aus den FLASH Speicher wird verwendet 5=F1 DHCP Wenn dieser DIP-Schalter beim Hochfahren aktiviert wird, wird die interne IP-Konfiguration auf DHCP-Einstellungen für das Ethernet geändert. Warten Sie, bis die STATE-LED sehr schnell weiß blinkt. Anschließend alle DIP-Schalter auf AUS stellen und das Modul neu starten (Aus- und wieder einschalten)! 6=F2 STATIC Wenn dieser DIP-Schalter beim Hochfahren aktiviert wird, wird die interne IP-Konfiguration auf STATIC Einstellungen für das Ethernet mit der Standard-IP-Adresse des Moduls geändert. Warten Sie, bis die STATE-LED sehr schnell weiß blinkt. Anschließend alle DIP-Schalter auf AUS stellen und das Modul neu starten (Aus- und wieder einschalten)! 7=M MODE Dieser DIP-Schalter wird zusammen mit dem DIP-Schalter 8=CFG verwendet. Wenn dieser DIP-Schalter beim Hochfahren auf 0 (AUS) oder 1 (EIN) gestellt ist und der DIP-Schalter 8=CFG auf 1 (EIN) gesetzt wird, erfolgt eine vollständige Konfiguration und ein Werksreset des Moduls: Die IP-Schnittstelle wird auf STATISCHE IP-Adresse mit der Standard-IP-Adresse des Moduls eingestellt, der Benutzername und das Passwort werden auf die Standardwerte geändert und alle modulspezifischen Parameter werden auf die Werkseinstellungen gesetzt. Warten Sie, bis die STATE-LED sehr schnell weiß blinkt. Anschließend alle DIP-Schalter auf AUS stellen und das Modul neu starten (Aus- und wieder einschalten)! =0: Für die Kommunikation wird das MODBUS/TCP-Protokoll verwendet =1: Für die Kommunikation wird MODBUS/RTU über Ethernet oder das ASCII-Protokoll verwendet 8=CFG CONFIG Dieser DIP-Schalter aktiviert die komplette Grundkonfiguration des Moduls. Wird dieser DIP-Schalter beim Booten in Kombination mit dem DIP-Schalter 7=M gesetzt, führt das Modul einen kompletten System-Reset auf Standard-Werte durch. Der STATIC IP-Modus wird verwendet Die Standard-IP-Einstellungen des Moduls werden aktiviert Der Benutzername und das Passwort für die Webseite sind auf Standardwerte gesetzt Je nach DIP-Schalter 7=M ist MODBUS/TCP oder MODBUS/RTU via Ethernet oder das ASCII-Protokollmodus aktiviert Warten Sie, bis die STATE-LED sehr schnell weiß blinkt. Anschließend alle DIP-Schalter auf AUS stellen und das Modul neu starten (Aus- und wieder einschalten)!
Technische Information Betriebstemperatur 0..+55°C Lagerungstemperatur -20..+80°C Feuchte 25..90%r.F. nicht kondensierend Spannungsversorgung: 12-48V= Leistungsaufnahme: 1.9W Klemmen Klemmentyp RM5 Kabelquerschnitt: max. 2.5 mm², max. 14AWG Schraube: M3 Anzugsmoment: max. 0.5Nm, max. 4.43 Lb-in Klemmentyp RM3.5 Kabelquerschnitt: max. 1.5 mm², max. 16AWG Schraube: M2 Anzugsmoment: max. 0.2Nm, max. 1.77 Lb-in Abmessungen (LxBxH) 213x110x62mm Gewicht: 299g Gehäuse: 12TE Montage: Schnappbar auf EN50022 DIN Schiene oder Wandmontage Zertifizierung: CE Schutzklasse: IP20 TARIC Nummer: 8538 90 91		STANDARD IP EINSTELLUNGEN: IP ADRESSE: 192.168.1.22 IP MASKE : 255.255.255.0 IP GATEWAY 192.168.1.1 UNIT ID abhängig von ID DIP Switch BENUTZERNAME: RESI PASSWORD: RESI
		HINWEIS: Um eine andere IP-Adresse zu konfigurieren, öffnen Sie http://192.168.1.22 in Ihrem Webbrowser und melden Sie sich mit obigem Benutzernamen und Passwort an!

IMPORTANT: Before you start with the installation of the product, read the attached **IMPORTANT SAFETY NOTES** very carefully and follow all the herein given information very accurate!

Description:
IO module with Ethernet and MODBUS/TCP server and ASCII text protocol for controlling 8 relays, two relays each plus one M/N terminal on its own 3-pin plug, common 24V/230V power supply for all 8 relays, contact material: AgSnO2, max. 250Vac, max. 6A, host communication: via Ethernet with MODBUS/TCP server or ASCII text socket protocol, configuration and testing of the module via our free LIBRE OFFICE(R) based configurator software or via our free PC software MODBUS configurator, size (LxWxH): 213x110x62mm, weight: 299g, power supply: 12-48V=, power consumption: 1.9W, housing: 12TE, mounting: snaps onto EN50022 DIN rail or wall mounting, terminals: terminal type RM5, cable cross-section: max. 2.5 mm², max. 14AWG, screw: M3, tightening torque: max. 0.5Nm, max. 4.43 Lb-in, terminal type RM3.5, cable cross-section: max. 1.5 mm², max. 16AWG, screw: M2, tightening torque: max. 0.2Nm, max. 1.77 Lb-in, certification: CE, protection class: IP20, TARIC number: 8538 90 91

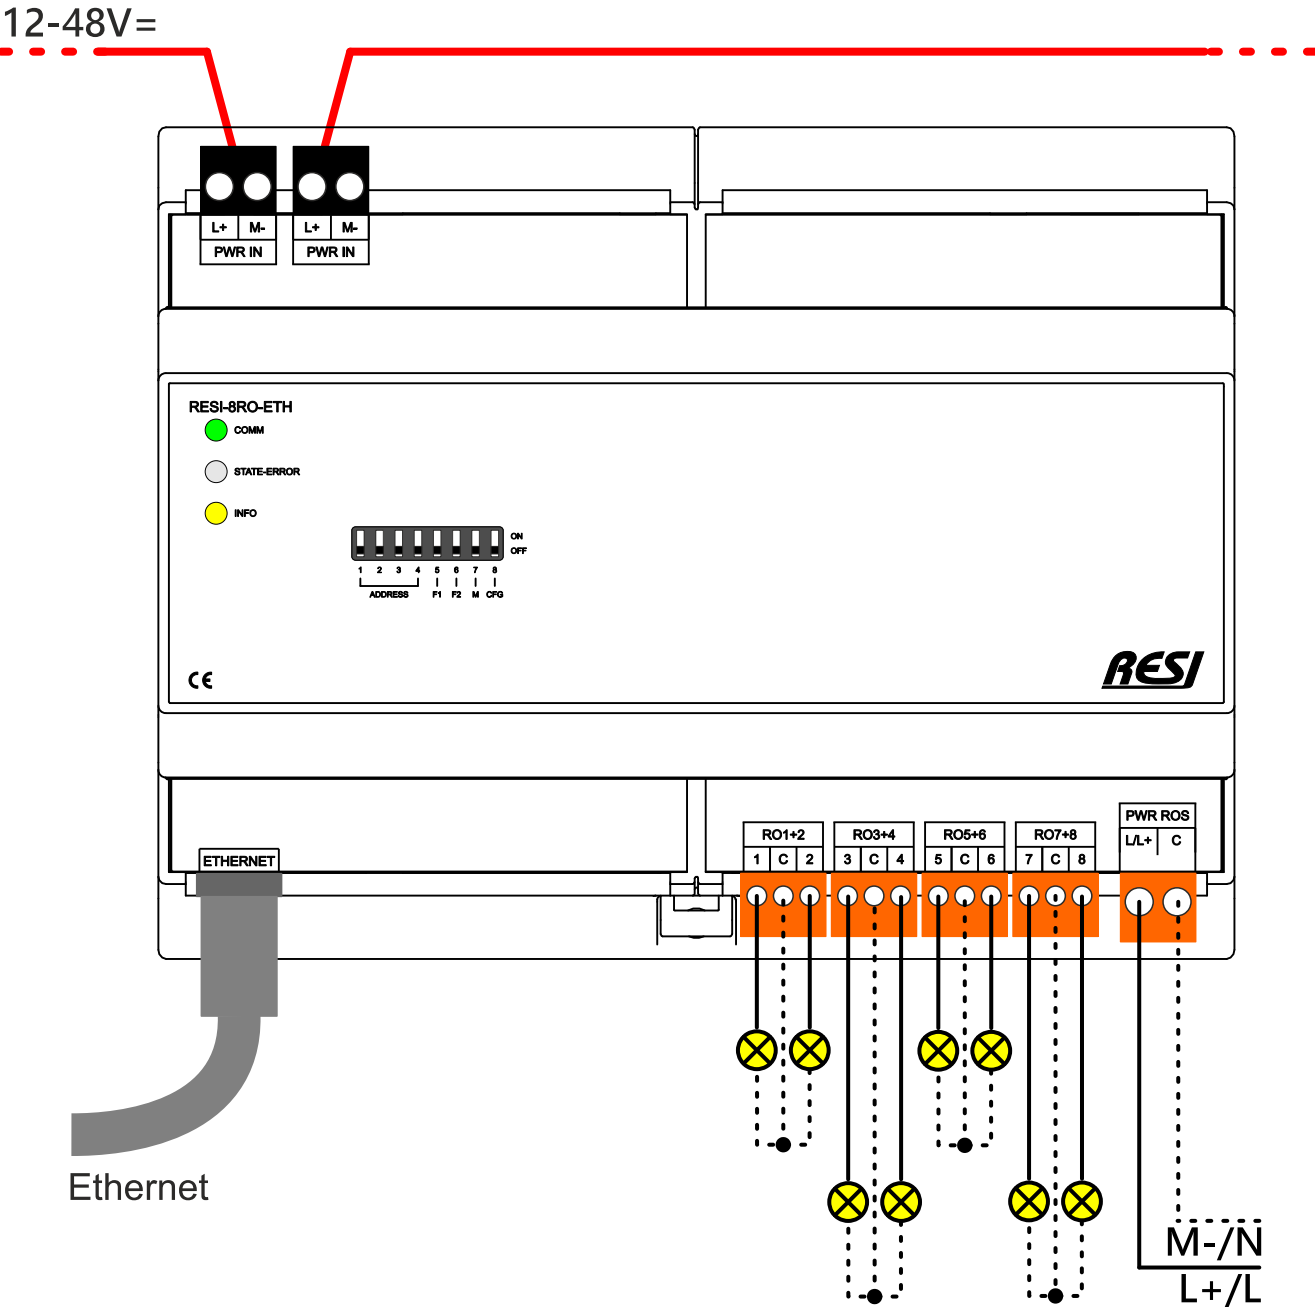

IMPORTANT: Before you start with the installation of the product, read the attached **IMPORTANT SAFETY NOTES** very carefully and follow all the herein given information very accurate!

TERMINALS: L+, M-Two 2-pin plug-in terminals Pitch 5 Power supply for daisy-chain IN and OUT of many IO modules 1 L+ 12-48 V= 2 M- Ground ETH Ethernet interface RELAY OUTPUTS A 2-pin RM5 plug-in terminal Common power supply 12-30Vdc or 12-250Vac for all relay outputs Four 3-pin plug-in terminals RM3.5 each with 2 form A relays ≤30V~, ≤250V~, ≤6A, AgSnO2 and root TERMINAL 1 2-pin plug-in terminal RM5 Common supply of all relay outputs with 230Vac/24Vdc 1 PWR:L/L+ DC/AC power supply DC 12-30V/AC 12-250V 2 PWR:C DC/AC power supply DC ground/AC neutral TERMINAL 2 3-pin plug-in terminal RM3.5 1 RO 1 contact of the first relay Connected to PWR:L/L+ 2 C Common connection M- or N Connected to PWR:C 3 RO 2 contact of the second relay Connected to PWR:L/L+ TERMINAL 3-5 analogous to plug-in terminal #2 LEDs: COMM Shows whether data is currently being sent or received via the Ethernet interface STATE-ERROR State LED, flashes slowly (approx. 1s) in WHITE if the module is OK. Flashes quickly in RED when the module has an internal error INFO If at least one of the digital outputs is activated (ON), this LED is ON. If none of the digital outputs are activated (OFF), this LED is OFF.		DIP SWITCH: ADDRESS This four DIP switches ID3-ID0 create the MODBUS unit number or ASCII bus address. You can use the following settings: <table><tr><th></th><th>ID3</th><th>ID2</th><th>ID1</th><th>ID0</th><th>MODBUS unit number or ASCII bus number</th></tr><tr><td>1=ID0</td><td></td><td></td><td></td><td></td><td>255</td></tr><tr><td>2=ID1</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>1</td></tr><tr><td>3=ID2</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>2</td></tr><tr><td>4=ID3</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td><td>3</td></tr><tr><td></td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td><td>4</td></tr><tr><td></td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td><td>5</td></tr><tr><td></td><td>OFF</td><td>ON</td><td>ON</td><td>OFF</td><td>6</td></tr><tr><td></td><td>OFF</td><td>ON</td><td>ON</td><td>ON</td><td>7</td></tr><tr><td></td><td>ON</td><td>OFF</td><td>OFF</td><td>OFF</td><td>8</td></tr><tr><td></td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td><td>9</td></tr><tr><td></td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td><td>10</td></tr><tr><td></td><td>ON</td><td>OFF</td><td>ON</td><td>ON</td><td>11</td></tr><tr><td></td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>12</td></tr><tr><td></td><td>ON</td><td>ON</td><td>OFF</td><td>ON</td><td>13</td></tr><tr><td></td><td>ON</td><td>ON</td><td>ON</td><td>OFF</td><td>14</td></tr><tr><td></td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>Internal MODBUS unit number is used from the FLASH memory in the range of 0 to 255.</td></tr></table> 5=F1 DHCP Enabling this DIP switch at boot changes the internal IP configuration to DHCP settings for the Ethernet. Wait for the STATE LED to flash white very quickly. Then set all DIP switches to OFF and restart the module (switch off and on again)! 6=F2 STATIC If this DIP switch is activated at power up, the internal IP configuration is changed to STATIC settings for the Ethernet with the module's default IP address. Wait for the STATE LED to flash white very quickly. Then set all DIP switches to OFF and restart the module (switch off and on again)! 7=M MODE This DIP switch is used in conjunction with DIP switch 8=CFG. If this DIP switch is set to 0 (OFF) or 1 (ON) at power up and DIP switch 8=CFG is set to 1 (ON), a full configuration and factory reset of the module occurs: The IP interface is set to STATIC IP address with the module's default IP address, the username and password are changed to default values, and all module-specific parameters are set to factory defaults. Wait for the STATE LED to flash white very quickly. Then set all DIP switches to OFF and restart the module (switch off and on again)! =0: The MODBUS/TCP protocol is used for communication =1: MODBUS/RTU is used for communication via Ethernet or uses the ASCII protocol 8=CFG CONFIG This DIP switch activates the complete basic configuration of the module. When booting, this DIP switch is used in combination with the DIP switch 7=M, the module performs a full system reset to default values through. STATIC IP mode is used. The default IP settings of the module are activated The username and password for the website are set to default values Depending on the DIP switch 7=M, MODBUS/TCP or MODBUS/RTU via Ethernet or the ASCII protocol mode is activated Wait for the STATE LED to flash white very quickly. Then set all DIP switches to OFF and restart the module (switch off and on again)!			ID3	ID2	ID1	ID0	MODBUS unit number or ASCII bus number	1=ID0					255	2=ID1	OFF	OFF	OFF	OFF	1	3=ID2	OFF	OFF	ON	OFF	2	4=ID3	OFF	OFF	ON	ON	3		OFF	ON	OFF	OFF	4		OFF	ON	OFF	ON	5		OFF	ON	ON	OFF	6		OFF	ON	ON	ON	7		ON	OFF	OFF	OFF	8		ON	OFF	OFF	ON	9		ON	OFF	ON	OFF	10		ON	OFF	ON	ON	11		ON	ON	OFF	OFF	12		ON	ON	OFF	ON	13		ON	ON	ON	OFF	14		ON	ON	ON	ON	Internal MODBUS unit number is used from the FLASH memory in the range of 0 to 255.
	ID3	ID2	ID1	ID0	MODBUS unit number or ASCII bus number																																																																																																				
1=ID0					255																																																																																																				
2=ID1	OFF	OFF	OFF	OFF	1																																																																																																				
3=ID2	OFF	OFF	ON	OFF	2																																																																																																				
4=ID3	OFF	OFF	ON	ON	3																																																																																																				
	OFF	ON	OFF	OFF	4																																																																																																				
	OFF	ON	OFF	ON	5																																																																																																				
	OFF	ON	ON	OFF	6																																																																																																				
	OFF	ON	ON	ON	7																																																																																																				
	ON	OFF	OFF	OFF	8																																																																																																				
	ON	OFF	OFF	ON	9																																																																																																				
	ON	OFF	ON	OFF	10																																																																																																				
	ON	OFF	ON	ON	11																																																																																																				
	ON	ON	OFF	OFF	12																																																																																																				
	ON	ON	OFF	ON	13																																																																																																				
	ON	ON	ON	OFF	14																																																																																																				
	ON	ON	ON	ON	Internal MODBUS unit number is used from the FLASH memory in the range of 0 to 255.																																																																																																				
Technical Information Operating temperature0..+55°C Storage temperature-20..+80°C Humidity25..90%r.H. not condensing Power supply:12-48V= Power consumption:1.9W TerminalsTerminal type Pitch 5 Cable cross section: max. 2.5 mm², max. 14AWG Screw: M3 Tightening torque: max. 0.5Nm, max. 4.43 Lb-in Terminal type Pitch 3.5 Cable cross section: max. 1.5 mm², max. 16AWG Screw: M2 Tightening torque: max. 0.2Nm, max. 1.77 Lb-in Dimensions (LxWxH)213x110x62mm Weight:299g Housing:12MU Mounting:mountable onto a EN50022 DIN rail or wall mounting Certification:CE Protection class:IP20 TARIC number:8538 90 91		DEFAULT IP SETTINGS:<table><tr><td>IP ADDRESS:</td><td>192.168.1.22</td></tr><tr><td>IP MASK :</td><td>255.255.255.0</td></tr><tr><td>IP GATEWAY</td><td>192.168.1.1</td></tr><tr><td>UNIT ID</td><td>depending on ID DIP Switch</td></tr><tr><td>USERNAME:</td><td>RESI</td></tr><tr><td>PASSWORD:</td><td>RESI</td></tr></table> HINT:To configure a different IP address open http://192.168.1.22 in your web browser and login with the above username and password!		IP ADDRESS:	192.168.1.22	IP MASK :	255.255.255.0	IP GATEWAY	192.168.1.1	UNIT ID	depending on ID DIP Switch	USERNAME:	RESI	PASSWORD:	RESI																																																																																										
IP ADDRESS:	192.168.1.22																																																																																																								
IP MASK :	255.255.255.0																																																																																																								
IP GATEWAY	192.168.1.1																																																																																																								
UNIT ID	depending on ID DIP Switch																																																																																																								
USERNAME:	RESI																																																																																																								
PASSWORD:	RESI																																																																																																								

Wichtige Hinweise:

- **Vor der Installation und Inbetriebnahme ist dieser Sicherheitshinweis, die beigelegte Installationsanleitung und das dazugehörige Handbuch zu lesen und alle darin gemachten Hinweise sind zu beachten!**
- Die Installation der Geräte darf nur durch Fachpersonal durchgeführt werden!
- Der Anschluss der Geräte darf nur im spannungslosen Zustand erfolgen!
- Führen Sie bei eingeschaltetem Gerät keine elektrischen Arbeiten am Gerät aus!
- Sichern Sie das Gerät gegen Wiedereinschalten!
- Das Gerät darf nur mit der vorgeschriebenen Spannung versorgt werden!
- Schwankungen und Abweichungen der Netzspannung vom Nennwert dürfen die in den technischen Daten angegebenen Toleranzgrenzen und Vorgaben nicht überschreiten. Bei Nichteinhaltung kann es zu Funktionsbeeinträchtigungen und Funktionsstörungen kommen!
- Es sind die aktuellen EMV Richtlinien in der Verkabelung zu beachten!
- Alle Signal- und Anschlussleitungen sind so zu verlegen, daß induktive und kapazitive Störungen sowie Einstreuungen die Funktionen des Geräts nicht beeinflussen. Falsche Verkabelung kann zu erheblichen Fehlfunktionen des Geräts führen!
- Für Signalleitungen und Sensorleitungen sind geschirmte Kabel zu verwenden, um Schäden durch Spannungsinduktion zu verhindern!
- Es sind die aktuellen Sicherheitsvorschriften der ÖVE, VDE, der Länder, ihrer Überwachungsorgane, des TÜV und des örtlichen EVUs zu beachten!
- Beachten Sie die länderspezifischen Vorschriften und Normen!
- Das Gerät ist nur für den angegebenen Verwendungszweck zu benutzen!
- Für Mängel und Schäden, die durch unsachgemäße Verwendung der Geräte entstehen, werden keinerlei Gewährleistungen und Haftungen übernommen!
- Folgeschäden, welche durch Fehler an diesem Gerät entstehen, sind von der Gewährleistung und Haftung ausgenommen!
- Es gelten ausschließlich die technischen Daten, Anschlussbedingungen und Bedienungsanleitungen, welche den Geräten bei der Lieferung beigelegt sind!
- Alle auf unserer Homepage, oder in unserem Datenblatt, in unseren Handbüchern, in unseren Katalogen oder bei unseren Partnern publizierten technischen Daten müssen im Sinne des technischen Fortschritts nicht immer aktuell sein!
- Bei Veränderungen unserer Geräte durch den Anwender entfallen alle Gewährleistungsansprüche!
- Die beim Gerät spezifizierten technischen Rahmenbedingungen (zB Temperaturen, Spannungsversorgung, etc.) sind unbedingt einzuhalten!
- Der Betrieb von Geräten in der Nähe zu unseren Geräten, welche nicht den EMV-Richtlinien entsprechen, kann zur Beeinflussung der Funktionsweise unseres Gerätes bis zum Ausfall unseres Gerätes führen!
- Unsere Geräte dürfen nicht für Überwachungszwecke, welche ausschließlich dem Schutz von Personen gegen Gefährdung oder Verletzung dienen und nicht als Not-Aus-Schalter in Anlagen und Maschinen oder vergleichbare sicherheitsrelevante Aufgaben verwendet werden!
- Die Gehäuse- und Gehäusezubehörmäße können geringe Toleranzen zu den Angaben in der Installationsanleitung bzw. zu den Angaben im Handbuch aufweisen!
- Veränderungen dieser Unterlagen sind nicht gestattet!
- Reklamationen werden nur in unserer vollständigen Originalverpackung angenommen!

IMPORTANT SAFETY NOTES

Configuration software and manual available at www.resi.cc

Important hint:

- **Before you start with the installation and the initial setup of the device, you have to read this document and the attached installation guide and the actual manual for the device very carefully. You have to follow all the herein given information very accurate!**
- Only authorized and qualified personnel are allowed to install and setup the device!
- The connection of the device must be done in de-energized state!
- Do not perform any electrical work while the device is connected to power!
- Disable and secure the system against any automatic restart or power on procedure!
- The device must be operated with the defined voltage level!
- Supply voltage jitters must not exceed the technical specifications and tolerances given in the technical manuals for the product. If you do not obey this issue, the proper performance of the device cannot be guaranteed. This can lead to fail functions of the device and in worst case to a complete breakdown of the device!
- You have to obey the current EMC regulations for wiring!
- All signal, control and supply voltage cables must be wired in a way, that no inductive or capacitive interference or any other severe electrical noise disturbance may interfere with the device. Wrong wiring can lead to a malfunction of the device!
- For signal or sensor cables you have to use shielded cables, to avoid damages through induction!
- You have to obey and to apply the current safety regulations given by the ÖVE, VDE, the countries, their control authorities, the TÜV or the local energy supply company!
- Obey country-specific laws and standards!
- The device must be used for the intended purpose of the manufacturer!
- No warranties or liabilities will be accepted for defects and damages resulting from improper or incorrect usage of the device!
- Subsequent damages, which results from faults of this device, are excluded from warranty and liability!
- Only the technical data, wiring diagrams and operation instructions, which are part to the product shipment are valid!
- The information on our homepage, in our datasheets, in our manuals, in our catalogues or published by our partners can deviate from the product documentation and is not necessarily always actual, due to constant improvement of our products for technical progress!
- In case of modification of our devices made by the user, all warranty and liability claims are lost!
- The installation has to fulfill the technical conditions and specifications (e.g. operating temperatures, power supply, ...) given in the devices documentation!
- Operating our device close to equipment, which do not comply with EMC directives, can influence the functionality of our device, leading to malfunction or in worst case to a breakdown of our device!
- Our devices must not be used for monitoring applications, which solely serve the purpose of protecting persons against hazards or injury, or as an emergency stop switch for systems or machinery, or for any other similar safety-relevant purposes!
- Dimensions of the enclosures or enclosures accessories may show slight tolerances on the specifications provided in these instructions!
- Modifications of this documentation is not allowed!
- In case of a complaint, only complete devices returned in original packing will be accepted!